



# NVH300 ANGLER

Handheld Scanners

# Disclaimer

© 2023 Newland Europe BV. All rights reserved.

Please read the manual carefully before using the product and operate it according to the manual. It is advised that you keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device; doing so will void the product warranty provided by Newland Europe BV.

All pictures in this manual are for reference only, and the actual product may differ.

Regarding product modification and update, Newland Europe BV reserves the right to make changes to any software or hardware to improve reliability, function, or design at any time without notice. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Newland Europe BV or a third party. The user, corporation or individual shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer, or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed, or used in any form without Newland Europe BV's written permission.

**Risk Warning Regarding Unauthorized System Updates:**

You should use the Newland-provided tool to update this product's system. Modifying system files by installing a third-party ROM system or using any cracking method may result in product malfunction or data loss and void your warranty.

Newland Europe BV reserves the right to make a final interpretation of the statement above.

**Newland Europe BV**

Rolweg 25, 4104 AV, Culemborg,  
The Netherlands  
[www.newland-id.com](http://www.newland-id.com)

Newland Europe BV is a subsidiary of Newland Digital Technology Co., Ltd. Our general conditions of Purchase, Sale and Delivery are filed with the Record Office of the Chamber of Commerce of Utrecht, The Netherlands.

K.v.K. H.R. Utrecht / Chamber of  
Commerce Utrecht:  
Reg. nr. 17109876

## Revision History

| Version       | Description  | Date                   |
|---------------|--|------------------------|
| <b>V1.0.0</b> | <b>Initial release.</b><br><b>This Manual is based on the firmware NVH300_V1.00.003.</b> | <b>June 19th, 2020</b> |
| <b>V2.0.0</b> | <b>Updated product image: dark gray + bluish green.</b>                                  | <b>June 1st, 2022</b>  |

# Table of Contents

|  |           |
|--|-----------|
| Revision History .....   | - 3 -     |
| Table of Contents .....  | - 4 -     |
| Preface .....  | 1         |
| <b>Introduction</b> .....                                      | <b>1</b>  |
| <b>Chapter Description</b> .....                               | <b>1</b>  |
| <b>Explanation of Icons</b> .....                              | <b>3</b>  |
| Chapter 1 Getting Started .....                                | 4         |
| <b>Introduction</b> .....                                      | <b>4</b>  |
| <b>Features of the NVH300</b> .....                            | <b>4</b>  |
| <b>Accessories</b> .....                                       | <b>5</b>  |
| <b>Unpacking</b> .....   | <b>5</b>  |
| <b>NVH300 Scanner</b> .....                                    | <b>6</b>  |
| <b>Dimensions of the Scanner (unit: mm)</b> .....              | <b>7</b>  |
| <b>Front View</b> .....  | <b>8</b>  |
| <b>Data Port</b> .....   | <b>9</b>  |
| <b>Connecting the NVH300 to a Host</b> .....                   | <b>10</b> |
| <b>Using USB Cable</b> .....                                   | <b>10</b> |
| <b>Using RS-232 Cable</b> .....                                | <b>11</b> |
| <b>Connect the NVH300-DP Communication Data Cable</b> .....    | <b>12</b> |
| <b>Remove the NVH300-DP Communication Data Cable</b> .....     | <b>14</b> |
| <b>Power On, Power Off, Reboot</b> .....                       | <b>16</b> |
| <b>Maintenance</b> .....                                       | <b>17</b> |
| <b>Scanning Instructions</b> .....                             | <b>17</b> |
| Chapter 2 NSet .....   | 19        |
| <b>Introduction</b> .....                                      | <b>19</b> |
| <b>Main Features</b> .....                                     | <b>19</b> |
| Chapter 3 System Settings .....                                | 21        |
| <b>Introduction</b> .....                                      | <b>21</b> |
| <b>Barcode Programming</b> .....                               | <b>21</b> |
| <b>Command Programming</b> .....                               | <b>21</b> |
| <b>NSet Programming</b> .....                                  | <b>21</b> |
| <b>Programming Barcode/ Programming Command/Function</b> ..... | <b>22</b> |
| <b>Use of Programming Command</b> .....                        | <b>23</b> |

|   |           |
|---|-----------|
| <b>Command Syntax</b> .....                           | <b>23</b> |
| <b>Query Commands</b> .....                           | <b>23</b> |
| <b>Responses</b> .....                                | <b>25</b> |
| <b>Examples</b> .....                                 | <b>25</b> |
| <b>Use of Programming Barcode</b> .....               | <b>26</b> |
| <b>Illumination</b> .....                             | <b>27</b> |
| <b>Illumination Color</b> .....                       | <b>27</b> |
| <b>Illumination Rotation Interval</b> .....           | <b>28</b> |
| <b>Aiming</b> .....                                   | <b>28</b> |
| <b>Good Read LED</b> .....                            | <b>30</b> |
| <b>Good Read LED Duration</b> .....                   | <b>31</b> |
| <b>Power On Beep</b> .....                            | <b>33</b> |
| <b>Good Read Beep</b> .....                           | <b>33</b> |
| <b>Good Read Beep Volume</b> .....                    | <b>35</b> |
| <b>Good Read Beep Duration</b> .....                  | <b>36</b> |
| <b>Good Read Beep Frequency</b> .....                 | <b>37</b> |
| <b>Number of Good Read Beeps</b> .....                | <b>38</b> |
| <b>Good Read Beep Interval Time</b> .....             | <b>39</b> |
| <b>Good Read Vibration</b> .....                      | <b>39</b> |
| <b>Good Read Vibration Duration</b> .....             | <b>40</b> |
| <b>Scan Mode</b> .....                                | <b>40</b> |
| <b>One Reading Timeout</b> .....                      | <b>43</b> |
| <b>Reading Interval</b> .....                         | <b>43</b> |
| <b>Image Stabilization Timeout (Sense Mode)</b> ..... | <b>44</b> |
| <b>Good Read Delay</b> .....                          | <b>44</b> |
| <b>Image Decoding Timeout</b> .....                   | <b>46</b> |
| <b>Scanning Preference</b> .....                      | <b>47</b> |
| <b>Sensitivity</b> .....                              | <b>48</b> |
| <b>Read Barcode On/Off</b> .....                      | <b>49</b> |
| <b>Decode Area</b> .....                              | <b>49</b> |
| <b>Image Flipping</b> .....                           | <b>54</b> |
| <b>Image Resize</b> .....                             | <b>55</b> |
| <b>Transmit Not Good Read Message</b> .....           | <b>56</b> |
| <b>Edit NGR Message</b> .....                         | <b>56</b> |
| <b>Image Filter</b> .....                             | <b>57</b> |
| <b>Default Settings</b> .....                         | <b>57</b> |
| <b>Factory Defaults</b> .....                         | <b>57</b> |
| <b>Custom Defaults</b> .....                          | <b>58</b> |

|   |           |
|---|-----------|
| <b>Query Scanner Information .....</b>                    | <b>59</b> |
| <b>Query Product Name.....</b>                            | <b>59</b> |
| <b>Query Firmware Version.....</b>                        | <b>59</b> |
| <b>Query Decoder Version .....</b>                        | <b>60</b> |
| <b>Query Hardware Version .....</b>                       | <b>60</b> |
| <b>Query Serial Number .....</b>                          | <b>60</b> |
| <b>Query Manufacturing Date .....</b>                     | <b>60</b> |
| <b>Chapter 4 RS-232 Interface .....</b>                   | <b>62</b> |
| <b>Introduction .....</b>                                 | <b>62</b> |
| <b>Baud Rate.....</b>                                     | <b>63</b> |
| <b>Parity Check.....</b>                                  | <b>64</b> |
| <b>Data Bit.....</b>                                      | <b>66</b> |
| <b>Stop Bit.....</b>                                      | <b>66</b> |
| <b>Hardware Auto Flow Control .....</b>                   | <b>67</b> |
| <b>Chapter 5 USB Interface.....</b>                       | <b>68</b> |
| <b>Introduction .....</b>                                 | <b>68</b> |
| <b>USB HID Keyboard .....</b>                             | <b>69</b> |
| <b>USB Country Keyboard Types .....</b>                   | <b>70</b> |
| <b>Beep on Unknown Character .....</b>                    | <b>74</b> |
| <b>Emulate ALT+Keypad .....</b>                           | <b>75</b> |
| <b>Code Page.....</b>                                     | <b>77</b> |
| <b>Unicode Encoding.....</b>                              | <b>80</b> |
| <b>Function Key Mapping.....</b>                          | <b>81</b> |
| <b>ASCII Function Key Mapping Table .....</b>             | <b>82</b> |
| <b>ASCII Function Key Mapping Table (Continued) .....</b> | <b>83</b> |
| <b>Inter-Keystroke Delay .....</b>                        | <b>84</b> |
| <b>Caps Lock .....</b>                                    | <b>84</b> |
| <b>Convert Case .....</b>                                 | <b>85</b> |
| <b>Emulate Numeric Keypad.....</b>                        | <b>85</b> |
| <b>Polling Rate .....</b>                                 | <b>89</b> |
| <b>USB CDC .....</b>                                      | <b>91</b> |
| <b>USB HID-POS .....</b>                                  | <b>91</b> |
| <b>Introduction .....</b>                                 | <b>91</b> |
| <b>Access the Scanner with Your Program.....</b>          | <b>92</b> |
| <b>Acquire Scanned Data .....</b>                         | <b>92</b> |
| <b>Send Command to the Scanner .....</b>                  | <b>92</b> |
| <b>VID/PID.....</b>                                       | <b>93</b> |

|   |            |
|---|------------|
| Chapter 6 Symbolologies .....                                   | 94         |
| <b>Introduction .....</b>                                       | <b>94</b>  |
| <b>Global Settings .....</b>                                    | <b>94</b>  |
| <b>Enable/Disable All Symbolologies.....</b>                    | <b>94</b>  |
| <b>Enable/Disable 1D Symbolologies.....</b>                     | <b>95</b>  |
| <b>Enable/Disable 2D Symbolologies .....</b>                    | <b>95</b>  |
| <b>Image Brightness Adaptation .....</b>                        | <b>97</b>  |
| <b>1D Decoding Complexity.....</b>                              | <b>97</b>  |
| <b>1D Inverse .....</b>   | <b>98</b>  |
| <b>Code 128.....</b>  | <b>99</b>  |
| <b>Restore Factory Defaults .....</b>                           | <b>99</b>  |
| <b>Enable/Disable Code 128 .....</b>                            | <b>99</b>  |
| <b>Set Length Range for Code 128 .....</b>                      | <b>100</b> |
| <b>EAN-8 .....</b>  | <b>101</b> |
| <b>Restore Factory Defaults .....</b>                           | <b>101</b> |
| <b>Enable/Disable EAN-8.....</b>                                | <b>101</b> |
| <b>Transmit Check Character.....</b>                            | <b>102</b> |
| <b>2-Digit Add-On Code .....</b>                                | <b>102</b> |
| <b>5-Digit Add-On Code .....</b>                                | <b>104</b> |
| <b>Add-On Code Required .....</b>                               | <b>104</b> |
| <b>Add-On Code Separator .....</b>                              | <b>105</b> |
| <b>Convert EAN-8 to EAN-13.....</b>                             | <b>105</b> |
| <b>EAN-13.....</b>  | <b>107</b> |
| <b>Restore Factory Defaults .....</b>                           | <b>107</b> |
| <b>Enable/Disable EAN-13 .....</b>                              | <b>107</b> |
| <b>Transmit Check Character.....</b>                            | <b>108</b> |
| <b>2-Digit Add-On Code .....</b>                                | <b>108</b> |
| <b>5-Digit Add-On Code .....</b>                                | <b>110</b> |
| <b>Add-On Code Required .....</b>                               | <b>110</b> |
| <b>Add-On Code Separator .....</b>                              | <b>111</b> |
| <b>EAN-13 Beginning with 290 Add-On Code Required.....</b>      | <b>111</b> |
| <b>EAN-13 Beginning with 378/379 Add-On Code Required .....</b> | <b>112</b> |
| <b>EAN-13 Beginning with 414/419 Add-On Code Required .....</b> | <b>113</b> |
| <b>EAN-13 Beginning with 434/439 Add-On Code Required .....</b> | <b>113</b> |
| <b>EAN-13 Beginning with 977 Add-On Code Required .....</b>     | <b>114</b> |
| <b>EAN-13 Beginning with 978 Add-On Code Required.....</b>      | <b>115</b> |
| <b>EAN-13 Beginning with 979 Add-On Code Required.....</b>      | <b>115</b> |

|  |            |
|--|------------|
| <b>UPC-E .....</b>                                   | <b>116</b> |
| <b>Restore Factory Defaults .....</b>                | <b>116</b> |
| <b>Enable/Disable UPC-E.....</b>                     | <b>116</b> |
| <b>Transmit Check Character.....</b>                 | <b>118</b> |
| <b>2-Digit Add-On Code .....</b>                     | <b>118</b> |
| <b>5-Digit Add-On Code .....</b>                     | <b>119</b> |
| <b>Add-On Code Required .....</b>                    | <b>121</b> |
| <b>Add-On Code Separator.....</b>                    | <b>121</b> |
| <b>Transmit Preamble Character.....</b>              | <b>123</b> |
| <b>Convert UPC-E to UPC-A.....</b>                   | <b>123</b> |
| <b>UPC-A.....</b>                                    | <b>124</b> |
| <b>Restore Factory Defaults .....</b>                | <b>124</b> |
| <b>Enable/Disable UPC-A .....</b>                    | <b>124</b> |
| <b>Transmit Check Character.....</b>                 | <b>125</b> |
| <b>2-Digit Add-On Code .....</b>                     | <b>125</b> |
| <b>5-Digit Add-On Code .....</b>                     | <b>127</b> |
| <b>Add-On Code Required .....</b>                    | <b>127</b> |
| <b>Add-On Code Separator.....</b>                    | <b>128</b> |
| <b>Transmit Preamble Character.....</b>              | <b>128</b> |
| <b>Interleaved 2 of 5.....</b>                       | <b>130</b> |
| <b>Restore Factory Defaults .....</b>                | <b>130</b> |
| <b>Enable/Disable Interleaved 2 of 5 .....</b>       | <b>130</b> |
| <b>Set Length Range for Interleaved 2 of 5 .....</b> | <b>131</b> |
| <b>Check Character Verification .....</b>            | <b>132</b> |
| <b>ITF-14.....</b>                                   | <b>133</b> |
| <b>Restore Factory Defaults .....</b>                | <b>133</b> |
| <b>Enable/Disable ITF-14 .....</b>                   | <b>134</b> |
| <b>ITF-6.....</b>                                    | <b>135</b> |
| <b>Restore Factory Defaults .....</b>                | <b>135</b> |
| <b>Enable/Disable ITF-6.....</b>                     | <b>135</b> |
| <b>Matrix 2 of 5.....</b>                            | <b>137</b> |
| <b>Restore Factory Defaults .....</b>                | <b>137</b> |
| <b>Enable/Disable Matrix 2 of 5 .....</b>            | <b>137</b> |
| <b>Set Length Range for Matrix 2 of 5 .....</b>      | <b>138</b> |
| <b>Check Character Verification .....</b>            | <b>140</b> |
| <b>Code 39 .....</b>                                 | <b>142</b> |
| <b>Restore Factory Defaults .....</b>                | <b>142</b> |
| <b>Enable/Disable Code 39.....</b>                   | <b>142</b> |

|  |            |
|--|------------|
| Set Length Range for Code 39 .....     | 143        |
| Check Character Verification .....     | 144        |
| Transmit Start/Stop Character .....    | 146        |
| Enable/Disable Code 39 Full ASCII..... | 146        |
| <b>Codabar .....</b>                   | <b>148</b> |
| Restore Factory Defaults .....         | 148        |
| Enable/Disable Codabar .....           | 148        |
| Set Length Range for Codabar .....     | 149        |
| Check Character Verification .....     | 151        |
| Start/Stop Character.....              | 153        |
| <b>Code 93 .....</b>                   | <b>155</b> |
| Restore Factory Defaults .....         | 155        |
| Enable/Disable Code 93.....            | 155        |
| Set Length Range for Code 93.....      | 156        |
| Check Character Verification .....     | 158        |
| <b>GS1-128 (UCC/EAN-128).....</b>      | <b>160</b> |
| Restore Factory Defaults .....         | 160        |
| Enable/Disable GS1-128.....            | 160        |
| <b>AIM 128.....</b>                    | <b>161</b> |
| Restore Factory Defaults .....         | 161        |
| Enable/Disable AIM 128 .....           | 161        |
| Set Length Range for AIM 128 .....     | 162        |
| <b>ISBT 128.....</b>                   | <b>163</b> |
| Restore Factory Defaults .....         | 163        |
| Enable/Disable ISBT 128 .....          | 163        |
| <b>Code 11.....</b>                    | <b>165</b> |
| Restore Factory Defaults .....         | 165        |
| Enable/Disable Code 11 .....           | 165        |
| Set Length Range for Code 11 .....     | 167        |
| Check Character Verification .....     | 169        |
| Transmit Check Character.....          | 171        |
| <b>ISBN.....</b>                       | <b>172</b> |
| Restore Factory Defaults .....         | 172        |
| Enable/Disable ISBN.....               | 172        |
| Set ISBN Format.....                   | 173        |
| <b>ISSN.....</b>                       | <b>174</b> |
| Restore Factory Defaults .....         | 174        |
| Enable/Disable ISSN .....              | 174        |

|   |            |
|---|------------|
| <b>Industrial 2/5 .....</b>                     | <b>175</b> |
| <b>Restore Factory Defaults .....</b>           | <b>175</b> |
| <b>Enable/Disable Industrial 2/5 .....</b>      | <b>175</b> |
| <b>Set Length Range for Industrial 25 .....</b> | <b>177</b> |
| <b>Check Character Verification .....</b>       | <b>179</b> |
| <b>Standard 2/5 .....</b>                       | <b>181</b> |
| <b>Restore Factory Defaults .....</b>           | <b>181</b> |
| <b>Enable/Disable Standard 2/5 .....</b>        | <b>181</b> |
| <b>Set Length Range for Standard 25 .....</b>   | <b>182</b> |
| <b>Check Character Verification .....</b>       | <b>184</b> |
| <b>COOP 25 .....</b>                            | <b>186</b> |
| <b>Restore Factory Defaults .....</b>           | <b>186</b> |
| <b>Enable/Disable COOP 25 .....</b>             | <b>186</b> |
| <b>Set Length Range for COOP 25 .....</b>       | <b>187</b> |
| <b>Check Character Verification .....</b>       | <b>189</b> |
| <b>Deutsche 14 .....</b>                        | <b>190</b> |
| <b>Restore Factory Defaults .....</b>           | <b>190</b> |
| <b>Enable/Disable Deutsche 14 .....</b>         | <b>190</b> |
| <b>Deutsche 12 .....</b>                        | <b>192</b> |
| <b>Restore Factory Defaults .....</b>           | <b>192</b> |
| <b>Enable/Disable Deutsche 12 .....</b>         | <b>192</b> |
| <b>Plessey .....</b>                            | <b>194</b> |
| <b>Restore Factory Defaults .....</b>           | <b>194</b> |
| <b>Enable/Disable Plessey .....</b>             | <b>194</b> |
| <b>Set Length Range for Plessey .....</b>       | <b>196</b> |
| <b>Check Character Verification .....</b>       | <b>198</b> |
| <b>MSI-Plessey .....</b>                        | <b>200</b> |
| <b>Restore Factory Defaults .....</b>           | <b>200</b> |
| <b>Enable/Disable MSI-Plessey .....</b>         | <b>200</b> |
| <b>Set Length Range for MSI-Plessey .....</b>   | <b>202</b> |
| <b>Check Character Verification .....</b>       | <b>204</b> |
| <b>Transmit Check Character .....</b>           | <b>205</b> |
| <b>QR Code .....</b>                            | <b>206</b> |
| <b>Restore Factory Defaults .....</b>           | <b>206</b> |
| <b>Enable/Disable QR Code .....</b>             | <b>206</b> |
| <b>Set Length Range for QR Code .....</b>       | <b>207</b> |
| <b>QR Inverse .....</b>                         | <b>209</b> |
| <b>Character Encoding .....</b>                 | <b>209</b> |

|   |     |
|---|-----|
| QR ECI Output .....                       | 210 |
| QR Decoding Complexity .....              | 210 |
| Continuous Code .....                     | 211 |
| Dot-peen Code.....                        | 211 |
| Mirror Code.....                          | 212 |
| QR Model 1.....                           | 212 |
| QR Model 2.....                           | 213 |
| Data Matrix.....                          | 214 |
| Restore Factory Defaults .....            | 214 |
| Enable/Disable Data Matrix .....          | 214 |
| Set Length Range for Data Matrix .....    | 216 |
| Rectangular Barcode .....                 | 217 |
| Data Matrix Inverse .....                 | 217 |
| Character Encoding.....                   | 219 |
| Data Matrix ECI Output .....              | 219 |
| ECC200.....                               | 220 |
| ECC0TO140 .....                           | 220 |
| DM Decoding Complexity.....               | 221 |
| Continuous Code .....                     | 222 |
| Dot-peen Code.....                        | 222 |
| Mirror Code.....                          | 223 |
| PDF417 .....                              | 224 |
| Restore Factory Defaults .....            | 224 |
| Enable/Disable PDF417 .....               | 224 |
| Set Length Range for PDF417.....          | 226 |
| PDF417 Inverse.....                       | 228 |
| Character Encoding.....                   | 228 |
| Chapter 8 Data Formatter .....            | 230 |
| Introduction .....                        | 230 |
| Add a Data Format .....                   | 230 |
| Programming with Barcodes .....           | 231 |
| Programming with Serial Commands.....     | 234 |
| Enable/Disable Data Formatter .....       | 236 |
| Non-Match Error Beep.....                 | 237 |
| Data Format Selection .....               | 239 |
| Change Data Format for a Single Scan..... | 240 |
| Clear Data Format.....                    | 241 |

|  |            |
|--|------------|
| <b>Query Data Formats</b> .....                          | <b>241</b> |
| <b>Formatter Command Type 6</b> .....                    | <b>243</b> |
| <b>Send Commands</b> .....                               | <b>243</b> |
| <b>Move Commands</b> .....                               | <b>246</b> |
| <b>Search Commands</b> .....                             | <b>248</b> |
| <b>Miscellaneous Commands</b> .....                      | <b>251</b> |
| Chapter 9 Prefix & Suffix.....                           | 256        |
| <b>Introduction</b> .....                                | <b>256</b> |
| <b>Global Settings</b> .....                             | <b>257</b> |
| <b>Enable/Disable All Prefixes/Suffixes</b> .....        | <b>257</b> |
| <b>Prefix Sequence</b> .....                             | <b>257</b> |
| <b>Custom Prefix</b> .....                               | <b>259</b> |
| <b>Enable/Disable Custom Prefix</b> .....                | <b>259</b> |
| <b>Set Custom Prefix</b> .....                           | <b>259</b> |
| <b>AIM ID Prefix</b> .....                               | <b>260</b> |
| <b>Code ID Prefix</b> .....                              | <b>261</b> |
| <b>Restore All Default Code IDs</b> .....                | <b>261</b> |
| <b>Modify Code ID</b> .....                              | <b>262</b> |
| <b>Custom Suffix</b> .....                               | <b>270</b> |
| <b>Enable/Disable Custom Suffix</b> .....                | <b>270</b> |
| <b>Set Custom Suffix</b> .....                           | <b>270</b> |
| <b>Terminating Character Suffix</b> .....                | <b>271</b> |
| <b>Enable/Disable Terminating Character Suffix</b> ..... | <b>271</b> |
| <b>Set Terminating Character Suffix</b> .....            | <b>271</b> |
| Chapter 10 Batch Programming .....                       | 273        |
| <b>Introduction</b> .....                                | <b>273</b> |
| <b>Create a Batch Command</b> .....                      | <b>274</b> |
| <b>Create a Batch Barcode</b> .....                      | <b>274</b> |
| <b>Use Batch Barcode</b> .....                           | <b>275</b> |
| Appendix .....   | 276        |
| <b>Digit Barcodes</b> .....                              | <b>276</b> |
| <b>Save/Cancel Barcodes</b> .....                        | <b>279</b> |
| <b>Factory Defaults Table</b> .....                      | <b>280</b> |
| <b>AIM ID Table</b> .....                                | <b>287</b> |
| <b>Code ID Table</b> .....                               | <b>288</b> |
| <b>Symbology ID Number</b> .....                         | <b>289</b> |

|                         |            |
|-------------------------|------------|
| <b>ASCII Table.....</b> | <b>290</b> |
|-------------------------|------------|



# Preface

## Introduction

This manual provides detailed instructions for setting up and using the NLS-NVH300 Industrial Handheld Barcode Scanner (hereinafter referred to as “the NVH300” or “the scanner”).

## Chapter Description

|   |  |
|---|--|
| <b><i>Chapter 1 Getting Started</i></b>     | <b>: Gives a general description of NVH300 scanner.</b>  |
| <b><i>Chapter 2 NSet</i></b>                | <b>: Introduces a useful tool you can use to set up NVH300 scanner and develop new applications.</b>                 |
| <b><i>Chapter 3 System Settings</i></b>     | <b>: Introduces three configuration methods and describes how to configure general parameters of NVH300 scanner.</b> |
| <b><i>Chapter 4 RS-232 Interface</i></b>    | <b>: Describes how to configure RS-232 communication parameters.</b>   |
| <b><i>Chapter 5 USB Interface</i></b>       | <b>: Describes how to configure USB communication parameters.</b>  |
| <b><i>Chapter 6 Symbologies</i></b>         | <b>: Lists all compatible symbologies and describes how to configure the relevant parameters.</b>                    |
| <b><i>Chapter 7 Data Formatter</i></b>      | <b>: Explains how to customize scanned data with the data formatter.</b>   |
| <b><i>Chapter 8 Prefix &amp; Suffix</i></b> | <b>: Describes how to use prefix and suffix to customize scanned data.</b>   |
| <b><i>Chapter 9 Batch Programming</i></b>   | <b>: Explains how to integrate a complex programming task into a single barcode.</b>                                 |
| <b><i>Appendix</i></b>                      | <b>: Provides factory defaults table and a bunch of frequently used programming barcodes.</b>                        |



---

## Explanation of Icons



**This icon indicates something relevant to this manual.**



**This icon indicates this information requires extra attention from the reader.**



**This icon indicates handy tips that can help you use or configure the scanner with ease.**



**This icon indicates practical examples that can help you to acquaint yourself with operations.**

# Chapter 1 Getting Started

## Introduction


The NVH300 reads a 1D or 2D barcode by capturing its image. Adopting the advanced **UING®** technology independently developed by Newland Auto-ID Tech, it provides several scan modes, including Manual mode, Pulse mode, Aim mode, Continuous mode and Batch mode, tailored to different scanning needs.

An illustrated introduction to the NVH300 is included in this chapter. If you have a scanner at hand, make good use of it to develop a better understanding of this manual. This chapter is written for normal users, maintenance staff and software developers.

## Features of the NVH300

- **Excellent DPM Decoding Capability**
- **Advanced Illumination system**
- **Fast Intelligent Learning and Rich Scene Configuration**
- **High Protection Industrial Structure Design**

## Model description

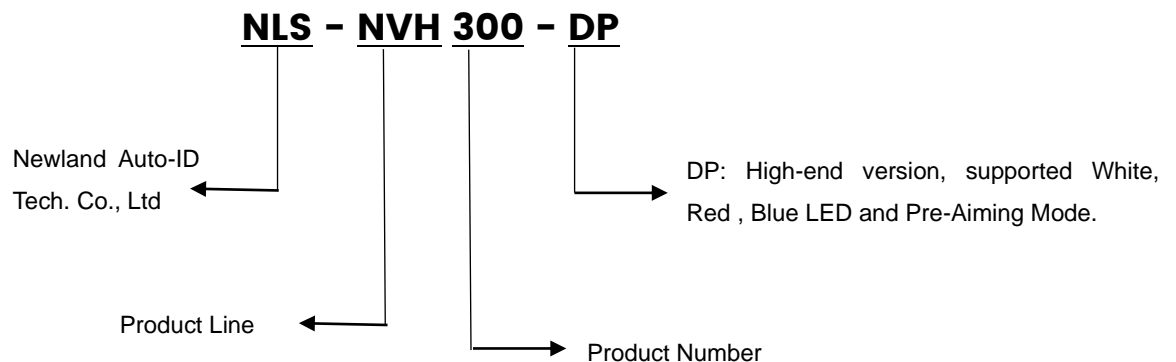

---

## Accessories

| Name  | Specification               | Number   |
|---|-----------------------------|----------|
| <b>NLS-NVH300 Scanner</b>                           | <b>NLS-NVH300-DP</b>        | <b>1</b> |
| <b>USB or RS232 Cable</b>                           | <b>RJ50 to USB or RS232</b> | <b>1</b> |
| <b>Power Adapter</b>                                | <b>Output: DC 5V,1.5A</b>   | <b>1</b> |
| <b>Quick Guide</b>                                  | <b>Paper</b>                | <b>1</b> |
| <b>Qualification Certificate<br/>/Warranty Card</b> | <b>Paper</b>                | <b>1</b> |


## Unpacking

**Open the package and take out the scanner and its accessories. Check to make sure everything on the packing list is present and intact. If any contents are damaged or missing, please keep the original package and contact your dealer immediately for after-sales service.**

---

## NVH300 Scanner

NVH300-DP

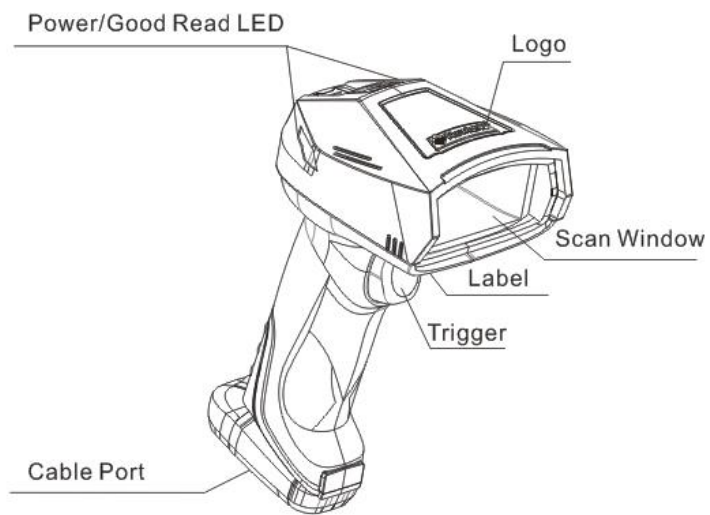

Good Read/Network LED:

**Red LED: Device is started successfully.**


**Green LED: Barcode is decoded successfully.**

---

Dimensions of the Scanner (unit: mm)


NVH300-DP

Left View

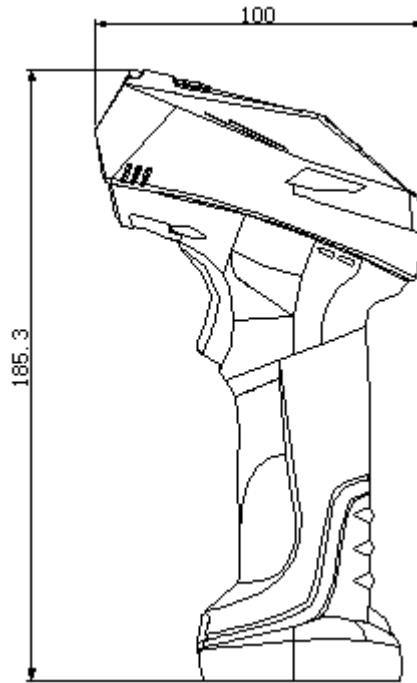


---



Front View

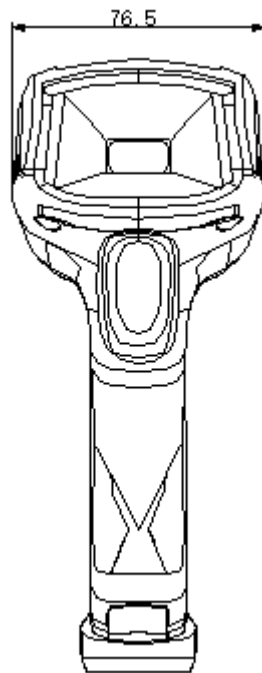

Top View

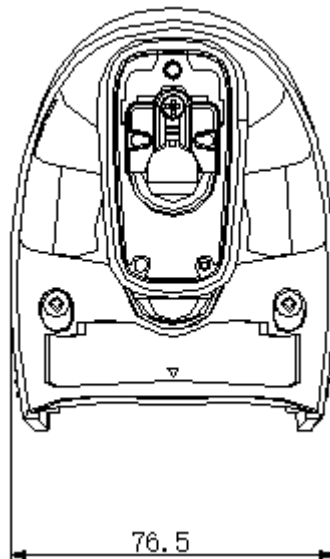

## Data Port

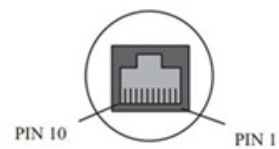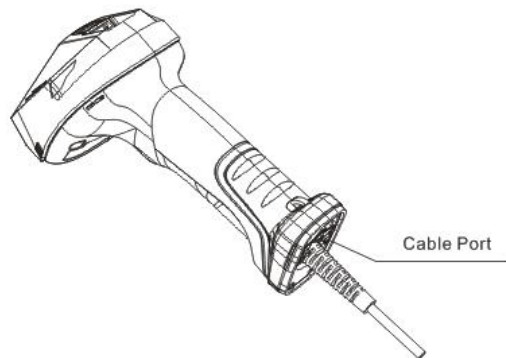

### Data Port Pinout:

| PIN | Signal  | Type | Function              |
|-----|---------|------|-----------------------|
| 1   | KB_CLK  | I/O  | Keyboard Clock Signal |
| 2   | KB_DATA | I/O  | Keyboard Data Signal  |
| 3   | VCC     | P    | Power, +5V            |
| 4   | TXD     | O    | RS-232 Output         |
| 5   | RXD     | I    | RS-232 Input          |
| 6   | CTS     | I    | Clear To Send         |
| 7   | RTS     | O    | Request To Send       |
| 8   | GND     | P    | Ground                |
| 9   | D-      | I/O  | USB Signal            |
| 10  | D+      | I/O  |                       |

---

## Connecting the NVH300 to a Host

**The scanner must be connected to a host device in actual application, such as PC, POS or any intelligent terminal with USB or RS-232, using a communication cable (USB or RS-232 cable).**


USB



RS-232



Using USB Cable

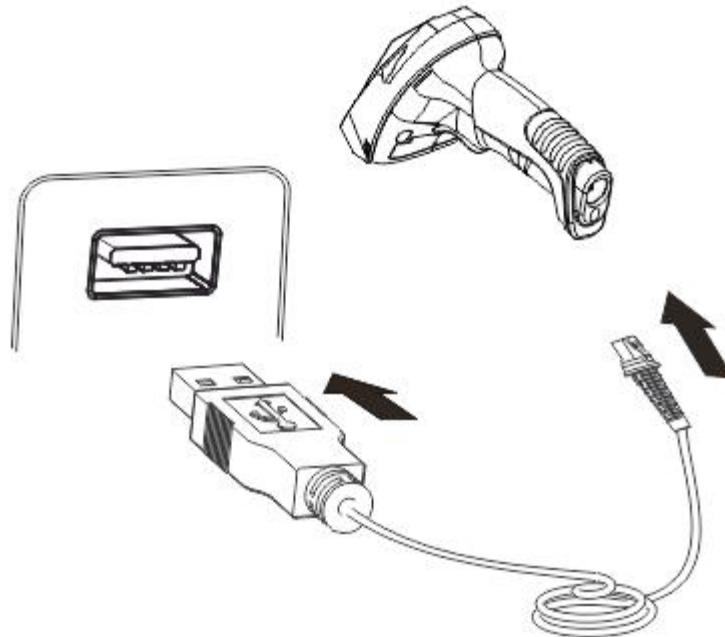


---

**Connect the scanner to a host device through a USB cable with RJ50 and USB connectors:**

1. **Plug the RJ50 connector into the data port on the scanner.**
2. **Plug the USB connector into the USB port on the host device.**

Using RS-232 Cable

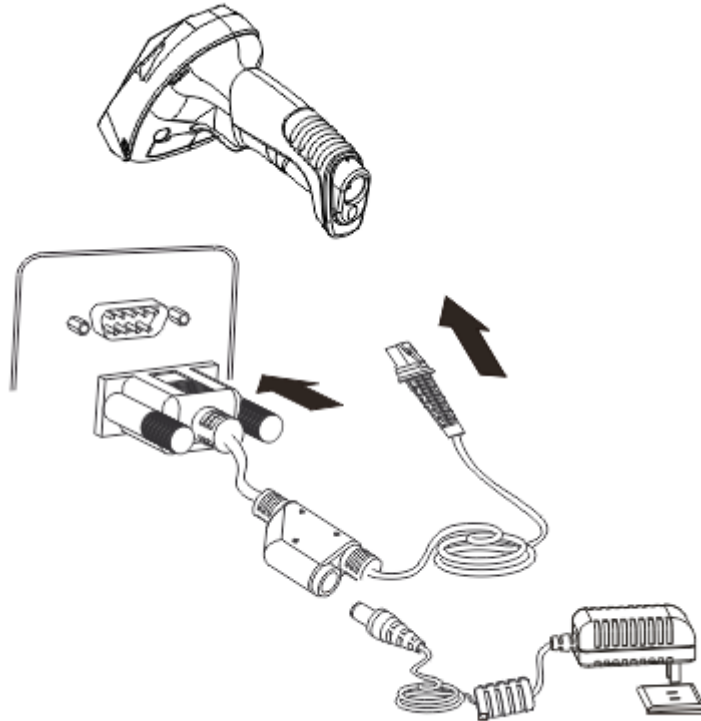


**Connect the scanner to a host device through a RS-232 cable with RJ50 and RS-232 connectors and a power jack:**

1. **Plug the RJ50 connector into the data port on the scanner.**
2. **Plug the RS-232 connector into the RS-232 port on the host device.**
3. **Plug the supplied power adapter into the power jack on the RS-232 cable.**


---

## Connect the NVH300-DP Communication Data Cable


- 1. Insert cable fully so that the connector is flush with the scanner surface.**

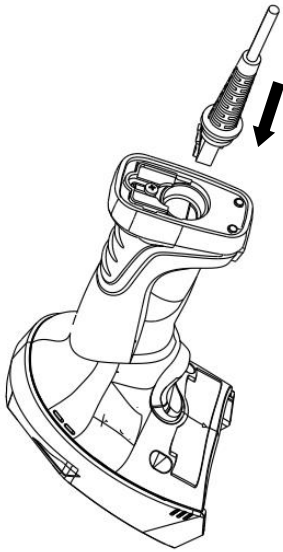


- 2. Loosen metal lock plate screw using a PH1 driver.**

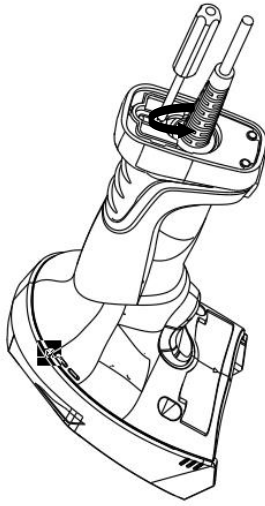

**3. Slide lock plate to fully locked position.**

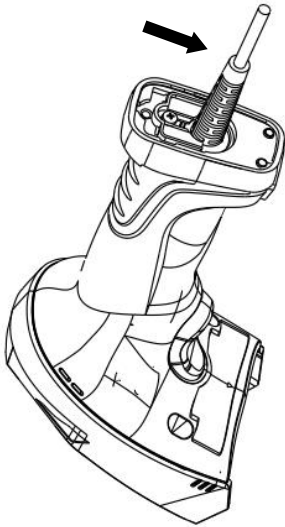


**4. Tighten lock plate screw using a PH1 driver.**

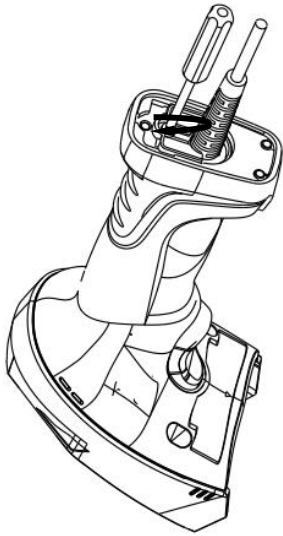


Remove the NVH300-DP Communication Data Cable


- 1. Loosen lock plate screw using a PH1 driver.**

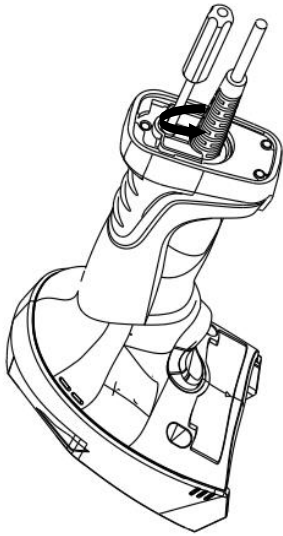

**2. Slide lock plate to fully unlocked position.**

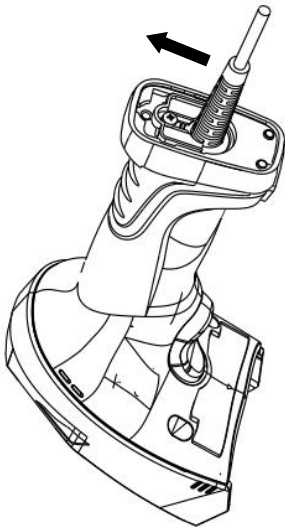

**3. Remove cable.**

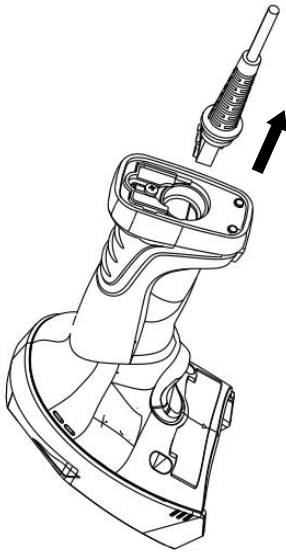

## Power On, Power Off, Reboot

Power on the scanner

**Connect the scanner to a host device. Then the scanner will be turned on and automatically enter the sleep mode.**

Power off the scanner

**Remove the cable from the scanner; or remove the cable from the host device; or disconnect the power adapter from mains.**

Reboot the scanner

**If the scanner stops responding to input or runs abnormally, turn off the scanner and then turn it back on.**

---

## Maintenance

- ✧ **The scan window should be kept clean.**
- ✧ **Do not scratch the scan window.**
- ✧ **Use soft brush to remove the stain from the scan window.**
- ✧ **Use the soft cloth to clean the window, such as eyeglass cleaning cloth.**
- ✧ **Do not spray any liquid on the scan window.**
- ✧ **Do not use any detergent to clean other parts of the scanner except for water.**




**The warranty DOES NOT cover damages caused by inappropriate care and maintenance.**

## Scanning Instructions

**When the scanner is in the Level scan mode, you can follow the steps below to scan a barcode:**

- 1. Press and hold the trigger. Then the scanner will project a red cross focusing dashed line .**
- 2. Center the aiming pattern on the barcode, as shown in the figure below.**
- 3. Release the trigger when the aiming pattern goes off. If the barcode is decoded successfully, the scanner will emit a good read beep and the decoded data will be sent to the host device.**

**Note: For barcodes of the same batch, the scanner keeps a high success ratio in certain distance which is regarded as the optimal scanning distance.**

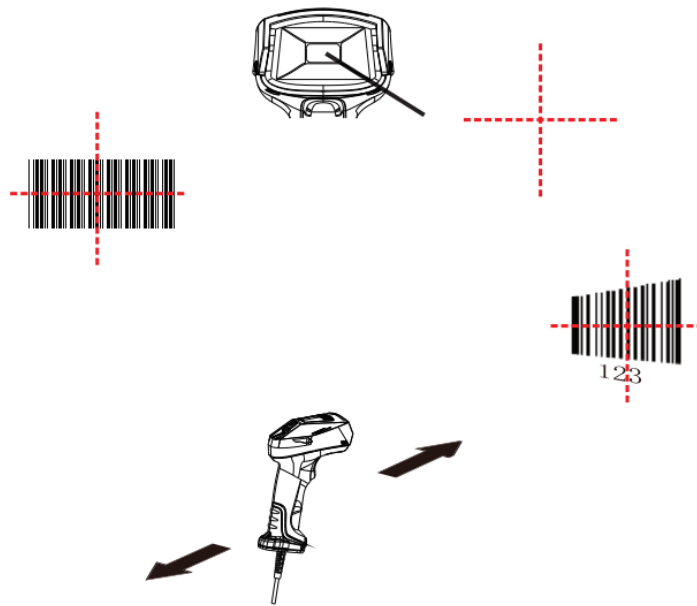

## Chapter 2 NSet


### Introduction

**NSet Setup Tool is a User Interface client application developed by Fujian Newland Auto-ID Tech. Co., Ltd. That simplifies initial reader setup and changing parameters of the scanners you use.**

**The NSet is a common platform across all models. It is installed in and runs on Windows-based PCs (usually laptops), and connection takes place through several different interface.**

### Main Features

- **View and modify the information and setting parameters of online scanner.**
- **View the general configurations of the offline devices.**
- **Upgrade the firmware, compare the configurations, restore to the factory default ,etc in batch.**
- **Create/print/save setting barcodes to a PDF or Word file.**
- **Support to see how different options affect the reader in real time.**
- **Real-time refresh of device status.**
- **Support image playback.**

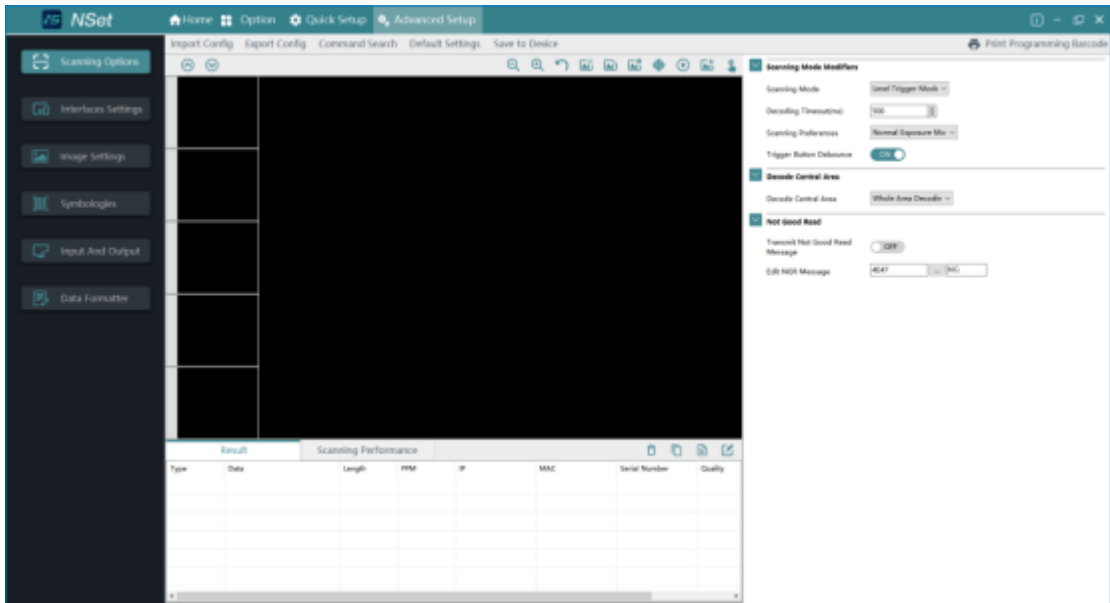

## Chapter 3 System Settings

### Introduction

**There are three ways to configure the NVH300: Barcode programming, command programming and NSet programming.**

#### Barcode Programming

**The NVH300 can be configured by scanning programming barcodes. All user programmable features/options are described along with their programming barcodes/commands in the following sections.**

**This programming method is most straightforward. However, it requires manually scanning barcodes. As a result, errors are more likely to occur.**

#### Command Programming

**The NVH300 can also be configured by serial commands (HEX) sent from the host device.**

**Users can design an application program to send those command strings to the scanners to perform device configuration.**


#### NSet Programming

**Besides the two methods mentioned above, you can conveniently perform scanner configuration through NSet too. NSet is a Windows-based configuration tool particularly designed for Newland products, enabling users to gain access to decoded data and captured images and to configure scanners. For more information about this tool, refer to the *NSet User Guide*.**



Before programming the scanner, you need to pair it to a cradle first. When programming the scanner with serial commands or NSet, you need to insert it in the paired cradle.

## Programming Barcode/ Programming Command/Function

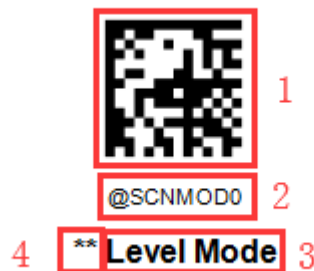

The figure above is an example that shows you the programming barcode and command for the Level Mode function:

1. The Level Mode **barcode**.
2. The Level Mode **command**.
3. The **description of feature/option**.
4. **\*\* indicates factory default settings**.

**Note:** “@” included in the programming command indicates permanent setting which means the setting will not be lost by removing power from the scanner or turning off or rebooting it; whereas “#” included in the programming command indicates temporary setting which means the setting will be lost by removing power from the scanner or turning off or rebooting it.

---

## Use of Programming Command

**Besides the barcode programming method, the scanner can also be configured by serial commands (HEX) sent from the host device.** All commands must be entered in uppercase letters.

### Command Syntax

***Prefix StorageType Tag SubTag {Data} [,SubTag {Data}] [;Tag SubTag {Data}] [...] Suffix***

Prefix: “~<SOH>0000” (HEX: 7E 01 30 30 30 30), 6 characters.

StorageType: “@” (HEX: 40) or “#” (HEX: 23), 1 character. “@” means permanent setting which will not be lost by removing power from the scanner or rebooting it; “#” means temporary setting which will be lost by removing power from the scanner or rebooting it.

Tag: A 3-character case-sensitive field that identifies the desired command group. For example, all USB HID-KBW configuration settings are identified with a Tag of KBW.

SubTag: A 3-character case-sensitive field that identifies the desired parameter within the tag group. For example, the SubTag for the keyboard layout is CTY.

Data: The value for a feature or parameter setting, identified by the Tag and SubTag.

Suffix: “;<ETX>” (HEX: 3B 03), 2 characters.

**Multiple commands can be issued within one Prefix/Suffix sequence. For configuration commands, only the Tag, SubTag, and Data fields must be repeated for each command in sequence. If an additional command is to be applied to the same Tag, then the command is separated with a comma (,) and only the SubTag and Data fields of the additional commands are issued. If the additional command requires a different Tag field, the command is separated from previous command by a semicolon (;).**

### Query Commands

**For query commands, the entry in the Data field in the syntax above is one of the following characters means:**

\* (HEX: 2A)      **What is the scanner’s current value for the setting(s).**

---

**& (HEX: 26)      What is the factory default value for the setting(s).**

**^ (HEX: 5E)      What is the range of possible values for the setting(s).**

---

The value of the StoreType field in a query command can be either “@” (HEX: 40) or “#” (HEX: 23).

A query command with the SubTag field omitted means to query all the settings concerning a tag. For example, to query all the current settings about Code 11, you should enter 7E 01 30 30 30 30 40 43 31 31 2A 3B 03 (i.e. ~<SOH>0000@C11\*; <ETX>).

## Responses

Different from command sequence, the prefix of a response consists of the six characters of “<STX><SOH>0000” (HEX: 02 01 30 30 30 30).

The scanner responds to serial commands with one of the following three responses:

<ACK> (HEX: 06)     Indicates a good command which has been processed.

<NAK> (HEX: 15)     Indicates a good configuration command with its Data field entry out of the allowable range for this Tag and SubTag combination (e.g. an entry for an inter-keystroke delay of 100 when the field will only allow 2 digits), or an invalid query command.

<ENQ> (HEX: 05)     Indicates an invalid Tag or SubTag command.

When responding, the scanner echoes back the command sequence with the status character above inserted directly before each of the punctuation marks (the comma or semicolon) in the command.

## Examples

Example 1: Enable Code 11, set the minimum and maximum lengths to 12 and 22 respectively.

**Enter:**     7E 01 30 30 30 30 40 43 31 31 45 4E 41 31 2C 4D 49 4E 31 32 2C 4D 41 58 32 32 3B 03  
          (~<SOH>0000@C11ENA1,MIN12,MAX22;<ETX>)

**Response:** 02 01 30 30 30 30 40 43 31 31 45 4E 41 31 06 2C 4D 49 4E 31 32 06 2C 4D 41 58 32 32 06 3B 03  
          (<STX><SOH>0000@C11ENA1<ACK>,MIN12<ACK>,MAX22<ACK>;<ETX>)

Example 2: Query the current minimum and maximum lengths of Code 11.

**Enter:**     7E 01 30 30 30 30 40 43 31 31 4D 49 4E 2A 2C 4D 41 58 2A 3B 03  
          (~<SOH>0000@C11MIN\*,MAX\*;<ETX>)

---

**Response:** 02 01 30 30 30 30 40 43 31 31 4D 49 4E 31 32 06 2C 4D 41 58 32 32 06 3B 03  
(<STX><SOH>0000@C11MINI2<ACK>,MAX22<ACK>;<ETX>)

## Use of Programming Barcode

**Programming barcode data (i.e. the characters under programming barcode) can be transmitted to the host device. Scan the appropriate barcode below to enable or disable the transmission of programming barcode data to the host device.**



@SETUPT0

\*\* Do Not Transmit Programming Barcode Data



@SETUPT1

Transmit Programming Barcode Data

---

## Illumination



@ILLSCN1

\*\* On



@ILLSCN0

Off

## Illumination Color



@ILLCLR0

Red LED



@ILLCLR1

White LED



@ILLCLR2

\*\* Red LED and White LED



@ILLCLR5

Red LED,White LED and Blue LED



@ILLCLR4

Blue LED



@ILLCLR6

White LED and Blue LED



@ILLCLR7

Red LED and Blue LED

## Illumination Rotation Interval

**This parameter sets the Illumination Rotation Interval. The default value is 2000ms.**



@ILLSCT

Illumination Rotation Interval

## Aiming

**When scanning/capturing image, the scanner projects an aiming pattern which allows positioning the target barcode within its field of view and thus makes decoding easier.**

---

Normal: **The scanner projects an aiming pattern only during barcode scanning/capture.**

Always On: **Aiming pattern is constantly on after the scanner is powered on.**

Off: **Aiming pattern is off all the time.**



@AMLENA1

\*\* Normal



@AMLENA0

Off



@AMLENA2

Always On

---

## Good Read LED

The green LED can be programmed to be On or Off to indicate good read.



@GRLENA1

\*\* On



@GRLENA0

Off

---

## Good Read LED Duration

This parameter sets the amount of time the Good Read LED remains on following a good read. It is programmable in 10ms increments from 20ms to 10,000ms.



@GRLDUR20

\*\* Short (20ms)



@GRLDUR120

Medium (120ms)



@GRLDUR220

Long (220ms)



@GRLDUR320

Prolonged (320ms)



@GRLDUR

Custom (20 - 10,000ms)

**E**  
*xample*

Set the Good Read LED duration to 800ms:

1. **Scan the Custom barcode.**
2. **Scan the numeric barcodes “8”, “0” and “0” from the “Digit Barcodes” section in**

---

**Appendix.**

- 3. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Power On Beep

The scanner can be programmed to beep when it is powered on. Scan the Off barcode if you do not want a power on beep.



@PWBENA1

\*\* On



@PWBENA0

Off

## Good Read Beep

Scanning the Off barcode can turn off the beep that indicates successful decode; scanning the On barcode can turn it back on.



@GRBENA1

\*\* On



@GRBENA0

Off



---

## Good Read Beep Volume



@GRBVLL20

Low Volume



@GRBVLL12

Medium Volume



@GRBVLL5

\*\*High Volume



@GRBVLL

Custom (1-10)

**Scanning the below barcode can set the Good Read Beep Volume to low, medium and high.**

---

## Good Read Beep Duration

This parameter sets the length of the beep the scanner emits on a good read. It is programmable in 10ms increments from 20ms to 300ms.



@GRBDUR40

Short (40ms)



@GRBDUR80

\*\* Medium (80ms)



@GRBDUR120

Long (120ms)



@GRBDUR

Custom (20 - 300ms)

## **E** *xample*

Set the Good Read Beep duration to 200ms:

1. **Scan the Custom barcode.**
2. **Scan the numeric barcodes “2”, “0” and “0” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Good Read Beep Frequency

This parameter is programmable in 1Hz increments from 20Hz to 20,000Hz.



@GRBFRQ800

Extra Low (800Hz)



@GRBFRQ1600

Low (1600Hz)



@GRBFRQ2730

\*\* Medium (2730Hz)



@GRBFRQ4200

High (4200Hz)



@GRBFRQ

Custom (20 - 20,000Hz)

**E**  
*xample*

Set the Good Read Beep frequency to 2,000Hz:

1. **Scan the Custom barcode.**
2. **Scan the numeric barcodes “2”, “0”, “0” and “0” from the “Digit Barcodes” section in**

---

**Appendix.**

**3. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

Number of Good Read Beeps

**The number of beeps of a good read can be programmed from 1 to 9. To change the number of beeps, scan the barcode below and then scan a numeric barcode (1-9) and the Save barcode. The default value is 1.**



@GRBNUM

Number of Good Read Beeps

---

## Good Read Beep Interval Time

**Good Read Beep Interval Time modifies the interval time between beeps, and it becomes effective when the Number of Good Read Beeps is greater than one.**



@GRBITV0

\*\* Short



@GRBITV1

Medium

## Good Read Vibration

**You may choose whether or not to let the scanner vibrate when a barcode is successfully read by scanning the appropriate barcode below.**



@GRVENA0

\*\* Off



@GRVENA1

On

---

## Good Read Vibration Duration

**This parameter sets the length for the Good Read Vibration. It is programmable in 1ms increments from 100ms to 2,000ms. The default value is 300ms.**



@GRVDUR

Set Good Read Vibration Duration

**E**  
*xample*

Set the Good Read Vibration duration to 800ms:

- 1. Scan the Set Good Read Vibration Duration barcode.**
- 2. Scan the numeric barcodes “8”, “0” and “0” from the “Digit Barcodes” section in Appendix.**
- 3. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

## Scan Mode

**Level Mode: A trigger pull activates a decode session. The decode session continues until a barcode is decoded or the trigger is released.**

**Trigger Mode: A trigger pull activates a decode session. The decode session continues until a barcode is decoded or reach the decode session timeout.**

**Sense Mode: The scanner activates a decode session every time when it detects a change in ambient illumination. The decode session continues until the barcode is decoded or the decode session timeout expires. Pressing the trigger can also activate a decode session.**

**Continuous Mode: The scanner automatically starts one decode session after another. To suspend/resume barcode reading, simply press the trigger. Reread Timeout can avoid undesired rereading of same barcode in a given period of time.**

**Pulse Mode: When the trigger is pulled and released, scanning is activated until a barcode is decoded or the decode session timeout expires (The decode session timeout begins when the trigger is**

---

released).

Batch Mode: **A trigger pull activates a round of multiple decode sessions. This round of multiple scans continues until the trigger is released. Rereading the same barcode is not allowed in the same round.**

Pre-Aiming Mode: **When the user holds the scanner, the scanner lights up the aiming light to indicate the current position of the scanner before the user presses the button. After pressing the button, the scanner starts to read the bar code( the aimer is turned on or off according to the configuration of aimer mode. When the button is released or the barcode is decoded successfully, the code is stopped. When the user drops down the scanner for 3 seconds, the aiming lamp will turn off.**



@SCNMOD0

Level Mode



@SCNMOD1

Trigger Mode



@SCNMOD2

Sense Mode



@SCNMOD3

Continuous Mode



@SCNMOD4

Pulse Mode



@SCNMOD13

\*\* Pre-Aiming Mode



@SCNMOD7

Batch Mode

---

## One Reading Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 1ms to 3,600,000ms. When it is set to 0, the timeout is infinite. The default setting is 3,000ms.



@ORTSET

One Reading Timeout

**E**  
*xample*

Set the One Reading Timeout to 1,500ms:

1. Scan the One Reading Timeout barcode.
2. Scan the numeric barcodes “1”, “5”, “0” and “0” from the “Digit Barcodes” section in Appendix.
3. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.

## Reading Interval

Reading Interval sets the time period between the end of one decode session and the start of next session. It is programmable in 1ms increments from 1ms to 10,000ms. The default timeout is 500ms. This feature is only applicable to the Continuous modes.



@SCNINV

Reading Interval

**E**  
*xample*

Set the timeout between decodes to 800ms:

- 
1. **Scan the Reading Interval barcode.**
  2. **Scan the numeric barcodes “8”, “0” and “0” from the “Digit Barcodes” section in Appendix.**
  3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

## Image Stabilization Timeout (Sense Mode)

In the course of the sense mode, when the scanner stop reading, it will enter a new process of read-adaptation to the reading environment (image).After the Image Stabilization Timeout will the scanner enter the sense mode and wait for the barcode to present.Set the parameters of Image Stabilization Timeout could change the time to adapt the reading environment. It is programmable in 1ms increments from 1ms to 3,000ms. The default setting is 200ms.



@SENIST

Image Stabilization Timeout (Sense Mode)

## Good Read Delay

**Good Read Delay sets the minimum amount of time before the scanner can read another barcode. This parameter is programmable in 1ms increments from 1ms to 3,600,000ms. The default setting is 500ms. Scan the appropriate barcode below to enable or disable the delay.**



@GRDENAT

Enable Good Read Delay



@GRDENA0

\*\* Disable Good Read Delay

To set the good read delay, scan the barcode below, then set the delay (from 1 to 3,600,000ms) by scanning the digit barcode(s) then scanning the Save barcode from the Appendix.



@GRDDUR

Good Read Delay

**E**  
*sample*

Set the good read delay to 1,000ms:

1. **Scan the Good Read Delay barcode.**
2. **Scan the numeric barcodes “1”, “0”, “0” and “0” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Image Decoding Timeout

**Image Decoding Timeout specifies the maximum time the scanner will spend decoding an image. This parameter is programmable in 1ms increments from 1ms to 3,000ms. The default timeout is 500ms.**



@DETSET

Image Decoding Timeout

**E**  
*sample*

Set the image decoding timeout to 800ms:

1. **Scan the Image Decoding Timeout barcode.**
2. **Scan the numeric barcodes “8”, “0” and “0” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Scanning Preference

Normal Mode: **Select this mode when reading barcodes on paper.**

Screen Mode: **Select this mode when reading barcodes on the screen.**

High Motion Tolerance Mode: **Select this mode when reading barcodes on moving objects.**

Wide Adaptive Mode: **Select this mode when application scenarios and code types are diversified.**



@EXPLVL0

\*\* Normal Mode



@EXPLVL4

High Motion Tolerance Mode



@EXPLVL5

Screen Mode



@EXPLVL6

Wide Adaptive Mode

---

## Sensitivity

**Sensitivity specifies the degree of acuteness of the scanner's response to changes in images captured. There are 20 levels to choose from. The smaller the value, the higher the sensitivity and the lower requirement in image change to trigger the scanner. You can select an appropriate degree of sensitivity that fits the application environment. The default setting is Level 1. This feature is only applicable to the Sense mode.**



@SENLVL14

Low Sensitivity



@SENLVL11

Medium Sensitivity



@SENLVL8

High Sensitivity



@SENLVL5

Enhance Sensitivity



@SENLVL

\*\*Custom Sensitivity

**E**  
*example*

Set the Sensitivity to 10:

**1. Scan the Custom Sensitivity barcode.**

**2. Scan the numeric barcodes “1”, “0” from the “Digit Barcodes” section in Appendix.**

**3. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

## Read Barcode On/Off

**Sending the Read Barcode Off command @NGRENA0 to the scanner can disable it from reading barcode, and the scanner is unable to scan barcode unless you send the Read Barcode On command @NGRENA1 to it or power cycle it. By default, Read Barcode is On.**

## Decode Area

**Whole Area Decoding: The scanner attempts to decode barcode(s) within its field of view, from the center to the periphery, and transmits the barcode that has been first decoded.**


**Specific Area Decoding: The scanner attempts to read barcode(s) within a specified decoding area and transmits the barcode that has been first decoded. This option allows the scanner to narrow its field of view to make sure it reads only those barcodes intended by the user. For instance, if multiple barcodes are placed closely together, specific area decoding in conjunction with appropriate pre-defined decoding area will insure that only the desired barcode is read.**

**Acuscan: The scanner only decodes the barcode aimed squarely by the aiming pattern. For those using a crosshair aiming pattern, only the barcode aimed by the center of crosshair will be decoded.**

---

Priori On Aimed Barcode: **The scanner attempts to decode priority the aimed barcode(s). If there is no barcode in the aimed area, the scanner would decode the barcode which is close to the aiming area first.**

Acuread Decoding

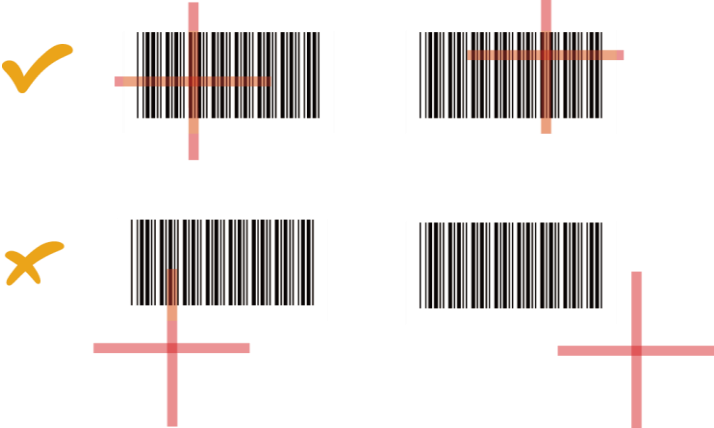



@CADENA0

Whole Area Decoding



@CADENA1

Specific Area Decoding



@CADENA2

Acuscan



@CADENA4;

\*\*Priori On Aimed Barcode

---

If Specific Area Decoding is enabled, the scanner only reads barcodes that intersect the predefined decoding area.

The default decoding area is an area of 40% top, 60% bottom, 40% left and 60% right of the scanner's field of view

You can define the decoding area using the Top of Decoding Area, Bottom of Decoding Area, Left of Decoding Area and Right of Decoding Area barcodes as well as numeric barcode(s) that represent(s) a desired percentage (0-100). The value of Bottom must be greater than that of Top; the value of Right must be greater than that of Left.



@CADTOP

Top of Decoding Area



@CADBOT

Bottom of Decoding Area



@CADLEF

Left of Decoding Area



@CADRIG

Right of Decoding Area



## Example

Program the scanner to only read Barcode 1 in the figure above by setting the decoding area to 10% top, 45% bottom, 15% left and 30% right:

1. **Scan the Top of Decoding Area barcode.**
2. **Scan the numeric barcode “0” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the Bottom of Decoding Area barcode.**
5. **Scan the numeric barcodes “4” and “5” from the “Digit Barcodes” section in Appendix.**
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
7. **Scan the Top of Decoding Area barcode.**
8. **Scan the numeric barcodes “1” and “0” from the “Digit Barcodes” section in Appendix.**
9. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
10. **Scan the Left of Decoding Area barcode.**
11. **Scan the numeric barcode “0” from the “Digit Barcodes” section in Appendix.**
12. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
13. **Scan the Right of Decoding Area barcode.**
14. **Scan the numeric barcodes “3” and “0” from the “Digit Barcodes” section in Appendix.**
15. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
16. **Scan the Left of Decoding Area barcode.**
17. **Scan the numeric barcodes “1” and “5” from the “Digit Barcodes” section in Appendix.**

---

18. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.

### Image Flipping



@MIRRORO

\*\* Do Not Flip



@MIRROR1

Flip Horizontally

**Example of image not flipped**



**Example of image flipped horizontally**



---

## Image Resize

**This option alters image resolution before compression. Multiple pixels are combined to one pixel, resulting in a smaller image containing the original content with reduced resolution. You can set to original image or resize by 50% on both horizontal and vertical.**



@IMGRSE0

\*\* Original Image



@IMGRSE1

Resize By 50% On Both Horizontal And  
Vertical

---

---

## Transmit Not Good Read Message

- ✧ **Enable:** When the code failed to decoded, and you release the trigger or Decode Session Timeout , Not Good Read Message will be sent to the host.
- ✧ **Disable:** When the code failed to decoded, Not Good Read Message will not be sent to the host.



@NGRENA0

\*\* Disable



@NGRENA1

Enable

## Edit NGR Message

**Not Good Read Message supports up to 7 characters, from 0 to oxff. (Default: NG)**



@NGRSET

Edit NGR Message

---

## Image Filter

**Sets the filter to be applied to the image before being processed. This parameter can be used to successfully decode particular ink-spread printed codes (ex. direct part mark codes). Different filters can be applied to a single code. See the NSet User's Manual for examples of Image Filter application.**

## Default Settings

### Factory Defaults

**Scanning the following barcode can restore the scanner to the factory defaults.**

**You may need to reset all parameters to the factory defaults when:**

- ✧ **scanner is not properly configured so that it fails to decode barcodes.**
- ✧ **you forget previous configuration and want to avoid its impact.**



@FACDEF

Restore All Factory Defaults

---

## Custom Defaults

**Scanning the Restore All Custom Defaults barcode can reset all parameters on the scanner to the custom defaults. Scanning the Save as Custom Defaults barcode can set the current settings as custom defaults.**

**Custom defaults are stored in the non-volatile memory.**



@CUSSAV

Save as Custom Defaults



@CUSDEF

Restore All Custom Defaults



**Restoring the scanner to the factory defaults will not remove the custom defaults from the scanner.**

---

## Query Scanner Information

**After scanning the barcode below, the scanner information (including product name, firmware version, decoder version, hardware version, product serial number, OEM serial number and manufacturing date) will be sent to the host device.**



@QRYSYS

Query Scanner Information

## Query Product Name



@QRYPDN

Query Product Name

## Query Firmware Version



@QRYFWV

Query Firmware Version

---

---

Query Decoder Version



@QRYDCV

Query Decoder Version

Query Hardware Version



@QRYHWV

Query Hardware Version

Query Serial Number



@QRYPSN

Query Serial Number

Query Manufacturing Date



@QRYDAT

Query Manufacturing Date

A large, solid blue rectangular block that spans most of the width of the page, positioned below the text.

---

## Chapter 4 RS-232 Interface

### Introduction

**When the cradle is connected to the RS-232 port of a host device, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) on the cradle to match the host device so that two devices can communicate with each other.**



@INTERFO

RS-232

---

## Baud Rate

**Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the host requirements.**



@232BAD8

115200



@232BAD7

57600



@232BAD6

38400



@232BAD5

19200



@232BAD4

14400



@232BAD2

4800



@232BAD0

1200



@232BAD3

\*\*9600



@232BAD1

2400

## Parity Check

**Set the parity type to match the host requirements.**

Odd Parity: **If the data contains an odd number of 1 bits, the parity bit value is set to 0.**

Even Parity: **If the data contains an even number of 1 bits, the parity bit value is set to 0.**

None: **Select this option when no parity bit is required.**



@232PAR0

\*\* None



**@232PAR2**

Odd Parity



**@232PAR1**

Even Parity

---

## Data Bit

**Set the number of data bits to match the host requirements.**



@232DAT1

7 Data Bits



@232DAT0

\*\* 8 Data Bits

## Stop Bit

**The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. Set the number of stop bits to match the host requirements.**



@232STP0

\*\* 1 Stop Bit



@232STP1

2 Stop Bits

---

## Hardware Auto Flow Control

**If this feature is enabled, the cradle determines whether to transmit data based on CTS signal level. When CTS signal is at a low level which means the serial port's cache memory of receiving device (such as PC) is full, the cradle sends data through RS-232 port until CTS signal is set to high level by receiving device. When the cradle is not ready for receiving, it will set RTS signal to low level. When sending device (such as PC) detects it, it will not send data to the cradle any more to prevent data loss.**

**If this feature is disabled, reception/transmission of serial data will not be influenced by RTS/CTS signal.**



@232AF10

\*\* Disable Hardware Auto Flow Control



@232AF11

Enable Hardware Auto Flow Control



**Before enabling this feature, make sure that RTS/CTS signal lines are contained in RS-232 cable. Without the signal lines, RS-232 communication errors will occur.**

---

## Chapter 5 USB Interface

### Introduction

**There are two options for USB connection between the cradle and host device:**

- ✧ **USB HID Keyboard:** The cradle's transmission is simulated as USB keyboard input with no need for command configuration or a driver. Barcode data could be entered by the virtual keyboard directly and it is also convenient for the host device to receive data.
- ✧ **USB CDC:** It is compliant with the standard USB CDC class specifications defined by the USB-IF and allows the host device to receive data in the way as a serial port does. A driver is needed when using this feature.

**When the scanner is connected to both USB and RS-232 ports on a host device, it will select the USB connection by default.**

---

## USB HID Keyboard

**When the cradle is connected to the USB port on a host device, you can enable the USB HID Keyboard feature by scanning the barcode below. The cradle's transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.**



@INTERF3

\*\* USB HID Keyboard



**If the host device allows keyboard input, then no extra software is needed for HID Keyboard input.**

---

---

## USB Country Keyboard Types

**Keyboard layouts vary from country to country. The default setting is U.S. keyboard.**



@KBWCTY0

\*\* U.S. (English)



@KBWCTY1

Belgium



@KBWCTY2

Brazil



@KBWCTY3

Canada (French)



@KBWCTY4

Czechoslovakia



@KBWCTY6

Finland (Swedish)



@KBWCTY8

Germany/ Austria



@KBWCTY10

Hungary



@KBWCTY5

Denmark



@KBWCTY7

France



@KBWCTY9

Greece



@KBWCTY11

Israel (Hebrew)



@KBWCTV12

Italy



@KBWCTV13

Latin America/ South America



@KBWCTV14

Netherlands (Dutch)



@KBWCTV15

Norway



@KBWCTV16

Poland



@KBWCTV17

Portugal



@KBWCTV18

Romania



@KBWCTV21  
Slovakia



@KBWCTV23  
Sweden



@KBWCTV25  
Turkey\_F



@KBWCTV19  
Russia



@KBWCTV22  
Spain



@KBWCTV24  
Switzerland (German)



@KBWCTV26  
Turkey\_Q



@KBWCTY27

UK



@KBWCTY28

Japan

### Beep on Unknown Character

**Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard. As a result, the scanner fails to transmit the unknown characters.**

**Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.**



@KBWBUC0

\*\* Do Not Beep on Unknown Character



@KBWBUC1

Beep on Unknown Character

---

## Emulate ALT+Keypad

**When Emulate ALT+Keypad is turned on, any ASCII character (0x00 - 0xFF) is sent over the numeric keypad no matter which keyboard type is selected.**

1. **ALT Make**
2. **Enter the number corresponding to a desired character on the keypad.**
3. **ALT Break**

**After Emulate ALT+Keypad ON is selected, you need to choose the code page with which the barcodes were created and to turn Unicode Encoding On or Off depending on the encoding used by the application software.**



@KBWALTO

\*\* Emulate ALT+Keypad OFF



@KBWALTI

Emulate ALT+Keypad ON



Since sending a character involves multiple keystroke emulations, this method

---

appears less efficient.

**E**  
*example*

**Supposing** Emulate ALT+Keypad **is ON**, Unicode Encoding **is Off**, and Code Page 1252 (West European Latin) **is selected**, barcode data "ADF" (65/208/70) **is sent as below:**

"A" -- "ALT Make" + "065" + "ALT Break"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- "ALT Make" + "070" + "ALT Break"

---

## Code Page

**Code pages define the mapping of character codes to characters. If the data received does not display with the proper characters, it may be because the barcode being scanned was created using a code page that is different from the one the host program is expecting. If this is the case, select the code page with which the barcodes were created by scanning the appropriate barcode below. For PDF417, QR Code, Aztec and Data Matrix, besides setting the code page, you also need to set the character encoding in the “Character Encoding” section in Chapter 7. This feature is only effective when Emulate ALT+Keypad is turned on.**



@KBWCPG0

\*\* Code Page 1252 (West European Latin)



@KBWCPG1

Code Page 1251 (Cyrillic)



@KBWCPG2

Code Page 1250 (Central and East European Latin)



@KBWCPG3

Code Page 1253 (Greek)



@KBWCPCG4

Code Page 1254 (Turkish)



@KBWCPCG5

Code Page 1255 (Hebrew)



@KBWCPCG6

Code Page 1256 (Arabic)



@KBWCPCG7

Code Page 1257 (Baltic)



@KBWCPCG8

Code Page 1258 (Vietnamese)



@KBWCPCG9

Code Page 936 (Simplified Chinese,  
GB2312,GBK )



@KBWCPCG10

Code Page 950 (Traditional Chinese, Big5)



@KBWCPG12

Code Page 932 (Japanese, Shift-JIS)



@KBWCPG11

Code Page 874 (Thai)

---

## Unicode Encoding

**Different host program may use different character encodings for handling incoming barcode data. For instance, Microsoft Office Word uses Unicode encoding and therefore you should turn Unicode Encoding on, whereas Microsoft Office Excel or Notepad uses Code Page encoding and therefore you should turn Unicode Encoding off. This feature is only effective when Emulate ALT+Keypad is turned on.**



@KBWCPU0

\*\* Off



@KBWCPU1

On

---

## Function Key Mapping

**When Ctrl+ASCII Mode is selected, function characters (0x00 - 0x1F) are sent as ASCII sequences.**

1. **CTRL Make**
2. **Press function key**
3. **CTRL Break**



@KBWFKM0

\*\* Disable



@KBWFKM1

Ctrl+ASCII Mode

**E**  
*sample*

If Ctrl+ASCII Mode is selected and other parameters of USB HID Keyboard adopt factory defaults, barcode data “A<HT>(i.e. Horizontal Tab)F” (0x41/0x09/0x46) is sent as below:

“A” - Keystroke “A”.

<HT> - “Ctrl Make” + Keystroke “I” + “Ctrl Break”

“F” - Keystroke “F”

For some text editors, “Ctrl I” means italic convert. So the output may be “AF”.



Emulate ALT+Keypad ON **prevails over** Ctrl+ASCII Mode.

ASCII Function Key Mapping Table

| ASCII Function | ASCII Value (HEX) | Function Key Mapping Disabled | Ctrl+ASCII      |
|----------------|-------------------|-------------------------------|-----------------|
| <b>NUL</b>     | <b>00</b>         | <b>Null</b>                   | <b>Ctrl+@</b>   |
| <b>SOH</b>     | <b>01</b>         | <b>Keypad Enter</b>           | <b>Ctrl+A</b>   |
| <b>STX</b>     | <b>02</b>         | <b>Caps Lock</b>              | <b>Ctrl+B</b>   |
| <b>ETX</b>     | <b>03</b>         | <b>ALT</b>                    | <b>Ctrl+C</b>   |
| <b>EOT</b>     | <b>04</b>         | <b>Null</b>                   | <b>Ctrl+D</b>   |
| <b>ENQ</b>     | <b>05</b>         | <b>CTRL</b>                   | <b>Ctrl+E</b>   |
| <b>ACK</b>     | <b>06</b>         | <b>Null</b>                   | <b>Ctrl+F</b>   |
| <b>BEL</b>     | <b>07</b>         | <b>Enter</b>                  | <b>Ctrl+G</b>   |
| <b>BS</b>      | <b>08</b>         | <b>Left Arrow</b>             | <b>Ctrl+H</b>   |
| <b>HT</b>      | <b>09</b>         | <b>Horizontal Tab</b>         | <b>Ctrl+I</b>   |
| <b>LF</b>      | <b>0A</b>         | <b>Down Arrow</b>             | <b>Ctrl+J</b>   |
| <b>VT</b>      | <b>0B</b>         | <b>Vertical Tab</b>           | <b>Ctrl+K</b>   |
| <b>FF</b>      | <b>0C</b>         | <b>Delete</b>                 | <b>Ctrl+L</b>   |
| <b>CR</b>      | <b>0D</b>         | <b>Enter</b>                  | <b>Ctrl+M</b>   |
| <b>SO</b>      | <b>0E</b>         | <b>Insert</b>                 | <b>Ctrl+N</b>   |
| <b>SI</b>      | <b>0F</b>         | <b>Esc</b>                    | <b>Ctrl+O</b>   |
| <b>DLE</b>     | <b>10</b>         | <b>F11</b>                    | <b>Ctrl+P</b>   |
| <b>DC1</b>     | <b>11</b>         | <b>Home</b>                   | <b>Ctrl+Q</b>   |
| <b>DC2</b>     | <b>12</b>         | <b>PrintScreen</b>            | <b>Ctrl+R</b>   |
| <b>DC3</b>     | <b>13</b>         | <b>Backspace</b>              | <b>Ctrl+S</b>   |
| <b>DC4</b>     | <b>14</b>         | <b>tab+shift</b>              | <b>Ctrl+T</b>   |
| <b>NAK</b>     | <b>15</b>         | <b>F12</b>                    | <b>Ctrl+U</b>   |
| <b>SYN</b>     | <b>16</b>         | <b>F1</b>                     | <b>Ctrl+V</b>   |
| <b>ETB</b>     | <b>17</b>         | <b>F2</b>                     | <b>Ctrl+W</b>   |
| <b>CAN</b>     | <b>18</b>         | <b>F3</b>                     | <b>Ctrl+X</b>   |
| <b>EM</b>      | <b>19</b>         | <b>F4</b>                     | <b>Ctrl+Y</b>   |
| <b>SUB</b>     | <b>1A</b>         | <b>F5</b>                     | <b>Ctrl+Z</b>   |
| <b>ESC</b>     | <b>1B</b>         | <b>F6</b>                     | <b>Ctrl+[</b>   |
| <b>FS</b>      | <b>1C</b>         | <b>F7</b>                     | <b>Ctrl+ \</b>  |
| <b>GS</b>      | <b>1D</b>         | <b>F8</b>                     | <b>Ctrl+] ]</b> |
| <b>RS</b>      | <b>1E</b>         | <b>F9</b>                     | <b>Ctrl+6</b>   |
| <b>US</b>      | <b>1F</b>         | <b>F10</b>                    | <b>Ctrl+-</b>   |

ASCII Function Key Mapping Table (Continued)

The last five characters (0x1B~0x1F) in the table above apply to US keyboard layout only. The following chart provides the equivalents of these five characters for other countries.

| Country               | Ctrl+ASCII    |                  |                |               |               |  |
|-----------------------|---------------|------------------|----------------|---------------|---------------|--|
| <b>United States</b>  | <b>Ctrl+[</b> | <b>Ctrl+\</b>    | <b>Ctrl+]</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>Belgium</b>        | <b>Ctrl+[</b> | <b>Ctrl+&lt;</b> | <b>Ctrl+]</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>Scandinavia</b>    | <b>Ctrl+8</b> | <b>Ctrl+&lt;</b> | <b>Ctrl+9</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>France</b>         | <b>Ctrl+^</b> | <b>Ctrl+8</b>    | <b>Ctrl+\$</b> | <b>Ctrl+6</b> | <b>Ctrl+=</b> |  |
| <b>Germany</b>        |               | <b>Ctrl+Ã</b>    | <b>Ctrl++</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>Italy</b>          |               | <b>Ctrl+\</b>    | <b>Ctrl++</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>Switzerland</b>    |               | <b>Ctrl+&lt;</b> | <b>Ctrl+..</b> | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>United Kingdom</b> | <b>Ctrl+[</b> | <b>Ctrl+ç</b>    | <b>Ctrl+]</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>Denmark</b>        | <b>Ctrl+8</b> | <b>Ctrl+\</b>    | <b>Ctrl+9</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>Norway</b>         | <b>Ctrl+8</b> | <b>Ctrl+\</b>    | <b>Ctrl+9</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |
| <b>Spain</b>          | <b>Ctrl+[</b> | <b>Ctrl+\</b>    | <b>Ctrl+]</b>  | <b>Ctrl+6</b> | <b>Ctrl+-</b> |  |

---

## Inter-Keystroke Delay

This parameter specifies the delay between emulated keystrokes.



@KBWDLY0

\*\* No Delay



@KBWDLY40

Long Delay (40ms)



@KBWDLY20

Short Delay (20ms)

## Caps Lock

The Caps Lock ON option can invert upper and lower case characters contained in barcode data. This inversion occurs regardless of the state of Caps Lock key on the host device's keyboard.



@KBWCAPO

\*\* Caps Lock OFF



@KBWCAP1

Caps Lock ON



Emulate ALT+Keypad ON/ Convert All to Upper Case/ Convert All to Lower Case **prevails over** Caps Lock ON.

**E**  
*xample*

When the Caps Lock ON feature is selected, barcode data "AbC" is transmitted as "aBc".

---

## Convert Case

You may scan the appropriate barcode below to convert all barcode data to your desired case.



@KBWCAS0

\*\* No Case Conversion



@KBWCAS1

Convert All to Upper Case



@KBWCAS2

Convert All to Lower Case

**E**  
*xample*

When the Convert All to Lower Case **feature is enabled**, barcode data “AbC” is transmitted as “abc”.



If Emulate ALT+Keypad ON **is selected**, Convert All to Lower Case **and** Convert All to Upper Case **do not function**.

## Emulate Numeric Keypad



Do Not Emulate Numeric Keypad 1: **Sending a number (0-9) is emulated as keystroke(s) on main keyboard.**

Emulate Numeric Keypad 1: **Sending a number (0-9) is emulated as keystroke(s) on numeric keypad. The state of Num Lock on the simulated numeric keypad is determined by its equivalent on the host device. If Num Lock on the host device is turned off, the output of simulated numeric keypad is function key instead of number.**

Do Not Emulate Numeric Keypad 2: **Sending “+”, “-”, “\*” and “/” is emulated as keystroke(s) on main keyboard.**

Emulate Numeric Keypad 2: **Sending “+”, “-”, “\*” and “/” is emulated as keystroke(s) on numeric keypad.**



@KBWNUM0

\*\* Do Not Emulate Numeric Keypad 1



@KBWNUM1

Emulate Numeric Keypad 1



@KBWNCHO

\*\* Do Not Emulate Numeric Keypad 2



@KBWNCHI

Emulate Numeric Keypad 2



Emulate ALT+Keypad ON **prevails over** Emulate Numeric Keypad.

**E**  
*example*

**Supposing the Emulate Numeric Keypad 1 feature is enabled:**

**if Num Lock on the host device is ON, “A4.5” is transmitted as “A4.5”;**

**if Num Lock on the host device is OFF, “A4.5” is transmitted as “.A”:**

- 1. “A” is sent on main keyboard;**
- 2. “4” is sent as the function key “Cursor Move to Left”;**
- 3. “.” is sent on main keyboard;**
- 4. “5” is not sent as it does not correspond to any function key.**

---

## Polling Rate

**This parameter specifies the polling rate for a USB keyboard. If the Host drops characters, change the polling rate to a bigger value.**



@KBWPOR0

1ms



@KBWPOR1

2ms



@KBWPOR2

3ms



@KBWPOR3

\*\* 4ms



@KBWPOR4

5ms



@KBWPOR5

6ms



@KBWPOR6

7ms



@KBWPOR7

8ms



@KBWPOR8

9ms



@KBWPOR9

10ms

---

## USB CDC

If your cradle is connected to the USB port on a host device, the USB CDC feature allows the host device to receive data in the way as a serial port does. A driver is needed when using this feature. You may download it from our website at [www.newlandaidc.com](http://www.newlandaidc.com).



@INTERF8  
USB CDC

## USB HID-POS

### Introduction

The HID-POS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than keyboard emulation.

#### Features:

- ✧ HID based, no custom driver required.
- ✧ Way more efficient in communication than keyboard emulation and traditional RS-232 interface.

Note: HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



@INTERF8  
USB HID-POS

Access the Scanner with Your Program

Use **CreateFile** to access the scanner as a HID device and then use **ReadFile** to deliver the scanned data to the application program. Use **WriteFile** to send data to the scanner.

For detailed information about USB and HID interfaces, go to [www.USB.org](http://www.USB.org).

Acquire Scanned Data

After a barcode is decoded, the scanner sends an input report as below:

|       | Bit                                       |   |   |   |   |   |   |                        |
|-------|---|---|---|---|---|---|---|------------------------|
| Byte  | 7   | 6 | 5 | 4 | 3 | 2 | 1 | 0                      |
| 0     | Report ID = 0x02                          |   |   |   |   |   |   |                        |
| 1     | Barcode Length                            |   |   |   |   |   |   |                        |
| 2-57  | Decoded Data (1-56)                       |   |   |   |   |   |   |                        |
| 58-61 | Reserved (1-4)                            |   |   |   |   |   |   |                        |
| 62    | Newland Symbology Identifier or N/C: 0x00 |   |   |   |   |   |   |                        |
| 63    | -   | - | - | - | - | - | - | Decoded data continued |

Send Command to the Scanner

This output report is used to send commands to the scanner. All programming commands can be used.

|      | Bit               |   |   |   |   |   |   |   |
|------|-------------------|---|---|---|---|---|---|---|
| Byte | 7                 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| 0    | Report ID = 0x04  |   |   |   |   |   |   |   |
| 1    | Length of command |   |   |   |   |   |   |   |
| 2-62 | Command           |   |   |   |   |   |   |   |

---

|    |   |   |   |   |   |   |   |                   |
|----|---|---|---|---|---|---|---|-------------------|
| 63 | - | - | - | - | - | - | - | Command continued |
|----|---|---|---|---|---|---|---|-------------------|

## VID/PID

**USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A range of PIDs are used for each Newland product family. Every PID contains a base number and interface type (keyboard, COM port, etc.).**

| Product       | Interface               | PID (Hex)   | PID (Dec)    |
|---------------|-------------------------|-------------|--------------|
| <b>NVH300</b> | <b>USB HID Keyboard</b> | <b>2E22</b> | <b>11810</b> |
|               | <b>USB CDC</b>          | <b>2E06</b> | <b>11782</b> |
|               | <b>USB HID-POS</b>      | <b>2E10</b> | <b>11792</b> |

---

## Chapter 6 Symbologies

### Introduction

**Every symbology (barcode type) has its own unique attributes. This chapter provides programming barcodes for configuring the scanner so that it can identify various symbologies. It is recommended to disable those that are rarely used to increase the efficiency of the scanner.**

### Global Settings

#### Enable/Disable All Symbologies

**If the Disable All Symbologies feature is enabled, the scanner will not be able to read any non-programming barcodes except the programming barcodes.**



@ALLEN1

Enable All Symbologies



@ALLEN0

Disable All Symbologies

---

## Enable/Disable 1D Symbologies



@ALL1DC1

Enable 1D Symbologies



@ALL1DC0

Disable 1D Symbologies

## Enable/Disable 2D Symbologies



@ALL2DC1

Enable 2D Symbologies

 


@ALL2DC0

Disable 2D Symbologies



**Enable Disable 2D Symbologies, the Programming Barcode of 2D Data Martrix in this User Guide will be invalid. It is recommended to use NSet to reactive Data Matrix or scan these barcodes below.**



#SETUPE1

Enter Setup



@DMCENA1

Enable Data Matrix



#SETUPE0

Exit Setup

---

## Image Brightness Adaptation

**The two parameters of image brightness adaptation 1 and 2, which are linkage relations, are set to adapt to the brightness of the image. When the image is too dark, two parameters can be adjusted down at the same time; When the image is too bright, you can try to raise both parameters at the same time.**



@CCFCTV

Image Brightness Adaptation 1



@CCFMTV

Image Brightness Adaptation 2

## ID Decoding Complexity

**The Decoding Complexity parameter selects the decoding algorithm according to the printing/marking technique used to create the symbol and on the overall printing/marking quality.**

- ✧ **Low: For no stain, wrinkle and other high-quality barcodes;**
- ✧ **Medium: Bar code with general quality such as certain dirt, fold, etc;**
- ✧ **High: For Bar code with poor printing quality.**



@CCF1DC0

Low



@CCF1DC2

High



@CCF1DC1

\*\*Medium

1D Inverse



@CCF1V0

Regular



@CCF1V2

\*\*Regular and Inverse

---

## Code 128

### Restore Factory Defaults



@128DEF

Restore the Factory Defaults of Code 128

### Enable/Disable Code 128



@128ENA1

\*\* Enable Code 128



@128ENA0

Disable Code 128



**If the scanner fails to identify Code 128 barcodes, you may first try this solution by scanning the Enable Code 128 barcode.**

---

## Set Length Range for Code 128

The scanner can be configured to only decode Code 128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@128MIN

Set the Minimum Length (Default: 1)



@128MAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes Code 128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 128 barcodes with that length are to be decoded.



Set the scanner to decode Code 128 barcodes containing between 8 and 12 characters:

1. Scan the Set the Minimum Length barcode.
2. Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.
3. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.
4. Scan the Set the Maximum Length barcode.
5. Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.
6. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.

---

## EAN-8

### Restore Factory Defaults



@EA8DEF

Restore the Factory Defaults of EAN-8

### Enable/Disable EAN-8



@EA8ENA1

\*\* Enable EAN-8



@EA8ENA0

Disable EAN-8



**If the scanner fails to identify EAN-8 barcodes, you may first try this solution by scanning the Enable EAN-8 barcode.**

---

## Transmit Check Character

**EAN-8 is 8 digits in length with the last one as its check character used to verify the integrity of the data.**



@EA8CHK2

\*\* Transmit EAN-8 Check Character



@EA8CHK1

Do Not Transmit EAN-8 Check  
Character

## 2-Digit Add-On Code

**An EAN-8 barcode can be augmented with a two-digit add-on code to form a new one. In the example below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is a two-digit add-on code.**





@EA8AD20

\*\* Disable 2-Digit Add-On Code



@EA8AD21

Enable 2-Digit Add-On Code



Disable 2-Digit Add-On Code: **The scanner decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus 2-digit add-on barcode. It can also decode EAN-8 barcodes without 2-digit add-on codes.**

Enable 2-Digit Add-On Code: **The scanner decodes a mix of EAN-8 barcodes with and without 2-digit add-on codes.**

---

## 5-Digit Add-On Code

An EAN-8 barcode can be augmented with a five-digit add-on code to form a new one. In the example below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is a five-digit add-on code.



@EA8AD50

\*\* Disable 5-Digit Add-On Code



@EA8AD51

Enable 5-Digit Add-On Code



**Disable 5-Digit Add-On Code: The scanner decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus 5-digit add-on barcode. It can also decode EAN-8 barcodes without 5-digit add-on codes.**

**Enable 5-Digit Add-On Code: The scanner decodes a mix of EAN-8 barcodes with and without 5-digit add-on codes.**

## Add-On Code Required

**When EAN-8 Add-On Code Required is selected, the scanner will only read EAN-8 barcodes that contain add-on codes.**



@EA8REQ1

EAN-8 Add-On Code Required



@EA8REQ0

\*\* EAN-8 Add-On Code Not Required

### Add-On Code Separator

**When this feature is on, there is a space between the data from the barcode and the data from the add-on code. When turned off, there is no space.**



@EA8SEP0

\*\* Off



@EA8SEP1

On

### Convert EAN-8 to EAN-13

Convert EAN-8 to EAN-13: **Convert EAN-8 decoded data to EAN-13 format before transmission. After conversion, the data follows EAN-13 format and is affected by EAN-13 programming selections (e.g., Check Character).**

Do Not Convert EAN-8 to EAN-13: **EAN-8 decoded data is transmitted as EAN-8 data, without**

---

**conversion.**



**@EA8EXPO**

\*\* Do Not Convert EAN-8 to EAN-13



**@EA8EXPI**

Convert EAN-8 to EAN-13

---

## EAN-13

### Restore Factory Defaults



@E13DEF

Restore the Factory Defaults of EAN-13

### Enable/Disable EAN-13



@E13ENA1

\*\* Enable EAN-13



@E13ENA0

Disable EAN-13



**If the scanner fails to identify EAN-13 barcodes, you may first try this solution by scanning the Enable EAN-13 barcode.**

---

## Transmit Check Character



@E13CHK2

\*\* Transmit EAN-13 Check Character



@E13CHK1

Do Not Transmit EAN-13 Check  
Character

## 2-Digit Add-On Code

**An EAN-13 barcode can be augmented with a two-digit add-on code to form a new one. In the example below, the part surrounded by blue dotted line is an EAN-13 barcode while the part circled by red dotted line is a two-digit add-on code.**



@E13AD20

\*\* Disable 2-Digit Add-On Code



@E13AD21

Enable 2-Digit Add-On Code



Disable 2-Digit Add-On Code: **The scanner decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus 2-digit add-on barcode. It can also decode EAN-13 barcodes without 2-digit add-on codes.**

Enable 2-Digit Add-On Code: **The scanner decodes a mix of EAN-13 barcodes with and without 2-digit add-on codes.**

---

## 5-Digit Add-On Code

An EAN-13 barcode can be augmented with a five-digit add-on code to form a new one. In the example below, the part surrounded by blue dotted line is an EAN-13 barcode while the part circled by red dotted line is a five-digit add-on code.



@E13AD50

\*\* Disable 5-Digit Add-On Code



@E13AD51

Enable 5-Digit Add-On Code



Disable 5-Digit Add-On Code: **The scanner decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus 5-digit add-on barcode. It can also decode EAN-13 barcodes without 5-digit add-on codes.**

Enable 5-Digit Add-On Code: **The scanner decodes a mix of EAN-13 barcodes with and without 5-digit add-on codes.**

## Add-On Code Required

**When EAN-13 Add-On Code Required is selected, the scanner will only read EAN-13 barcodes that contain add-on codes.**



@E13REQ0

\*\* EAN-13 Add-On Code Not Required



@E13REQ1

EAN-13 Add-On Code Required

### Add-On Code Separator

**When this feature is on, there is a space between the data from the barcode and the data from the add-on code. When turned off, there is no space.**



@E13SEP0

\*\* Off



@E13SEP1

On

### EAN-13 Beginning with 290 Add-On Code Required

**This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “290”. The following settings can be programmed:**

**Require Add-On Code: All EAN-13 barcodes that begin with “290” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on**

---

**code is not found, the EAN-13 barcode is discarded.**

Do Not Require Add-On Code: **If you have selected** Require Add-On Code, **and you want to disable this feature, scan** Do Not Require Add-On Code. **EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.**



@E132900

\*\* Do Not Require Add-On Code



@E132901

Require Add-On Code

### EAN-13 Beginning with 378/379 Add-On Code Required

**This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “378” or “379”. The following settings can be programmed:**

Require Add-On Code: **All EAN-13 barcodes that begin with a “378” or “379” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.**

Do Not Require Add-On Code: **If you have selected** Require Add-On Code, **and you want to disable this feature, scan** Do Not Require Add-On Code. **EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.**



@E133780

\*\* Do Not Require Add-On Code



@E133781

Require Add-On Code

## EAN-13 Beginning with 414/419 Add-On Code Required

**This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “414” or “419”. The following settings can be programmed:**

**Require Add-On Code: All EAN-13 barcodes that begin with a “414” or “419” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.**

**Do Not Require Add-On Code: If you have selected Require Add-On Code, and you want to disable this feature, scan Do Not Require Add-On Code. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.**



@E134140

\*\* Do Not Require Add-On Code



@E134141

Require Add-On Code

## EAN-13 Beginning with 434/439 Add-On Code Required

**This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “434” or “439”. The following settings can be programmed:**

**Require Add-On Code: All EAN-13 barcodes that begin with a “434” or “439” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required**

---

**add-on code is not found, the EAN-13 barcode is discarded.**

Do Not Require Add-On Code: **If you have selected** Require Add-On Code, **and you want to disable this feature, scan** Do Not Require Add-On Code. **EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.**



@E134340

\*\* Do Not Require Add-On Code



@E134341

Require Add-On Code

#### EAN-13 Beginning with 977 Add-On Code Required

**This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “977”. The following settings can be programmed:**

Require Add-On Code: **All EAN-13 barcodes that begin with “977” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.**

Do Not Require Add-On Code: **If you have selected** Require Add-On Code, **and you want to disable this feature, scan** Do Not Require Add-On Code. **EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.**



@E139770

\*\* Do Not Require Add-On Code



@E139771

Require Add-On Code

---

## EAN-13 Beginning with 978 Add-On Code Required

**This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “978”. The following settings can be programmed:**

**Require Add-On Code: All EAN-13 barcodes that begin with “978” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.**

**Do Not Require Add-On Code: If you have selected Require Add-On Code, and you want to disable this feature, scan Do Not Require Add-On Code. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.**



@E139780

\*\* Do Not Require Add-On Code



@E139781

Require Add-On Code

## EAN-13 Beginning with 979 Add-On Code Required

**This setting programs the scanner to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “979”. The following settings can be programmed:**

**Require Add-On Code: All EAN-13 barcodes that begin with “979” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.**

**Do Not Require Add-On Code: If you have selected Require Add-On Code, and you want to disable this feature, scan Do Not Require Add-On Code. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.**



@E139790

\*\* Do Not Require Add-On Code



@E139791

Require Add-On Code

## UPC-E

Restore Factory Defaults



@UPEDEF

Restore the Factory Defaults of UPC-E

Enable/Disable UPC-E



@UPEENAI

\*\* Enable UPC-E



@UPEENAO

Disable UPC-E

---

## Transmit Check Character

**UPC-E is 8 digits in length with the last one as its check character used to verify the integrity of the data.**



@UPECHK2

\*\* Transmit UPC-E Check Character



@UPECHK1

Do Not Transmit UPC-E Check  
Character

## 2-Digit Add-On Code

**A UPC-E barcode can be augmented with a two-digit add-on code to form a new one. In the example below, the part surrounded by blue dotted line is a UPC-E barcode while the part circled by red dotted line is a two-digit add-on code.**



@UPEAD20

\*\* Disable 2-Digit Add-On Code



@UPEAD21

Enable 2-Digit Add-On Code



Disable 2-Digit Add-On Code: **The scanner decodes UPC-E and ignores the add-on code when presented with a UPC-E plus 2-digit add-on barcode. It can also decode UPC-E barcodes without 2-digit add-on codes.**

Enable 2-Digit Add-On Code: **The scanner decodes a mix of UPC-E barcodes with and without 2-digit add-on codes.**

### 5-Digit Add-On Code

**A UPC-E barcode can be augmented with a five-digit add-on code to form a new one. In the example below, the part surrounded by blue dotted line is a UPC-E barcode while the part circled by red dotted line is a five-digit add-on code.**



@UPEAD50

\*\* Disable 5-Digit Add-On Code



@UPEAD51

Enable 5-Digit Add-On Code



Disable 5-Digit Add-On Code: **The scanner decodes UPC-E and ignores the add-on code when presented with a UPC-E plus 5-digit add-on barcode. It can also decode UPC-E barcodes without 5-digit add-on codes.**

Enable 5-Digit Add-On Code: **The scanner decodes a mix of UPC-E barcodes with and without 5-digit add-on codes.**

---

## Add-On Code Required

**When** UPC-E Add-On Code Required **is selected**, the scanner will only read UPC-E barcodes that **contain add-on codes**.



@UPEREQ1

UPC-E Add-On Code Required



@UPEREQ0

\*\* UPC-E Add-On Code Not Required

## Add-On Code Separator

**When this feature is on**, there is a space between the data from the barcode and the data from the **add-on code**. **When turned off**, there is no space.



@UPESEPO

\*\* Off



@UPESEPI

On



---

## Transmit Preamble Character

**Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-E barcode. Select one of the following options for transmitting UPC-E preamble to the host device: transmit system character only, transmit system character and country code (“0” for USA), or transmit no preamble.**



@UPEPRE1

\*\* System Character



@UPEPRE0

No Preamble



@UPEPRE2

System Character & Country Code

## Convert UPC-E to UPC-A

Convert UPC-E to UPC-A: **Convert UPC-E decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Character).**

Do Not Convert UPC-E to UPC-A: **UPC-E decoded data is transmitted as UPC-E data, without conversion.**



@UPEEXP0

\*\* Do Not Convert UPC-E to UPC-A



@UPEEXP1

Convert UPC-E to UPC-A

UPC-A

Restore Factory Defaults



@UPADEF

Restore the Factory Defaults of UPC-A

Enable/Disable UPC-A



@UPAENA1

\*\* Enable UPC-A



@UPAENAO

Disable UPC-A



If the scanner fails to identify UPC-A barcodes, you may first try this solution by scanning the Enable UPC-A barcode.

### Transmit Check Character

UPC-A is 13 digits in length with the last one as its check character used to verify the integrity of the data.



@UPACHK2

\*\* Transmit UPC-A Check Character



@UPACHK1

Do Not Transmit UPC-A Check Character

### 2-Digit Add-On Code

A UPC-A barcode can be augmented with a two-digit add-on code to form a new one. In the example below, the part surrounded by blue dotted line is a UPC-A barcode while the part circled by red dotted line is a two-digit add-on code.



@UPAAD20

\*\* Disable 2-Digit Add-On Code



@UPAAD21

Enable 2-Digit Add-On Code



Disable 2-Digit Add-On Code: **The scanner decodes UPC-A and ignores the add-on code when presented with a UPC-A plus 2-digit add-on barcode. It can also decode UPC-A barcodes without 2-digit add-on codes.**

Enable 2-Digit Add-On Code: **The scanner decodes a mix of UPC-A barcodes with and without 2-digit add-on codes.**

---

## 5-Digit Add-On Code

**A UPC-A barcode can be augmented with a five-digit add-on code to form a new one. In the example below, the part surrounded by blue dotted line is a UPC-A barcode while the part circled by red dotted line is a five-digit add-on code.**



@UPAAD50

\*\* Disable 5-Digit Add-On Code



@UPAAD51

Enable 5-Digit Add-On Code



**Disable 5-Digit Add-On Code: The scanner decodes UPC-A and ignores the add-on code when presented with a UPC-A plus 5-digit add-on barcode. It can also decode UPC-A barcodes without 5-digit add-on codes.**

**Enable 5-Digit Add-On Code: The scanner decodes a mix of UPC-A barcodes with and without 5-digit add-on codes.**

## Add-On Code Required

**When UPC-A Add-On Code Required is selected, the scanner will only read UPC-A barcodes that contain add-on codes.**



@UPAREQ1

UPC-A Add-On Code Required



@UPAREQ0

\*\* UPC-A Add-On Code Not Required

### Add-On Code Separator

**When this feature is on, there is a space between the data from the barcode and the data from the add-on code. When turned off, there is no space.**



@UPASEP0

\*\* Off



@UPASEP1

On

### Transmit Preamble Character

**Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-A barcode. Select one of the following options for transmitting UPC-A preamble to the host device: transmit system character only, transmit system character and country code ("0" for USA), or transmit no preamble.**



@UPAPRE0

No Preamble



@UPAPRE1

\*\* System Character



@UPAPRE2

System Character & Country Code

---

## Interleaved 2 of 5

### Restore Factory Defaults



@I25DEF

Restore the Factory Defaults of Interleaved 2 of 5

### Enable/Disable Interleaved 2 of 5



@I25ENA1

\*\* Enable Interleaved 2 of 5



@I25ENA0

Disable Interleaved 2 of 5



**If the scanner fails to identify Interleaved 2 of 5 barcodes, you may first try this solution by scanning the Enable Interleaved 2 of 5 barcode.**

---

## Set Length Range for Interleaved 2 of 5

The scanner can be configured to only decode Interleaved 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@125MIN

Set the Minimum Length (Default: 6)



@125MAX

Set the Maximum Length (Default: 80)



If minimum length is set to be greater than maximum length, the scanner only decodes Interleaved 2 of 5 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Interleaved 2 of 5 barcodes with that length are to be decoded.

## Example

Set the scanner to decode Interleaved 2 of 5 barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8”** from the “Digit Barcodes” section in Appendix.
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes”** section in Appendix.
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2”** from the “Digit Barcodes” section in

---

---

## Appendix.

### 6. Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.

#### Check Character Verification

**A check character is optional for Interleaved 2 of 5 and can be added as the last character. It is a calculated value used to verify the integrity of the data.**

- ✧ **Disable: The scanner transmits Interleaved 2 of 5 barcodes as is.**
- ✧ **Do Not Transmit Check Character After Verification: The scanner checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.**
- ✧ **Transmit Check Character After Verification: The scanner checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.**

**Since Interleaved 2 of 5 must always have an even number of digits, a zero may need to be added as the first digit when the check character is added. The check character is automatically generated when making Interleaved 2 of 5 barcodes.**



@I25CHK0

\*\* Disable



@I25CHK1

Do Not Transmit Check Character After  
Verification



@I25CHK2

Transmit Check Character After  
Verification



**If the Do Not Transmit Check Character After Verification option is enabled, Interleaved 2 of 5 barcodes with a length that is less than the configured minimum length after having the check character excluded will not be decoded. (For example, when the Do Not Transmit Check Character After Verification option is enabled and the minimum length is set to 4, Interleaved 2 of 5 barcodes with a total length of 4 characters including the check character cannot be read.)**

## ITF-14

**ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check character.**

**ITF-14 priority principle: For the Interleaved 2 of 5 barcodes with a length of 14 characters and the last character as the check character, the ITF-14 configurations shall take precedence over the Interleaved 2 of 5 settings.**

Restore Factory Defaults



@I14DEF

Restore the Factory Defaults of ITF-14

---

## Enable/Disable ITF-14



@I14ENA0

\*\* Disable ITF-14



@I14ENA1

Enable ITF-14 But Do Not Transmit Check  
Character



@I14ENA2

Enable ITF-14 and Transmit Check  
Character



**An example of the ITF-14 priority principle: when ITF-14 is enabled and Interleaved 2 of 5 is disabled, the scanner only decodes Interleaved 2 of 5 barcodes with a length of 14 characters and the last character as the check character.**

---

## ITF-6

**ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check character.**

**ITF-6 priority principle: For the Interleaved 2 of 5 barcodes with a length of 6 characters and the last character as the check character, the ITF-6 configurations shall take precedence over the Interleaved 2 of 5 settings.**

Restore Factory Defaults



@IT6DEF

Restore the Factory Defaults of ITF-6

Enable/Disable ITF-6



@IT6ENA0

\*\* Disable ITF-6



@IT6ENA1

Enable ITF-6 But Do Not Transmit Check Character



@IT6ENA2

Enable ITF-6 and Transmit Check Character



**An example of the ITF-6 priority principle: when ITF-6 is enabled and Interleaved 2 of 5 is disabled, the scanner only decodes Interleaved 2 of 5 barcodes with a length of 6 characters and the last character as the check character.**

---

## Matrix 2 of 5

### Restore Factory Defaults



@M25DEF

Restore the Factory Defaults of Matrix 2 of 5

### Enable/Disable Matrix 2 of 5



@M25ENA1

\*\* Enable Matrix 2 of 5



@M25ENA0

Disable Matrix 2 of 5



**If the scanner fails to identify Matrix 2 of 5 barcodes, you may first try this solution by scanning the Enable Matrix 2 of 5 barcode.**

---

## Set Length Range for Matrix 2 of 5

The scanner can be configured to only decode Matrix 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@M25MIN

Set the Minimum Length (Default: 4)



@M25MAX

Set the Maximum Length (Default: 80)



If minimum length is set to be greater than maximum length, the scanner only decodes Matrix 2 of 5 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Matrix 2 of 5 barcodes with that length are to be decoded.



Set the scanner to decode Matrix 2 of 5 barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8”** from the “Digit Barcodes” section in Appendix.
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes”** section in Appendix.
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2”** from the “Digit Barcodes” section in Appendix.

- 
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**A check character is optional for Matrix 2 of 5 and can be added as the last character. It is a calculated value used to verify the integrity of the data.**

- ✧ **Disable: The scanner transmits Matrix 2 of 5 barcodes as is.**
- ✧ **Do Not Transmit Check Character After Verification: The scanner checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.**
- ✧ **Transmit Check Character After Verification: The scanner checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.**

**Since Matrix 2 of 5 must always have an even number of digits, a zero may need to be added as the first digit when the check character is added. The check character is automatically generated when making Matrix 2 of 5 barcodes.**



@M25CHK0

\*\* Disable



@M25CHK1

Do Not Transmit Check Character After  
Verification



@M25CHK2

Transmit Check Character After Verification



**If the Do Not Transmit Check Character After Verification option is enabled, Matrix 2 of 5 barcodes with a length that is less than the configured minimum length after having the check character excluded will not be decoded. (For example, when the Do Not Transmit Check Character After Verification option is enabled and the minimum length is set to 4, Matrix 2 of 5 barcodes with a total length of 4 characters including the check character cannot be read.)**

---

## Code 39

### Restore Factory Defaults



@C39DEF

Restore the Factory Defaults of Code 39

### Enable/Disable Code 39



@C39ENA1

\*\* Enable Code 39



@C39ENA0

Disable Code 39



**If the scanner fails to identify Code 39 barcodes, you may first try this solution by scanning the Enable Code 39 barcode.**

---

## Set Length Range for Code 39

The scanner can be configured to only decode Code 39 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@C39MIN

Set the Minimum Length (Default: 1)



@C39MAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes Code 39 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 39 barcodes with that length are to be decoded.



Set the scanner to decode Code 39 barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.**
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**
6. **Scan the** Save **barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**A check character is optional for Code 39 and can be added as the last character. It is a calculated value used to verify the integrity of the data.**

- ✧ **Disable: The scanner transmits Code 39 barcodes as is.**
- ✧ **Do Not Transmit Check Character After Verification: The scanner checks the integrity of all Code 39 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.**
- ✧ **Transmit Check Character After Verification: The scanner checks the integrity of all Code 39 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.**



@C39CHK0  
\*\* Disable



@C39CHK1  
Do Not Transmit Check Character After  
Verification



@C39CHK2  
Transmit Check Character After Verification



**If the Do Not Transmit Check Character After Verification option is enabled, Code 39 barcodes with a length that is less than the configured minimum length after having**

---

**the check character excluded will not be decoded. (For example, when the Do Not Transmit Check Character After Verification option is enabled and the minimum length is set to 4, Code 39 barcodes with a total length of 4 characters including the check character cannot be read.)**

---

## Transmit Start/Stop Character

**Code 39 uses an asterisk (\*) for both the start and the stop characters. You can choose whether or not to transmit the start/stop characters by scanning the appropriate barcode below.**



@C39TSC0

\*\* Do Not Transmit Start/Stop  
Character



@C39TSC1

Transmit Start/Stop Character

## Enable/Disable Code 39 Full ASCII

**The scanner can be configured to identify all ASCII characters by scanning the appropriate barcode below.**



@C39ASC0

\*\* Disable Code 39 Full ASCII



@C39ASC1

Enable Code 39 Full ASCII



---

## Codabar

### Restore Factory Defaults



@CBADEF

Restore the Factory Defaults of Codabar

### Enable/Disable Codabar



@CBAENA1

\*\* Enable Codabar



@CBAENAO

Disable Codabar



**If the scanner fails to identify Codabar barcodes, you may first try this solution by scanning the Enable Codabar barcode.**

---

## Set Length Range for Codabar

The scanner can be configured to only decode Codabar barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@CBAMIN

Set the Minimum Length (Default: 2)



@CBAMAX

Set the Maximum Length (Default: 60)



If minimum length is set to be greater than maximum length, the scanner only decodes Codabar barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Codabar barcodes with that length are to be decoded.



Set the scanner to decode Codabar barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.**
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**

- 
- 
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**A check character is optional for Codabar and can be added as the last character. It is a calculated value used to verify the integrity of the data.**

- ✧ **Disable: The scanner transmits Codabar barcodes as is.**
- ✧ **Do Not Transmit Check Character After Verification: The scanner checks the integrity of all Codabar barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.**
- ✧ **Transmit Check Character After Verification: The scanner checks the integrity of all Codabar barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.**



@CBACHK0

\*\* Disable



@CBACHK1

Do Not Transmit Check Character After  
Verification



@CBACHK2

Transmit Check Character After Verification



**If the Do Not Transmit Check Character After Verification option is enabled, Codabar barcodes with a length that is less than the configured minimum length after having**

---

---

**the check character excluded will not be decoded. (For example, when the Do Not Transmit Check Character After Verification option is enabled and the minimum length is set to 4, Codabar barcodes with a total length of 4 characters including the check character cannot be read.)**

---

## Start/Stop Character

**You can set the start/stop characters and choose whether or not to transmit the start/stop characters by scanning the appropriate barcode below.**



@CBATSCO

\*\* Do Not Transmit Start/Stop  
Character



@CBATSCI

Transmit Start/Stop Character



@CBASCF0

\*\* ABCD/ABCD as the Start/Stop  
Character



@CBASCF1

ABCD/TN\*E as the Start/Stop Character



@CBASCF2

abcd/abcd as the Start/Stop Character



@CBASCF3

abcd/tn\*e as the Start/Stop Character

---

## Code 93

### Restore Factory Defaults



@C93DEF

Restore the Factory Defaults of Code 93

### Enable/Disable Code 93



@C93ENA1

Enable Code 93



@C93ENA0

\*\* Disable Code 93



**If the scanner fails to identify Code 93 barcodes, you may first try this solution by scanning the Enable Code 93 barcode.**

---

## Set Length Range for Code 93

The scanner can be configured to only decode Code 93 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@C93MIN

Set the Minimum Length (Default: 1)



@C93MAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes Code 93 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 93 barcodes with that length are to be decoded.



Set the scanner to decode Code 93 barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.**
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**

- 
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**Check characters are optional for Code 93 and can be added as the last two characters, which are calculated values used to verify the integrity of the data.**

- ✧ Disable: **The scanner transmits Code 93 barcodes as is.**
- ✧ Do Not Transmit Check Character After Verification: **The scanner checks the integrity of all Code 93 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.**
- ✧ Transmit Check Character After Verification: **The scanner checks the integrity of all Code 93 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.**



@C93CHK0

Disable



@C93CHK1

\*\* Do Not Transmit Check Character After Verification



@C93CHK2

Transmit Check Character After Verification



**If the Do Not Transmit Check Character After Verification option is enabled, Code 93 barcodes with a length that is less than the configured minimum length after having**

---

**the two check characters excluded will not be decoded. (For example, when the Do Not Transmit Check Character After Verification option is enabled and the minimum length is set to 4, Code 93 barcodes with a total length of 4 characters including the two check characters cannot be read.**

---

## GS1-128 (UCC/EAN-128)

Restore Factory Defaults



@GS1DEF

Restore the Factory Defaults of GS1-128

Enable/Disable GS1-128



@GS1ENA1

\*\* Enable GS1-128



@GS1ENA0

Disable GS1-128



**If the scanner fails to identify GS1-128 barcodes, you may first try this solution by scanning the Enable GS1-128 barcode.**

---

## AIM 128

### Restore Factory Defaults



@AIMDEF

Restore the Factory Defaults of AIM 128

### Enable/Disable AIM 128



@AIMENA1

Enable AIM128



@AIMENA0

\*\* Disable AIM 128



If the scanner fails to identify AIM 128 barcodes, you may first try this solution by

---

**scanning the** Enable AIM 128 **barcode.**

Set Length Range for AIM 128

The scanner can be configured to only decode AIM 128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@AIMMIN

Set the Minimum Length (Default: 1)



@AIMMAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes GS1-128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only GS1-128 barcodes with that length are to be decoded.

**E**  
*sample*

Set the scanner to decode AIM 128 barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8”** from the “Digit Barcodes” section in Appendix.
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes”** section in Appendix.

- 
4. **Scan the** Set the Maximum Length **barcode.**
  5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**
  6. **Scan the** Save **barcode from the “Save/Cancel Barcodes” section in Appendix.**

## ISBT 128

### Restore Factory Defaults



@IBTDEF

Restore the Factory Defaults of ISBT 128

### Enable/Disable ISBT 128



@IBTENA1

Enable ISBT 128



@IBTENA0

\*\* Disable ISBT 128



**If the scanner fails to identify ISBT-128 barcodes, you may first try this solution by scanning the Enable ISBT-128 barcode.**

---

## Code 11

### Restore Factory Defaults



@C11DEF

Restore the Factory Defaults of Code 11

### Enable/Disable Code 11



@C11ENA1

Enable Code 11



@C11ENA0

\*\* Disable Code 11



**If the scanner fails to identify Code 11 barcodes, you may first try this solution by scanning the Enter Setup barcode and then Enable Code 11 barcode.**



---

## Set Length Range for Code 11

The scanner can be configured to only decode Code 11 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@C11MIN

Set the Minimum Length (Default: 4)



@C11MAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes Code 11 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 11 barcodes with that length are to be decoded.



Set the scanner to decode Code 11 barcodes containing between 8 and 12 characters:

1. **Scan the Set the Minimum Length barcode.**
2. **Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the Set the Maximum Length barcode.**
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**

- 
- 
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**Check characters are optional for Code 11 and can be added as the last one or two characters, which are calculated values used to verify the integrity of the data.**

**If the Disable option is enabled, the scanner transmits Code 11 barcodes as is.**



@C11CHK0

Disable



@C11CHK1

\*\* One Check Character, MOD11



@C11CHK2

Two Check Characters, MOD11/MOD11



@C11CHK3

Two Check Characters, MOD11/MOD9



@C11CHK4

One Check Character, MOD11 (Len <= 10)

Two Check Characters, MOD11/MOD11 (Len > 10)



@C1CHK5

One Check Character, MOD11 (Len<=10)

Two Check Characters, MOD11/MOD9  
(Len>10)

---

## Transmit Check Character



@C11TCK0

Do Not Transmit Code 11 Check  
Character



@C11TCK1

\*\* Transmit Code 11 Check Character



**If you select a check character algorithm and the Do Not Transmit Check Character option, Code 11 barcodes with a length that is less than the configured minimum length after having the check character(s) excluded will not be decoded. (For example, when the One Check Character, MOD11 and Do Not Transmit Check Character options are enabled and the minimum length is set to 4, Code 11 barcodes with a total length of 4 characters including the check character cannot be read.)**

---

## ISBN

### Restore Factory Defaults



@ISBDEF

Restore the Factory Defaults of ISBN

### Enable/Disable ISBN



@ISBENA1

Enable ISBN



@ISBENA0

\*\* Disable ISBN

---

Set ISBN Format



@ISBT101

\*\* ISBN-10



@ISBT100

ISBN-13

---

## ISSN

### Restore Factory Defaults



@ISSDEF

Restore the Factory Defaults of ISSN

### Enable/Disable ISSN



@ISSENA1

Enable ISSN



@ISSENA0

\*\* Disable ISSN

---

## Industrial 2/5

### Restore Factory Defaults



@L25DEF

Restore the Factory Defaults of Industrial 25

### Enable/Disable Industrial 2/5



@L25ENA1

Enable Industrial 2/5



@L25ENA0

\*\* Disable Industrial 2/5



**If the scanner fails to identify Industrial 2/5 barcodes, you may first try this solution by scanning the Enable Industrial 2/5 barcode.**



---

## Set Length Range for Industrial 25

The scanner can be configured to only decode Industrial 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@L25MIN

Set the Minimum Length (Default: 6)



@L25MAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes Industrial 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Industrial 25 barcodes with that length are to be decoded.



Set the scanner to decode Industrial 25 barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8”** from the “Digit Barcodes” section in Appendix.
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes”** section in Appendix.
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2”** from the “Digit Barcodes” section in

---

**Appendix.**

6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**A check character is optional for Industrial 25 and can be added as the last character. It is a calculated value used to verify the integrity of the data.**

- ✧ Disable: **The scanner transmits Industrial 25 barcodes as is.**
- ✧ Do Not Transmit Check Character After Verification: **The scanner checks the integrity of all Industrial 25 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.**
- ✧ Transmit Check Character After Verification: **The scanner checks the integrity of all Industrial 25 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.**



@L25CHK0

\*\* Disable



@L25CHK1

Do Not Transmit Check Character After  
Verification



@L25CHK2

Transmit Check Character After  
Verification



**If the Do Not Transmit Check Character After Verification option is enabled, Industrial**

---

**25 barcodes with a length that is less than the configured minimum length after having the check character excluded will not be decoded. (For example, when the Do Not Transmit Check Character After Verification option is enabled and the minimum length is set to 4, Industrial 25 barcodes with a total length of 4 characters including the check character cannot be read.)**

---

## Standard 2/5

### Restore Factory Defaults



@S25DEF

Restore the Factory Defaults of Standard 25

### Enable/Disable Standard 2/5



@S25ENA1

Enable Standard 25



@S25ENA0

\*\* Disable Standard 25



**If the scanner fails to identify Standard 25 barcodes, you may first try this solution by scanning the Enable Standard 25 barcode.**

---

## Set Length Range for Standard 25

The scanner can be configured to only decode Standard 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@S25MIN

Set the Minimum Length (Default: 6)



@S25MAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes Standard 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Standard 25 barcodes with that length are to be decoded.

### **E***xample*

Set the scanner to decode Standard 25 barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.**
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in**

---

**Appendix.**

6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**A check character is optional for Standard 25 and can be added as the last character. It is a calculated value used to verify the integrity of the data.**

- ✧ Disable: **The scanner transmits Standard 25 barcodes as is.**
- ✧ Do Not Transmit Check Character After Verification: **The scanner checks the integrity of all Standard 25 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.**
- ✧ Transmit Check Character After Verification: **The scanner checks the integrity of all Standard 25 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.**



@S25CHK0

\*\* Disable



@S25CHK1

Do Not Transmit Check Character After  
Verification



@S25CHK2

Transmit Check Character After  
Verification



**If the Do Not Transmit Check Character After Verification option is enabled, Standard**

---

**25 barcodes with a length that is less than the configured minimum length after having the check character excluded will not be decoded. (For example, when the Do Not Transmit Check Character After Verification option is enabled and the minimum length is set to 4, Standard 25 barcodes with a total length of 4 characters including the check character cannot be read.)**

---

## COOP 25

### Restore Factory Defaults



@COPDEF

Restore the Factory Defaults of COOP 25

### Enable/Disable COOP 25



@COPENA1

Enable COOP 25



@COPENA0

\*\*Disable COOP 25

---

## Set Length Range for COOP 25

The scanner can be configured to only decode COOP 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@COPMIN

Set the Minimum Length (Default: 1)



@PLYMAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes COOP 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only COOP 25 barcodes with that length are to be decoded.



Set the scanner to decode COOP 25 barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8”** from the “Digit Barcodes” section in Appendix.
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes”** section in Appendix.
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2”** from the “Digit Barcodes” section in Appendix.

- 
- 
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**A check character is optional for COOP 25 and can be added as the last character. It is a calculated value used to verify the integrity of the data.**

- ✧ Disable: **The scanner transmits COOP 25 barcodes as is.**
- ✧ Enable But Do Not Transmit Check Character: **The scanner checks the integrity of all COOP 25 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.**
- ✧ Enable And Transmit Check Character: **The scanner checks the integrity of all COOP 25 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.**



@COPCHK0

\*\* Disable



@COPCHK1

Enable But Do Not Transmit Check Character



@COPCHK2

Transmit Check Character After  
Verification

---

## Deutsche 14

### Restore Factory Defaults



@D14DEF

Restore the Factory Defaults of Deutsche 14

### Enable/Disable Deutsche 14



@D14ENA1

Enable Deutsche 14 But Do Not  
Transmit Check Digit



@D14ENA2

Enable Deutsche 14 and Transmit  
Check Digit



@D14ENA0

\*\*Disable

---

## Deutsche 12

### Restore Factory Defaults



@D12DEF

Restore the Factory Defaults of Deutsche 12

### Enable/Disable Deutsche 12



@D12ENA1

Enable Deutsche 12 But Do Not  
Transmit Check Digit



@D12ENA2

Enable Deutsche 12 and Transmit  
Check Digit



@DIZENAO

\*\*Disable

---

## Plessey

### Restore Factory Defaults



@PLYDEF

Restore the Factory Defaults of Plessey

### Enable/Disable Plessey



@PLYENA1

Enable Plessey



@PLYENA0

\*\* Disable Plessey



If the scanner fails to identify Plessey barcodes, you may first try this solution by

---

**scanning the** Enable Plessey **barcode.**

---

## Set Length Range for Plessey

The scanner can be configured to only decode Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@PLYMIN

Set the Minimum Length (Default: 4)



@PLYMAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes Plessey barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Plessey barcodes with that length are to be decoded.



Set the scanner to decode Plessey barcodes containing between 8 and 12 characters:

1. **Scan the Set the Minimum Length barcode.**
2. **Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the Set the Maximum Length barcode.**
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**

- 
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**Check characters are optional for Plessey and can be added as the last two characters, which are calculated values used to verify the integrity of the data.**

- ✧ **Disable: The scanner transmits Plessey barcodes as is.**
- ✧ **Do Not Transmit Check Character After Verification: The scanner checks the integrity of all Plessey barcodes to verify that the data complies with the check character algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.**
- ✧ **Transmit Check Character After Verification: The scanner checks the integrity of all Plessey barcodes to verify that the data complies with the check character algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.**



@PLYCHK0

\*\* Disable



@PLYCHK1

Do Not Transmit Check Character After Verification



@PLYCHK2

Transmit Check Character After  
Verification



**If the Do Not Transmit Check Character After Verification option is enabled, Plessey barcodes with a length that is less than the configured minimum length after having**

---

**the check characters excluded will not be decoded. (For example, when the Do Not Transmit Check Character After Verification option is enabled and the minimum length is set to 4, Plessey barcodes with a total length of 4 characters including the check characters cannot be read.)**

---

## MSI-Plessey

### Restore Factory Defaults



@MSIDF

Restore the Factory Defaults of MSI-Plessey

### Enable/Disable MSI-Plessey



@MSIENAT

Enable MSI-Plessey



@MSIENAO

\*\* Disable MSI-Plessey



**If the scanner fails to identify MSI-Plessey barcodes, you may first try this solution by scanning the Enable MSI-Plessey barcode.**



---

## Set Length Range for MSI-Plessey

The scanner can be configured to only decode MSI-Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@MSIMIN

Set the Minimum Length (Default: 4)



@MSIMAX

Set the Maximum Length (Default: 48)



If minimum length is set to be greater than maximum length, the scanner only decodes MSI-Plessey barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only MSI-Plessey barcodes with that length are to be decoded.



Set the scanner to decode MSI-Plessey barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8”** from the “Digit Barcodes” section in Appendix.
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes”** section in Appendix.
4. **Scan the** Set the Maximum Length **barcode.**
5. **Scan the numeric barcodes “1” and “2”** from the “Digit Barcodes” section in

---

**Appendix.**

6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## Check Character Verification

**Check characters are optional for MSI-Plessey and can be added as the last one or two characters, which are calculated values used to verify the integrity of the data.**

**If the Disable option is enabled, the scanner transmits MSI-Plessey barcodes as is.**



@MSICHK0

Disable



@MSICHK1

\*\* One Check Character, MOD10



@MSICHK2

Two Check Characters, MOD10/MOD10



@MSICHK3

Two Check Characters, MOD10/MOD11

---

## Transmit Check Character



@MSITCK1

\*\* Transmit MSI-Plessey Check  
Character



@MSITCK0

Do Not Transmit MSI-Plessey Check Character



**If you select a check character algorithm and the Do Not Transmit Check Character option, MSI-Plessey barcodes with a length that is less than the configured minimum length after having the check character(s) excluded will not be decoded. (For example, when the One Check Character, MOD10 and Do Not Transmit Check Character options are enabled and the minimum length is set to 4, MSI-Plessey barcodes with a total length of 4 characters including the check character cannot be read.)**

---

## QR Code

### Restore Factory Defaults



@QRCDEF

Restore the Factory Defaults of QR Code

### Enable/Disable QR Code



@QRCENA1

\*\* Enable QR Code



@QRCENA0

Disable QR Code



**If the scanner fails to identify QR Code barcodes, you may first try this solution by scanning the Enable QR Code barcode.**

---

## Set Length Range for QR Code

The scanner can be configured to only decode QR Code barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@QRCMIN

Set the Minimum Length (Default: 1)



@QRCMAX

Set the Maximum Length (Default:  
7089)



**Minimum length is not allowed to be greater than maximum length. If you only want to read QR Code barcodes with a specific length, set both minimum and maximum lengths to be that desired length.**

## **E** *example*

Set the scanner to decode QR Code barcodes containing between 8 and 12 characters:

1. **Scan the Set the Minimum Length barcode.**
2. **Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the Set the Maximum Length barcode.**
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**

- 
- 
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## QR Inverse

**Regular barcode: Dark bars on a bright background.**

**Inverse barcode: Bright bars on a dark background.**



@QRCINV0

Decode Regular QR Barcodes Only



@QRCINV2

\*\* Decode Both

## Character Encoding



@QRCENCO

\*\* Default Character Encoding



@QRCENC1

UTF-8

## QR ECI Output



@QRCEC10

Disable QR ECI Output



@QRCEC11

\*\* Enable QR ECI Output

## QR Decoding Complexity

**The Decoding Complexity parameter selects the decoding algorithm according to the printing/marking technique used to create the symbol and on the overall printing/marking quality.**

- ◇ **Low:** For no stain, wrinkle and other high-quality barcodes;
- ◇ **Medium:** Bar code with general quality such as certain dirt, fold, etc;
- ◇ **High:** For Bar code with poor printing quality.



@CCFQRC0

Low



@CCFQRC2

High



@CCFQRC1

\*\*Medium

### Continuous Code



@QRCMFE1

\*\*On



@QRCMFE0

Off

### Dot-peen Code



@QRCDFE1

\*\*On



@QRCDFE0

Off

## Mirror Code

**For QR, when you have enabled Image Mirror, processes reverse printed or marked codes (mirrored images).**



@QRCMRE0

Off



@QRCMRE1

\*\*On

## QR Model 1

**You can set disable and enable QR model 1 through the following setting code.**



@QRCM1E0

Off



@QRCM1E1

\*\*On

## QR Model 2

**Model 2 of QR code is an improved version of model 1, which can also read data smoothly when the QR code is deformed. You can set disable and enable QR model 2 through the following setting code.**



@QRCM2E0

\*\*On



@QRCM2E1

Off

---

---

## Data Matrix

### Restore Factory Defaults



@DMCDEF

Restore the Factory Defaults of Data Matrix

### Enable/Disable Data Matrix



@DMCENAI

\*\* Enable Data Matrix



@DMCENA0

Disable Data Matrix



If the scanner fails to identify Data Matrix barcodes, you may first try this solution by scanning the Enable Data Matrix barcode.

If the Disable 2D Symbologies feature is enabled, the Programming Barcode of 2D Data Matrix in this user guide will lose efficacy. It is recommended to use Setup Tool to reactive Data Matrix or scan these barcodes below.



 
#SETUPE1

Enter Setup



@DMCENA1

Enable Data Matrix



#SETUPE0

Exit Setup

---

## Set Length Range for Data Matrix

The scanner can be configured to only decode Data Matrix barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@DMCMIN

Set the Minimum Length (Default: 1)



@DMCMAX

Set the Maximum Length (Default:  
3116)



**Minimum length is not allowed to be greater than maximum length. If you only want to read Data Matrix barcodes with a specific length, set both minimum and maximum lengths to be that desired length.**

## **E** *sample*

Set the scanner to decode Data Matrix barcodes containing between 8 and 12 characters:

1. **Scan the** Set the Minimum Length **barcode.**
2. **Scan the numeric barcode “8”** from the “Digit Barcodes” section in Appendix.
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes”** section in Appendix.
4. **Scan the** Set the Maximum Length **barcode.**

- 
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**
  6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

## Rectangular Barcode

**Data Matrix has two formats:**

**Square barcodes having the same amount of modules in length and width: 10\*10, 12\*12.... 144\*144.**

**Rectangular barcodes having different amounts of models in length and width: 6\*16, 6\*14...14\*22.**



@DMCREC1

\*\* Enable Rectangular Barcode



@DMCREC0

Disable Rectangular Barcode

## Data Matrix Inverse

**Regular barcode: Dark bars on a bright background.**

**Inverse barcode: Bright bars on a dark background.**



@DMCINV0

Decode Regular Data Matrix Barcodes Only



@DMCINV2

\*\* Decode Both

---

## Character Encoding



@DMCENC0

\*\* Default Character Encoding



@DMCENC1

UTF-8

## Data Matrix ECI Output



@DMCEC10

Disable Data Matrix ECI Output



@DMCEC11

\*\* Enable Data Matrix ECI Output

---

ECC200



@DMCE2E0

Off



@DMCE2E1

\*\* On

ECC0T0140



@DMCE0E0

Off



@DMCE0E1

\*\* On

---

## DM Decoding Complexity

The **Decoding Complexity** parameter selects the decoding algorithm according to the **printing/marking technique** used to create the symbol and on the **overall printing/marking quality**.

- ✧ **Low:** For no stain, wrinkle and other high-quality barcodes;
- ✧ **Medium:** Bar code with general quality such as certain dirt, fold, etc;
- ✧ **High:** For Bar code with poor printing quality.



@CCFDMC0

Low



@CCFDMC1

Medium



@CCFDMC2

\*\*High

---

## Continuous Code



@DMCMFE1

\*\*On



@DMCMFE0

Off

## Dot-peen Code



@DMCDFE1

\*\*On



@DMCDFE0

Off

---

## Mirror Code

**For Data Matrix, when you have enabled Image Mirror, processes reverse printed or marked codes (mirrored images).**



@DMCMRE0

Off



@DMCMRE1

\*\*On

---

## PDF417

Restore Factory Defaults



@PDFDEF

Restore the Factory Defaults of PDF417

Enable/Disable PDF417



@PDFENA1

\*\* Enable PDF417



@PDFENA0

Disable PDF417



**If the scanner fails to identify PDF417 barcodes, you may first try this solution by scanning the Enter Setup barcode and then Enable PDF417 barcode.**

---

## Set Length Range for PDF417

The scanner can be configured to only decode PDF417 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



@PDFMIN

Set the Minimum Length (Default: 1)



@PDFMAX

Set the Maximum Length (Default: 2710)



Minimum length is not allowed to be greater than maximum length. If you only want to read PDF417 barcodes with a specific length, set both minimum and maximum lengths to be that desired length.



Set the scanner to decode PDF417 barcodes containing between 8 and 12 characters:

1. **Scan the Set the Minimum Length barcode.**
2. **Scan the numeric barcode “8” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the Set the Maximum Length barcode.**
5. **Scan the numeric barcodes “1” and “2” from the “Digit Barcodes” section in Appendix.**

- 
6. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**

---

## PDF417 Inverse

**Regular barcode: Dark bars on a bright background.**

**Inverse barcode: Bright bars on a dark background.**



@PDFINV0

Decode Regular PDF417 Barcodes Only



@PDFINV1

Decode Inverse PDF417 Barcodes Only



@PDFINV2

\*\*Decode Both

## Character Encoding



@PDFENC0

\*\* Default Character Encoding



@PDFENCI

UTF-8

---

---

## Chapter 8 Data Formatter

### Introduction

You may use the Data Formatter to modify the scanner's output. For example, you can use the Data Formatter to insert characters at certain points in barcode data or to suppress/ replace/ send certain characters in barcode data as it is scanned.

Normally, when you scan a barcode, it gets outputted automatically; however, when you create a format, you must use a "send" command (see the "Send Commands" section in this chapter) within the format programming to output data. Multiple data formats can be programmed into the scanner. The maximum size of all data formats created is 2048 characters. By default, the data formatter is disabled. Enable it when required. If you have changed data format settings, and wish to clear all formats and return to the factory defaults, scan the Default Data Format code below.



@DFMDEF

Default Data Format

### Add a Data Format

Data format is used to edit barcode data. When you create a data format, you must select one of the four labels (Format\_0, Format\_1, Format\_2 and Format\_3) for your data format, specify the application scope of data format (such as barcode type and data length) and include formatter commands. Multiple data formats may be created using the same label. When scanned data does not match your data format requirements, you will hear the non-match error beep (if the non-match error beep is ON).

There are two methods to program a data format: Programming with barcodes and programming with serial commands.

---

## Programming with Barcodes

**The following explains how to program a data format by scanning the specific barcodes. Scanning any irrelevant barcode or failing to follow the setting procedure will result in programming failure. To find the alphanumeric barcodes needed to create a data format, see the “Digit Barcodes” section in Appendix.**

Step 1: **Scan the Add Data Format barcode.**



@DFMADD

Add Data Format

Step 2: **Select a label (Format\_0 or Format\_1 or Format\_2 or Format\_3).**

**Scan a numeric barcode 0 or 1 or 2 or 3 to label this data format Format\_0 or Format\_1 or Format\_2 or Format\_3.**

Step 3: **Select formatter command type.**

**Specify what type of formatter commands will be used. Scan a numeric barcode “6” to select formatter command type 6. (See the “Formatter Command Type 6” section in this chapter for more information)**

Step 4: **Set interface type**

**Scan 999 for any interface type.**

Step 5: **Set Symbology ID Number**

**Refer to the “Symbology ID Number” section in Appendix and find the ID number of the symbology to which you want to apply the data format. Scan three numeric barcodes for the symbology ID number. If you wish to create a data format for all symbologies, scan 999.**

Step 8: **Set barcode data length**

**Specify what length of data will be acceptable for this symbology. Scan the four numeric barcodes that represent the data length. 9999 is a universal number, indicating all lengths. For example, 32 characters should be entered as 0032.**

Step 9: **Enter formatter command**

**Refer to the “Formatter Command Type 6” section in this chapter. Scan the alphanumeric barcodes**

---

**that represent the command you need to edit data. For example, when a command is F141, you should scan F141.**

Step 10: **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix to save your data format.**

---

Example: **Program a Format\_0 data format using formatter command type 6, Code 128 containing 10 characters applicable, send all characters followed by “A”.**

- |   |  |
|---|--|
| <b>1. Scan the Add Data Format barcode</b>    | <b>Add a data format</b>                             |
| <b>2. Scan the 0 barcode</b>                  | <b>Select Format_0 as the label</b>                  |
| <b>3. Scan the 6 barcode</b>                  | <b>Select formatter command type 6</b>               |
| <b>4. Scan the 9 barcode three times</b>      | <b>All interface types applicable</b>                |
| <b>5. Scan the barcodes 002</b>               | <b>Only Code 128 applicable</b>                      |
| <b>6. Scan the barcodes 0010</b>              | <b>Only a length of 10 characters applicable</b>     |
| <b>7. Scan the alphanumeric barcodes F141</b> | <b>Send all characters followed by “A” (HEX: 41)</b> |
| <b>8. Scan the Save barcode</b>               | <b>Save the data format</b>                          |

**To streamline the programming process, you may as well generate a batch barcode by inputting the command (e.g. @DFMADD069990020010F141;) used to create a data format. See the “Use Batch Barcode” section in Chapter 10 to learn how to put a batch barcode into use.**

**When creating multiple data formats sharing a label, the formats are separated from each other by a vertical bar (|) in the batch command, e.g. @DFMADD069990029999F141|069990039999F142|069990049999F143;.**

---

## Programming with Serial Commands

**A data format can also be created by serial commands (HEX) sent from the host device.** All commands must be entered in uppercase letters.

**The syntax consists of the following elements:**

Prefix: “~<SOH>0000” (HEX: 7E 01 30 30 30 30), **6 characters.**

Storage type: “@” (HEX: 40) or “#” (HEX: 23), **1 character.** “@” means permanent setting which will not be lost by removing power from the scanner or rebooting it; “#” means temporary setting which will be lost by removing power from the scanner or rebooting it.

Add Data Format Command: “DFMADD” (HEX: 44 46 4D 41 44 44), **6 characters.**

Data format label: “0” (HEX: 30) or “1” (HEX: 31) or “2” (HEX: 32) or “3” (HEX: 33), **1 character.** “0”, “1”, “2” and “3” represent Format\_0, Format\_1, Format\_2 and Format\_3 respectively.

Formatter command type: “6” (HEX: 36), **1 character.**

Interface type: “999” (HEX: 39 39 39), **3 characters.**

Symbology ID Number: **The ID number of the symbology to which you want to apply the data format, 3 characters.** 999 indicates all symbologies.

Data length: **The length of data that will be acceptable for this symbology, 4 characters.** 9999 indicates all lengths. For example, 32 characters should be entered as 0032.

Formatter commands: **The command string used to edit data. For more information, see the “Formatter Command Type 6” section in this chapter.**

Suffix: “;<ETX>” (HEX: 3B 03), **2 characters.**

Example: **Program a Format\_0 data format using formatter command type 6, Code 128 containing 10 characters applicable, send all characters followed by “A”.**

**Enter:** 7E 01 30 30 30 30 40 44 46 4D 41 44 44 30 36 39 39 39 30 30 33 39 39 39 39 46 31 34 31 3B 03  
(~<SOH>0000@DFMADD069990020010F141;<ETX>)

**Response:** 02 01 30 30 30 30 40 44 46 4D 41 44 44 30 36 39 39 39 30 30 33 39 39 39 39 46 31 34 31 06 3B 03  
(<STX><SOH>0000@DFMADD069990020010F141<ACK>;<ETX>)

**When creating multiple data formats sharing a label, the formats are separated from each other by a vertical bar (|) in the serial command.**

---

Example: ~<SOH>0000@DFMADD069990020010F141|069990039999F142|069990049999F143;<ETX>

---

## Enable/Disable Data Formatter

**When Data Formatter is disabled, the barcode data is outputted to the host as read, including prefixes and suffixes.**



@DFMENA0

\*\* Disable Data Formatter

**You may wish to require the data to conform to a data format you have created. The following settings can be applied to your data format:**

Enable Data Formatter, Required, Keep Prefix/Suffix: **Scanned data that meets your data format requirements is modified accordingly and gets outputted along with prefixes and suffixes (if prefix and suffix are enabled). Any data that does not match your data format requirements generates an error beep (if Non-Match Error Beep is turned ON) and the data in that barcode is not transmitted.**

Enable Data Formatter, Required, Drop Prefix/Suffix: **Scanned data that meets your data format requirements is modified accordingly and gets outputted without prefixes and suffixes (even if prefix and suffix are enabled). Any data that does not match your data format requirements generates an error beep (if Non-Match Error Beep is turned ON) and the data in that barcode is not transmitted.**

Enable Data Formatter, Not Required, Keep Prefix/Suffix: **Scanned data that meets your data format requirements is modified accordingly and gets outputted along with prefixes and suffixes (if prefix and suffix are enabled). Barcode data that does not match your data format requirements is transmitted as read along with prefixes and suffixes (if prefix and suffix are enabled).**

Enable Data Formatter, Not Required, Drop Prefix/Suffix: **Scanned data that meets your data format requirements is modified accordingly and gets outputted without prefixes and suffixes (even if prefix and suffix are enabled). Barcode data that does not match your data format requirements is transmitted as read along with prefixes and suffixes (if prefix and suffix are enabled).**



@DFMENA1

Enable Data Formatter, Required, Keep Prefix/Suffix



@DFMENA2

Enable Data Formatter, Required, Drop Prefix/Suffix



@DFMENA3

Enable Data Formatter, Not Required, Keep  
Prefix/Suffix



@DFMENA4

Enable Data Formatter, Not Required, Drop  
Prefix/Suffix

## Non-Match Error Beep

**If Non-Match Error Beep is turned ON, the scanner generates an error beep when a barcode is encountered that does not match your required data format.**



@DFMTON0

Non-Match Error Beep Off



@DFMTON1

\*\* Non-Match Error Beep On

---

## Data Format Selection

**After enabling the Data Formatter, you can select a data format you want to use by scanning the appropriate barcode below.**



@DFMUSE0

\*\* Format\_0



@DFMUSE2

Format\_2



@DFMUSE1

Format\_1



@DFMUSE3

Format\_3

---

## Change Data Format for a Single Scan

**You can switch between data formats for a single scan. The next barcode is scanned using the data format selected here, then reverts to the format you have selected above. For example, you may have set your scanner to the data format you saved as Format\_3. You can switch to Format\_1 for a single trigger pull by scanning the Single Scan – Format\_1 barcode below. The next barcode that is scanned uses Format\_1, then reverts back to Format\_3.**

**Note: This setting will be lost by removing power from the scanner, or turning off/ rebooting the device.**



@DFMSIN0

Single Scan – Format\_0



@DFMSIN1

Single Scan – Format\_1



@DFMSIN2

Single Scan – Format\_2



@DFMSIN3

Single Scan – Format\_3

---

## Clear Data Format

**There are two methods to remove data format created from your scanner:**

**Delete one data format: Scan the Clear One barcode, a numeric barcode (0-3) and the Save barcode. For example, to delete Format\_2, you should scan the Clear One barcode, the 2 barcode and the Save barcode**

**Delete all data formats: Scan the Clear All barcode.**



@DFMCAL  
Clear All



@DFMCLR  
Clear One

## Query Data Formats

**You may scan the appropriate barcode below to get the information of data format(s) created by you or preset by manufacturer. For instance, if you have added Format\_0 as per the example in the “Add a Data Format” section in this chapter, scanning the Query Current Data Formats barcode, you will get the result: Data Format0:069990020010F141;.**



@DFMQCU  
Query Current Data Formats



@DFMQFA

Query Preset Data Formats

---

## Formatter Command Type 6

**When working with the Data Formatter, a virtual cursor is moved along your input data string. The following commands are used to both move this cursor to different positions, and to select, replace, and insert data into the final output. For the hex value of ASCII characters involved in the commands, refer to the “ASCII Table” in Appendix.**

### Send Commands

F1 Send all characters

**Syntax=F1xx (xx: The insert character’s hex value)**

**Include in the output message all of the characters from the input message, starting from current cursor position, followed by an insert character.**

F2 Send a number of characters

**Syntax=F2nxx (nn: The numeric value (00-99) for the number of characters; xx: The insert character’s hex value)**

**Include in the output message a number of characters followed by an insert character. Start from the current cursor position and continue for “nn” characters or through the last character in the input message, followed by character “xx.”**

F2 Example: Send a number of characters



**Send the first 10 characters from the barcode above, followed by a carriage return.**

**Command string:** F2100D

**F2 is the “Send a number of characters” command**

**10 is the number of characters to send**

---

**0D is the hex value for a CR**

**The data is output as:** 1234567890

<CR>

F3 Send all characters up to a particular character

**Syntax=F3ssxx (ss: The particular character's hex value; xx: The insert character's hex value)**

**Include in the output message all characters from the input message, starting with the character at the current cursor position and continuing to, but not including, the particular character "ss," followed by character "xx." The cursor is moved forward to the "ss" character.**

F3 Example: Send all characters up to a particular character



**Using the barcode above, send all characters up to but not including "D," followed by a carriage return.**

**Command string:** F3440D

**F3 is the "Send all characters up to a particular character" command**

**44 is the hex value for a "D"**

**0D is the hex value for a CR**

**The data is output as:** 1234567890ABC

<CR>

E9 Send all but the last characters

**Syntax=E9nn (nn: The numeric value (00-99) for the number of characters that will not be sent at the end of the message)**

**Include in the output message all but the last "nn" characters, starting from the current cursor position. The cursor is moved forward to one position past the last input message character included.**

---

F4 Insert a character multiple times

**Syntax=F4xxnn (xx: The insert character's hex value; nn: The numeric value (00-99) for the number of times it should be sent)**

**Send "xx" character "nn" times in the output message, leaving the cursor in the current position.**

E9 and F4 Example: Send all but the last characters, followed by 2 tabs



**Send all characters except for the last 8 from the barcode above, followed by 2 tabs.**

**Command string:** E908F40902

**E9 is the "Send all but the last characters" command**

**08 is the number of characters at the end to ignore**

**F4 is the "Insert a character multiple times" command**

**09 is the hex value for a horizontal tab**

**02 is the number of time the tab character is sent**

**The data is output as:** 1234567890AB<tab><tab>

B3 Insert symbology name

**Insert the name of the barcode's symbology in the output message, without moving the cursor.**

B4 Insert barcode length

**Insert the barcode's length in the output message, without moving the cursor. The length is expressed as a numeric string and does not include leading zeros.**

---

B3 and B4 Example: Insert the symbology name and length



**Send the symbology name and length before the barcode data from the barcode above. Break up these insertions with spaces. End with a carriage return.**

**Command string:** B3F42001B4F42001F10D

**B3 is the “Insert symbology name” command**

**F4 is the “Insert a character multiple times” command**

**20 is the hex value for a space**

**01 is the number of time the space character is sent**

**B4 is the “Insert barcode length” command**

**F4 is the “Insert a character multiple times” command**

**20 is the hex value for a space**

**01 is the number of time the space character is sent**

**F1 is the “Send all characters” command**

**0D is the hex value for a CR**

**The data is output as:** Code128 20 1234567890ABCDEFGHIJ

<CR>

## Move Commands

F5 Move the cursor forward a number of characters

**Syntax=F5nn (nn: The numeric value (00-99) for the number of characters the cursor should be moved ahead)**

---

**Move the cursor ahead “nn” characters from current cursor position.**

F5 Example: Move the cursor forward and send the data



**Move the cursor forward 3 characters, then send the rest of the barcode data from the barcode above.  
End with a carriage return.**

**Command string:** F503F10D

**F5 is the “Move the cursor forward a number of characters” command**

**03 is the number of characters to move the cursor**

**F1 is the “Send all characters” command**

**0D is the hex value for a CR**

**The data is output as:** 4567890ABCDEFGHIJ  
<CR>

F6 Move the cursor backward a number of characters

**Syntax=F6nn (nn: The numeric value (00-99) for the number of characters the cursor should be moved back)**

**Move the cursor back “nn” characters from current cursor position.**

F7 Move the cursor to the beginning

**Syntax=F7**

**Move the cursor to the first character in the input message.**

EA Move the cursor to the end

**Syntax=EA**

---

**Move the cursor to the last character in the input message.**

## Search Commands

F8 Search forward for a character

**Syntax=F8xx (xx: The search character's hex value)**

**Search the input message forward for "xx" character from the current cursor position, leaving the cursor pointing to the "xx" character.**

F8 Example: Send barcode data that starts after a particular character



**Search for the letter "D" in barcodes and send all the data that follows, including the "D". Using the barcode above:**

**Command string:** F844F10D

**F8 is the "Search forward for a character" command**

**44 is the hex value for "D"**

**F1 is the "Send all characters" command**

**0D is the hex value for a CR**

**The data is output as:** DEFGHIJ

<CR>

F9 Search backward for a character

**Syntax=F9xx(xx: The search character's hex value)**

**Search the input message backward for "xx" character from the current cursor position, leaving the cursor pointing to the "xx" character.**

---

B0 Search forward for a string

**Syntax=B0nnnnS (nnnn: The string length (up to 9999); S: The ASCII hex value of each character in the string)**

**Search forward for “S” string from the current cursor position, leaving cursor pointing to “S” string. For example, B0000454657374 will search forward for the first occurrence of the 4-character string “Test.”**

B0 Example: Send barcode data that starts after a string of characters



**Search for the letters “FGH” in barcodes and send all the data that follows, including “FGH.” Using the barcode above:**

**Command string:** B00003464748F10D

**B0 is the “Search forward for a string” command**

**0003 is the string length (3 characters)**

**46 is the hex value for “F”**

**47 is the hex value for “G”**

**48 is the hex value for “H”**

**F1 is the “Send all characters” command**

**0D is the hex value for a CR**

**The data is output as:** FGHIJ

<CR>

B1 Search backward for a string

**Syntax=B1nnnnS (nnnn: The string length (up to 9999); S: The ASCII hex value of each character in the string)**

**Search backward for “S” string from the current cursor position, leaving cursor pointing to “S” string. For example, B1000454657374 will search backward for the first occurrence of the 4-character string**

---

**“Test.”**

E6 Search forward for a non-matching character

**Syntax=E6xx (xx: The search character’s hex value)**

**Search the input message forward for the first non-“xx” character from the current cursor position, leaving the cursor pointing to the non-“xx” character.**

E6 Example: Remove zeros at the beginning of barcode data



**This example shows a barcode that has been zero filled. You may want to ignore the zeros and send all the data that follows. E6 searches forward for the first character that is not zero, then sends all the data after, followed by a carriage return. Using the barcode above:**

**Command string: E630F10D**

**E6 is the “Search forward for a non-matching character” command**

**30 is the hex value for 0**

**F1 is the “Send all characters” command**

**0D is the hex value for a CR**

**The data is output as: 123abc**

<CR>

E7 Search backward for a non-matching character

**Syntax=E7xx(xx: The search character’s hex value)**

**Search the input message backward for the first non-“xx” character from the current cursor position, leaving the cursor pointing to the non-“xx” character.**

---

## Miscellaneous Commands

### FB Suppress characters

**Syntax = FBnnxyy..zz (nn: The numeric value (00-15) for the number of suppressed characters; xxyy..zz: The hex value of the characters to be suppressed)**

**Suppress all occurrences of up to 15 different characters, starting at the current cursor position, as the cursor is advanced by other commands.**

FB Example: Remove spaces in barcode data



12 34\_5\*6 78

**This example shows a barcode that has spaces in the data. You may want to remove the spaces before sending the data. Using the barcode above:**

**Command string:** FB0120F10D

**FB is the “Suppress characters” command**

**01 is the number of the characters to be suppressed**

**20 is the hex value for a space**

**F1 is the “Send all characters” command**

**0D is the hex value for a CR**

**The data is output as:** 1234\_5\*678

<CR>

### E4 Replace characters

**Syntax = E4nnxx<sub>1</sub>xx<sub>2</sub>yy<sub>1</sub>yy<sub>2</sub>...zz<sub>1</sub>zz<sub>2</sub>(nn: The total count of the number of characters (characters to be replaced plus replacement characters; xx<sub>1</sub>: The characters to be replaced, xx<sub>2</sub>: The replacement characters, continuing through zz<sub>1</sub> and zz<sub>2</sub>)**

**Replace up to 15 characters in the output message, without moving the cursor.**

---

E4 Example: Replace zeros with CRs in barcode data



If the barcode has characters that the host application does not want included, you can use the E4 command to replace those characters with something else. In this example, you will replace the zeros in the barcode above with carriage returns.

**Command string:** E402300DF10D

**E4** is the “Replace characters” command

**02** is the total count of characters to be replaced, plus the replacement characters (0 is replaced by CR, so total characters=2)

**30** is the hex value for 0

**0D** is the hex value for a CR (the character that will replace the 0)

**F1** is the “Send all characters” command

**0D** is the hex value for a CR

**The data is output as:** 123

456

78

AB

<CR>

---

BA Replace a string with another

**Syntax = BAnnNN<sub>1</sub>SS<sub>1</sub>NN<sub>2</sub>SS<sub>2</sub>**

**nn:** The count of replacements to be made, if nn=00 or nn>=the number of occurrences of a string to be replaced, then replace all occurrences of that string.

**NN<sub>1</sub>:** The length of the string to be replaced, NN<sub>1</sub>>0.

**SS<sub>1</sub>:** The ASCII hex value of each character in the string to be replaced.

**NN<sub>2</sub>:** The length of replacement string, NN<sub>2</sub>>=0. To replace string "SS<sub>1</sub>" with NUL (i.e. delete string "SS<sub>1</sub>"), you should set NN<sub>2</sub> to 00 and leave out SS<sub>2</sub>.

**SS<sub>2</sub>:** The ASCII hex value of each character in the replacement string.

**From the current cursor position, search forward for the occurrence of "SS<sub>1</sub>" string (of length "NN<sub>1</sub>") and replace the string with "SS<sub>2</sub>" string (of length "NN<sub>2</sub>") in the output message until every "SS<sub>1</sub>" string is replaced or the count of replacements made reaches "nn" times, without moving the cursor.**

BA Example: Replace "23"s with "ABC"s in barcode data



**If the barcode has a string of characters that the host application does not want included, you can use the BA command to replace the string with something else. In this example, you will replace the "23"s in the barcode above with "ABC"s.**

**Command string:** BA0002323303414243F100

**BA is the "Replace a string with another" command**

**00 is the count of replacements to be made, 00 means to replace all occurrences of that string**

**02 is the length of the string to be replaced**

**32 is the hex value for 2 (character in the string to be replaced)**

**33 is the hex value for 3 (character in the string to be replaced)**

---

**03 is the length of the replacement string**

**41 is the hex value for A (character in the replacement string)**

**42 is the hex value for B (character in the replacement string)**

**43 is the hex value for C (character in the replacement string)**

**F1 is the "Send all characters" command**

**00 is the hex value for a NUL**

**The data is output as:** 1ABC4AbcABCR01ABCU

BA Example: Remove only the first occurrence of "23"s in barcode data

**If the barcode has a string of characters that the host application wants removed, you can use the BA command to replace the string with NUL. In this example, you will remove the first occurrence of "23" in the barcode above.**

**Command string:** BA0102323300F100

**BA is the "Replace a string with another" command**

**01 is the count of replacements to be made**

**02 is the length of the string to be replaced**

**32 is the hex value for 2 (character in the string to be replaced)**

**33 is the hex value for 3 (character in the string to be replaced)**

**00 is the length of the replacement string, 00 means to replace the string to be replaced with NUL**

**F1 is the "Send all characters" command**

**00 is the hex value for a NUL**

**The data is output as:** 14Abc23R0123U

---

EF Insert a delay

**Syntax=EFnnnn (nnnn: The delay in 5ms increments, up to 9999)**

**Inserts a delay of up to 49,995 milliseconds (in multiples of 5), starting from the current cursor position. This command can only be used with USB HID Keyboard.**

EF Example: Insert a delay of 1s between the 5<sup>th</sup> and 6<sup>th</sup> character

**Send the first 5 characters in a barcode, wait for 1s, then send the rest of the barcode data.**

**Command string:** F20500EF0200E900

**F2 is the “Send a number of characters” command**

**05 is the number of characters to send**

**00 is the hex value for a Null character**

**EF is the “Insert a delay” command**

**0200 is the delay value (5msX200=1000ms=1s)**

**E9 is the “Send all but the last characters” command**

**00 is the number of characters that will not be sent at the end of the message**

---

## Chapter 9 Prefix & Suffix

### Introduction

A 1D barcode could contain digits, letters, symbols, etc. A 2D barcode could contain more data, such as Chinese characters and other multi-byte characters. However, in real applications, they do not and should not have all information we need, such as barcode type, data acquisition time and delimiter, in order to keep the barcodes short and flexible.

Prefix and suffix are how to fulfill the needs mentioned above. They can be added, removed and modified while the original barcode data remains intact.



#### Barcode processing procedure:

1. **Edit data with Data Formatter**
2. **Append prefix/suffix**
3. **Pack data**
4. **Append terminating character**

---

## Global Settings

### Enable/Disable All Prefixes/Suffixes

Disable All Prefixes/Suffixes: **Transmit barcode data with no prefix/suffix.**

Enable All Prefixes/Suffixes: **Allow to append Code ID prefix, AIM ID prefix, custom prefix/suffix and terminating character to the barcode data before the transmission.**



@APSENA0

Disable All Prefixes/Suffixes



@APSENA1

Enable All Prefixes/Suffixes

## Prefix Sequence



@PRESEQ0

\*\* Code ID+ Custom +AIM ID



@PRESEQ1

Custom + Code ID + AIM ID

---

## Custom Prefix

### Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 10 characters. For example, if the custom prefix is “AB” and the barcode data is “123”, the Host will receive “AB123”.



@CPRENA0

\*\* Disable Custom Prefix



@CPRENA1

Enable Custom Prefix

### Set Custom Prefix

To set a custom prefix, scan the Set Custom Prefix barcode then the numeric barcodes corresponding to the hexadecimal value of a desired prefix then the Save barcode.

Note: A custom prefix cannot exceed 10 characters.



@CPRSET

Set Custom Prefix

**E**  
*sample*

Set the custom prefix to “CODE” (HEX: 0x43/0x4F/0x44/0x45):

1. **Scan the Set Custom Prefix barcode.**

- 
2. **Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5” from the “Digit Barcodes” section in Appendix.**
  3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
  4. **Scan the Enable Custom Prefix barcode.**

## AIM ID Prefix

**AIM (Automatic Identification Manufacturers) ID defines symbology identifier (For the details, see the “AIM ID Table” section in Appendix). If AIM ID prefix is enabled, the scanner will add the symbology identifier before the scanned data after decoding.**



@AIDENA0

\*\* Disable AIM ID Prefix



@AIDENA1

Enable AIM ID Prefix



**AIM ID is not user programmable.**

---

## Code ID Prefix

**Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one or two English letters.**



@CIDENA0

\*\* Disable Code ID Prefix



@CIDENA1

Enable Code ID Prefix

## Restore All Default Code IDs

**For the information of default Code IDs, see the “Code ID Table” section in Appendix.**



@CIDDEF

Restore All Default Code IDs

---

## Modify Code ID

**See the examples below to learn how to modify a Code ID and restore the default Code IDs of all symbologies.**

---

## **E** *sample*

Modify PDF417 Code ID to be “p” (HEX: 0x70):

1. **Scan the** Modify PDF417 Code ID **barcode**.
2. **Scan the numeric barcodes “7” and “0” from the “Digit Barcodes” section in Appendix.**
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes” section in Appendix.**

Restore the default Code IDs of all symbologies:

1. **Scan the** Restore All Default Code IDs **barcode**.

---

ID symbologies:



@CID002

Modify Code 128 Code ID



@CID003

Modify GS1-128 Code ID



@CID004

Modify EAN-8 Code ID



@CID005

Modify EAN-13 Code ID



@CID006

Modify UPC-E Code ID



@CID007

Modify UPC-A Code ID



@CID008

Modify Interleaved 2 of 5 Code ID



@CID009

Modify ITF-14 Code ID



@CID010

Modify ITF-6 Code ID



@CID011

Modify Matrix 2 of 5 Code ID



@CID013

Modify Code 39 Code ID



@CID015

Modify Codabar Code ID



@CID017

Modify Code 93 Code ID



@CID020

Modify AIM 128 Code ID



@CID021

Modify ISBT 128 Code ID



@CID022

Modify COOP 25 Code ID



@CID023

Modify ISSN Code ID



@CID024

Modify ISBN Code ID



@CID025

Modify Industrial 25 Code ID



@CID026

Modify Standard 25 Code ID



@CID027

Modify Plessey Code ID



@CID028

Modify Code 11 Code ID



@CID029

Modify MSI-Plessey Code ID



@CID031

Modify GS1 Databar Code ID



@CID030

Modify GS1 Composite Code ID

---

2D symbologies:



@CID032

Modify PDF417 Code ID



@CID033

Modify QR Code ID



@CID035

Modify Data Matrix Code ID

---

## Custom Suffix

### Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 10 characters. For example, if the custom suffix is “AB” and the barcode data is “123”, the Host will receive “123AB”.



@CSUENAO

\*\* Disable Custom Suffix



@CSUENAI

Enable Custom Suffix

### Set Custom Suffix

To set a custom suffix, scan the Set Custom Suffix barcode then the numeric barcodes corresponding to the hexadecimal value of a desired suffix then the Save barcode.

Note: A custom suffix cannot exceed 10 characters.



@CSUSET

Set Custom Suffix

**E**  
*xample*

Set the custom suffix to “CODE” (HEX: 0x43/0x4F/0x44/0x45):

1. **Scan the Set Custom Suffix barcode.**
2. **Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5” from the “Digit Barcodes” section in Appendix.**
3. **Scan the Save barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the Enable Custom Suffix barcode.**

## Terminating Character Suffix

### Enable/Disable Terminating Character Suffix

**A terminating character such as carriage return (CR) or carriage return/line feed pair (CRLF) can only be used to mark the end of data, which means nothing can be added after it.**



@TSUENA0

Disable Terminating Character Suffix



@TSUENA1

\*\* Enable Terminating Character Suffix

### Set Terminating Character Suffix

**To set a terminating character suffix, scan the Set Terminating Character Suffix barcode then the numeric barcodes corresponding to the hexadecimal value of a desired terminating character then the Save barcode.**

Note: **A terminating character suffix cannot exceed 2 characters.**



@TSUSET

Set Terminating Character Suffix



@TSUSET0D

\*\* Set Terminating Character to CR  
(0x0D)



@TSUSET0D0A

Set Terminating Character to CRLF  
(0x0D,0x0A)

Set the terminating character suffix to 0x0A:

1. **Scan the** Set Terminating Character Suffix **barcode.**
2. **Scan the numeric barcodes “0” and “A” from the “Digit Barcodes” section in Appendix.**
3. **Scan the** Save **barcode from the “Save/Cancel Barcodes” section in Appendix.**
4. **Scan the** Enable Terminating Character Suffix **barcode.**

# Chapter 10 Batch Programming

## Introduction

**Batch programming enables users to integrate a batch of commands into a single batch barcode.**

**Listed below are batch programming rules:**

- 1. Command format: Command + Parameter Value.**
- 2. Each command is terminated by a semicolon (;). Note that there is no space between a command and its terminator semicolon.**
- 3. Use the barcode generator software to generate a 2D batch barcode.**

**Example: Create a batch barcode for Illumination On, Sense Mode, Decode Session Timeout = 2s:**

- 1. Input the commands:**

```
@ILLSCN1;SCNMOD2;ORTSET2000;
```

- 2. Generate a batch barcode.**

**When setting up a scanner with the above configuration, scan the Enable Batch Barcode barcode and then the batch barcode generated.**



@BATCHS

Enable Batch Barcode

---

## Create a Batch Command

**A batch command may contain a number of individual commands each of which is terminated by a semicolon (;).**

**For more information, refer to the “Use of Programming Command” section in Chapter 3.**

## Create a Batch Barcode

**Batch barcodes can be produced in the format of PDF417, QR Code or Data Matrix.**

**Example: Create a batch barcode for Illumination On, Sense Mode, Decode Session Timeout = 2s:**

**1. Input the following commands:**

**@ILLSCN1;SCNMOD2;ORTSET2000;**

**2. Generate a PDF417 batch barcode.**



---


 
## Use Batch Barcode

To put a batch barcode into use, scan the following barcodes. (Use the example above.)



@BATCHS

Enable Batch Barcode

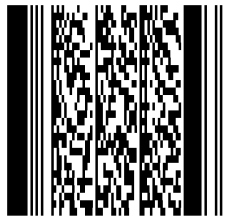

Batch Barcode

# Appendix

## Digit Barcodes

0~9



@DIGIT0

0



@DIGIT1

1



@DIGIT2

2



@DIGIT3

3



@DIGIT4

4



@DIGIT6

6



@DIGIT8

8



@DIGIT5

5



@DIGIT7

7



@DIGIT9

9

---

A~F



@DIGITA

A



@DIGITB

B



@DIGITC

C



@DIGITD

D



@DIGITE

E



@DIGITF

F

---

## Save/Cancel Barcodes

**After reading numeric barcode(s), you need to scan the Save barcode to save the data. If you scan the wrong digit(s), you can either scan the Cancel barcode and then start the configuration all over again, or scan the Delete the Last Digit barcode and then the correct digit, or scan the Delete All Digits barcode and then the digits you want.**

**For instance, after reading the Maximum Length barcode and numeric barcodes “1”, “2” and “3”, you scan:**

- ✧ Delete the Last Digit: **The last digit “3” will be removed.**
- ✧ Delete All Digits: **All digits “123” will be removed.**
- ✧ Cancel: **The maximum length configuration will be cancelled. And the scanner is still in the setup mode.**



@DIGSAV

Save



@DIGCAN

Cancel



@DIGDEL

Delete the Last Digit



@DIGDAL

Delete All Digits

## Factory Defaults Table

| Parameter                                      | Factory Default                                 | Remark                             |
|--|---|------------------------------------|
| System Settings                                |   |                                    |
| <b>Barcode Programming</b>                     | <b>Disabled (Exit Setup)</b>                    |                                    |
| <b>Programming Barcode Data</b>                | <b>Do not transmit</b>                          |                                    |
| <b>Illumination</b>                            | <b>On</b>                                       |                                    |
| <b>Illumination Color</b>                      | <b>Red LED and White LED</b>                    |                                    |
| <b>Interval Time of Illumination switching</b> | <b>2000ms</b>                                   |                                    |
| <b>Aiming</b>                                  | <b>Normal</b>                                   |                                    |
| <b>Good Read LED</b>                           | <b>On</b>                                       |                                    |
| <b>Good Read LED Duration</b>                  | <b>Short (20ms)</b>                             |                                    |
| <b>Power On Beep</b>                           | <b>On</b>                                       |                                    |
| <b>Good Read Beep</b>                          | <b>On</b>                                       |                                    |
| <b>Good Read Beep Duration</b>                 | <b>Medium (80ms)</b>                            |                                    |
| <b>Good Read Beep Frequency</b>                | <b>Medium (2730Hz)</b>                          |                                    |
| <b>Good Read Beep Volume</b>                   | <b>High</b>                                     |                                    |
| <b>Number of Good Read Beeps</b>               | <b>1</b>  |                                    |
| <b>Good Read Beep Interval Time</b>            | <b>Short</b>                                    |                                    |
| <b>Good Read Vibration</b>                     | <b>Off</b>                                      |                                    |
| <b>Good Read Vibration Duration</b>            | <b>300ms</b>                                    |                                    |
| <b>Default Scan Mode</b>                       | <b>Level Mode</b>                               |                                    |
| <b>Decode Session Timeout</b>                  | <b>3,000ms</b>                                  | <b>1-3,600,000ms; 0: infinite.</b> |
| <b>Timeout between Decodes</b>                 | <b>500ms</b>                                    | <b>1-10,000ms</b>                  |
| <b>Reread Timeout</b>                          | <b>Enabled, 15,000ms</b>                        | <b>1-3,600,000ms</b>               |
| <b>Good Read Delay</b>                         | <b>Disabled, 500ms</b>                          | <b>1-3,600,000ms</b>               |
| <b>Image Decoding Timeout</b>                  | <b>500ms</b>                                    | <b>1-3,000ms</b>                   |
| <b>Sensitivity</b>                             | <b>Level 1</b>                                  | <b>Level 1-20</b>                  |
| <b>Scanning Preference</b>                     | <b>Normal Mode</b>                              |                                    |
| <b>Read Barcode</b>                            | <b>On</b>                                       |                                    |
| <b>Decode Area</b>                             | <b>Priori on Aimed Barcode</b>                  |                                    |
| <b>Specify Decoding Area</b>                   | <b>40% top, 60% bottom, 40% left, 60% right</b> |                                    |
| <b>Image Flipping</b>                          | <b>Do Not Flip</b>                              |                                    |
| <b>Image Resize</b>                            | <b>Original Image</b>                           |                                    |

|  |   |                         |
|--|---|-------------------------|
| <b>Default Interface</b>                 | <b>USB HID Keyboard</b>                     |                         |
| RS-232 Interface                         |   |                         |
| <b>Baud Rate</b>                         | <b>9600</b>                                 |                         |
| <b>Parity Check</b>                      | <b>None</b>                                 |                         |
| <b>Data Bits</b>                         | <b>8</b>                                    |                         |
| <b>Stop Bits</b>                         | <b>1</b>                                    |                         |
| <b>Hardware Auto Flow Control</b>        | <b>Disabled</b>                             |                         |
| USB Interface                            |   |                         |
| <b>USB Country Keyboard</b>              | <b>US keyboard</b>                          | <b>USB HID Keyboard</b> |
| <b>Beep on Unknown Character</b>         | <b>Off</b>                                  | <b>USB HID Keyboard</b> |
| <b>Emulate ALT+Keypad</b>                | <b>Off</b>                                  | <b>USB HID Keyboard</b> |
| <b>Code Page</b>                         | <b>Code Page 1252 (West European Latin)</b> | <b>USB HID Keyboard</b> |
| <b>Unicode Encoding</b>                  | <b>Off</b>                                  | <b>USB HID Keyboard</b> |
| <b>Function Key Mapping</b>              | <b>Disable</b>                              | <b>USB HID Keyboard</b> |
| <b>Inter-Keystroke Delay</b>             | <b>No Delay</b>                             | <b>USB HID Keyboard</b> |
| <b>Convert Case</b>                      | <b>No Case Conversion</b>                   | <b>USB HID Keyboard</b> |
| <b>Emulate Numeric Keypad 1</b>          | <b>Disabled</b>                             | <b>USB HID Keyboard</b> |
| <b>Emulate Numeric Keypad 2</b>          | <b>Disabled</b>                             | <b>USB HID Keyboard</b> |
| <b>Polling Rate</b>                      | <b>4ms</b>                                  | <b>USB HID Keyboard</b> |
| <b>Leading Zero</b>                      | <b>On</b>                                   |                         |
| Wireless Communication                   |   |                         |
| <b>Batch Mode Option</b>                 | <b>Off</b>                                  |                         |
| <b>Prevent Same Barcode Storage</b>      | <b>Off</b>                                  |                         |
| <b>Batch Mode Transmit Delay</b>         | <b>No Transmit Delay (0ms)</b>              |                         |
| <b>Auto Clear Flash Memory</b>           | <b>Off</b>                                  |                         |
| <b>Set End of Transmission Message</b>   | <b>Off</b>                                  |                         |
| <b>Wireless Scanner Sleep Timeout</b>    | <b>15s</b>                                  |                         |
| <b>Wireless Scanner Shutdown Timeout</b> | <b>30min</b>                                |                         |
| Symbolologies                            |   |                         |
| <i>Global Settings</i>                   |   |                         |
| <b>Image Brightness Adaptation 1</b>     | <b>15</b>                                   |                         |
| <b>Image Brightness Adaptation 2</b>     | <b>10</b>                                   |                         |
| <b>1D Decoding Complexity</b>            | <b>Medium</b>                               |                         |
| <b>1D Inverse</b>                        | <b>Regular and Inverse</b>                  |                         |
| <i>Code 128</i>                          |   |                         |
| <b>Code 128</b>                          | <b>Enabled</b>                              |                         |
| <b>Maximum Length</b>                    | <b>48</b>                                   |                         |

|   |                                   |  |
|---|-----------------------------------|--|
| <b>Minimum Length</b>                                     | <b>1</b>                          |  |
| <i>EAN-8</i>  |                                   |  |
| <b>EAN-8</b>  | <b>Enabled</b>                    |  |
| <b>Check Character</b>                                    | <b>Transmit</b>                   |  |
| <b>2-Digit Add-On Code</b>                                | <b>Disabled</b>                   |  |
| <b>5-Digit Add-On Code</b>                                | <b>Disabled</b>                   |  |
| <b>Add-On Code</b>  | <b>Not Required</b>               |  |
| <b>Add-On Code Separator</b>                              | <b>Off</b>                        |  |
| <b>Convert EAN-8 to EAN-13</b>                            | <b>Disabled</b>                   |  |
| <i>EAN-13</i>   |                                   |  |
| <b>EAN-13</b>   | <b>Enabled</b>                    |  |
| <b>Check Character</b>                                    | <b>Transmit</b>                   |  |
| <b>2-Digit Add-On Code</b>                                | <b>Disabled</b>                   |  |
| <b>5-Digit Add-On Code</b>                                | <b>Disabled</b>                   |  |
| <b>Add-On Code</b>  | <b>Not required</b>               |  |
| <b>Add-On Code Separator</b>                              | <b>Off</b>                        |  |
| <b>EAN-13 Beginning with 290 Add-On Code Required</b>     | <b>Do Not Require Add-On Code</b> |  |
| <b>EAN-13 Beginning with 378/379 Add-On Code Required</b> | <b>Do Not Require Add-On Code</b> |  |
| <b>EAN-13 Beginning with 414/419 Add-On Code Required</b> | <b>Do Not Require Add-On Code</b> |  |
| <b>EAN-13 Beginning with 434/439 Add-On Code Required</b> | <b>Do Not Require Add-On Code</b> |  |
| <b>EAN-13 Beginning with 977 Add-On Code Required</b>     | <b>Do Not Require Add-On Code</b> |  |
| <b>EAN-13 Beginning with 978 Add-On Code Required</b>     | <b>Do Not Require Add-On Code</b> |  |
| <b>EAN-13 Beginning with 979 Add-On Code Required</b>     | <b>Do Not Require Add-On Code</b> |  |
| <i>UPC-E</i>  |                                   |  |
| <b>UPC-E0</b>   | <b>Enabled</b>                    |  |
| <b>UPC-E1</b>   | <b>Disabled</b>                   |  |
| <b>Check Character</b>                                    | <b>Transmit</b>                   |  |
| <b>2-Digit Add-On Code</b>                                | <b>Disabled</b>                   |  |
| <b>5-Digit Add-On Code</b>                                | <b>Disabled</b>                   |  |
| <b>Add-On Code</b>  | <b>Not required</b>               |  |
| <b>Add-On Code Separator</b>                              | <b>Off</b>                        |  |

|                                     |  |  |
|-------------------------------------|--|--|
| <b>Transmit Preamble Character</b>  | <b>System Character</b>  |  |
| <b>Convert UPC-E to UPC-A</b>       | <b>Disabled</b>  |  |
| <i>UPC-A</i>                        |  |  |
| <b>UPC-A</b>                        | <b>Enabled</b>   |  |
| <b>Check Character</b>              | <b>Transmit</b>  |  |
| <b>2-Digit Add-On Code</b>          | <b>Disabled</b>  |  |
| <b>5-Digit Add-On Code</b>          | <b>Disabled</b>  |  |
| <b>Add-On Code</b>                  | <b>Not required</b>  |  |
| <b>Add-On Code Separator</b>        | <b>Off</b>   |  |
| <b>Transmit Preamble Character</b>  | <b>System Characte</b>   |  |
| <i>Interleaved 2 of 5</i>           |  |  |
| <b>Interleaved 2 of 5</b>           | <b>Enabled</b>   |  |
| <b>Check Character Verification</b> | <b>Disabled</b>  |  |
| <b>Maximum Length</b>               | <b>80</b>  |  |
| <b>Minimum Length</b>               | <b>6</b>   |  |
| <i>ITF-14</i>                       |  |  |
| <b>ITF-14</b>                       | <b>Disabled</b>  |  |
| <i>ITF-6</i>                        |  |  |
| <b>ITF-6</b>                        | <b>Disabled</b>  |  |
| <i>Matrix 2 of 5</i>                |  |  |
| <b>Matrix 2 of 5</b>                | <b>Enabled</b>   |  |
| <b>Check Character Verification</b> | <b>Disabled</b>  |  |
| <b>Maximum Length</b>               | <b>80</b>  |  |
| <b>Minimum Length</b>               | <b>4</b>   |  |
| <i>Code 39</i>                      |  |  |
| <b>Code 39</b>                      | <b>Enabled</b>   |  |
| <b>Check Character Verification</b> | <b>Disabled</b>  |  |
| <b>Start/Stop Character</b>         | <b>Do not transmit</b>   |  |
| <b>Code 39 Full ASCII</b>           | <b>Disabled</b>  |  |
| <b>Maximum Length</b>               | <b>48</b>  |  |
| <b>Minimum Length</b>               | <b>1</b>   |  |
| <i>Codabar</i>                      |  |  |
| <b>Codabar</b>                      | <b>Enabled</b>   |  |
| <b>Check Character Verification</b> | <b>Disabled</b>  |  |
| <b>Start/Stop Character</b>         | <b>Do not transmit<br/>ABCD/ABCD as Start/Stop<br/>Character</b> |  |
| <b>Maximum Length</b>               | <b>60</b>  |  |

|                                     |                                   |  |
|-------------------------------------|-----------------------------------|--|
| <b>Minimum Length</b>               | <b>2</b>                          |  |
| <i>Code 93</i>                      |                                   |  |
| <b>Code 93</b>                      | <b>Disabled</b>                   |  |
| <b>Check Character</b>              | <b>Do not transmit</b>            |  |
| <b>Check Character Verification</b> | <b>Enabled</b>                    |  |
| <b>Maximum Length</b>               | <b>48</b>                         |  |
| <b>Minimum Length</b>               | <b>1</b>                          |  |
| <i>GS1-128 (UCC/EAN-128)</i>        |                                   |  |
| <b>GS1-128</b>                      | <b>Enabled</b>                    |  |
| <b>Maximum Length</b>               | <b>48</b>                         |  |
| <b>Minimum Length</b>               | <b>1</b>                          |  |
| <i>AIM 128</i>                      |                                   |  |
| <b>AIM 128</b>                      | <b>Disabled</b>                   |  |
| <b>Maximum Length</b>               | <b>48</b>                         |  |
| <b>Minimum Length</b>               | <b>1</b>                          |  |
| <b>Check Character</b>              | <b>Do not transmit</b>            |  |
| <i>ISBT 128</i>                     |                                   |  |
| <b>ISBT 128</b>                     | <b>Disabled</b>                   |  |
| <i>Code 11</i>                      |                                   |  |
| <b>Code 11</b>                      | <b>Disabled</b>                   |  |
| <b>Check Character</b>              | <b>Transmit</b>                   |  |
| <b>Check Character Verification</b> | <b>One Check Character, MOD11</b> |  |
| <b>Maximum Length</b>               | <b>48</b>                         |  |
| <b>Minimum Length</b>               | <b>4</b>                          |  |
| <i>ISBN</i>                         |                                   |  |
| <b>ISBN</b>                         | <b>Disabled</b>                   |  |
| <b>ISBN Format</b>                  | <b>ISBN-10</b>                    |  |
| <i>ISSN</i>                         |                                   |  |
| <b>ISSN</b>                         | <b>Disabled</b>                   |  |
| <i>Industrial 25</i>                |                                   |  |
| <b>Industrial 25</b>                | <b>Disabled</b>                   |  |
| <b>Check Character Verification</b> | <b>Disabled</b>                   |  |
| <b>Maximum Length</b>               | <b>48</b>                         |  |
| <b>Minimum Length</b>               | <b>6</b>                          |  |
| <i>Standard 25</i>                  |                                   |  |
| <b>Standard 25</b>                  | <b>Disabled</b>                   |  |
| <b>Check Character Verification</b> | <b>Disabled</b>                   |  |
| <b>Maximum Length</b>               | <b>48</b>                         |  |

|                                     |  |  |
|-------------------------------------|--|--|
| <b>Minimum Length</b>               | <b>6</b>                                   |  |
| <i>COOP 25</i>                      |  |  |
| <b>COOP 25</b>                      | <b>Disabled</b>                            |  |
| <b>Check Character Verification</b> | <b>Disabled</b>                            |  |
| <b>Maximum Length</b>               | <b>48</b>                                  |  |
| <b>Minimum Length</b>               | <b>1</b>                                   |  |
| <i>Deutsche 14</i>                  |  |  |
| <b>Deutsche 14</b>                  | <b>Disabled</b>                            |  |
| <i>Deutsche 12</i>                  |  |  |
| <b>Deutsche 12</b>                  | <b>Disabled</b>                            |  |
| <i>Plessey</i>                      |  |  |
| <b>Plessey</b>                      | <b>Disabled</b>                            |  |
| <b>Check Character Verification</b> | <b>Disabled</b>                            |  |
| <b>Maximum Length</b>               | <b>48</b>                                  |  |
| <b>Minimum Length</b>               | <b>4</b>                                   |  |
| <i>MSI-Plessey</i>                  |  |  |
| <b>MSI-Plessey</b>                  | <b>Disabled</b>                            |  |
| <b>Check Character</b>              | <b>Transmit</b>                            |  |
| <b>Check Character Verification</b> | <b>One Check Character, MOD10</b>          |  |
| <b>Maximum Length</b>               | <b>48</b>                                  |  |
| <b>Minimum Length</b>               | <b>4</b>                                   |  |
| <i>PDF417</i>                       |  |  |
| <b>PDF417</b>                       | <b>Enabled</b>                             |  |
| <b>PDF417 Inverse</b>               | <b>Decode Both</b>                         |  |
| <b>Character Encoding</b>           | <b>Default Character Encoding</b>          |  |
| <b>Maximum Length</b>               | <b>2710</b>                                |  |
| <b>Minimum Length</b>               | <b>1</b>                                   |  |
| <i>QR Code</i>                      |  |  |
| <b>QR Code</b>                      | <b>Enabled</b>                             |  |
| <b>Read Single QR Only</b>          | <b>Enabled</b>                             |  |
| <b>QR Inverse</b>                   | <b>Read regular &amp; inverse barcodes</b> |  |
| <b>Character Encoding</b>           | <b>Default Character Encoding</b>          |  |
| <b>QR ECI Output</b>                | <b>Enabled</b>                             |  |
| <b>Maximum Length</b>               | <b>7089</b>                                |  |
| <b>Minimum Length</b>               | <b>1</b>                                   |  |
| <b>QR Decoding Complexity</b>       | <b>Medium</b>                              |  |
| <b>Continuous Code</b>              | <b>Enabled</b>                             |  |
| <b>Dot-peen Code</b>                | <b>Enabled</b>                             |  |

|  |  |  |
|--|--|--|
| <b>Mirror Code</b>                     | <b>Enabled</b>                             |  |
| <b>QR Model 1</b>                      | <b>Enabled</b>                             |  |
| <b>QR Model 2</b>                      | <b>Enabled</b>                             |  |
| <i>Data Matrix</i>                     |  |  |
| <b>Data Matrix</b>                     | <b>Enabled</b>                             |  |
| <b>Rectangular Barcode</b>             | <b>Enabled</b>                             |  |
| <b>Data Matrix Inverse</b>             | <b>Read regular &amp; inverse barcodes</b> |  |
| <b>Character Encoding</b>              | <b>Default Character Encoding</b>          |  |
| <b>Data Matrix ECI Output</b>          | <b>Enabled</b>                             |  |
| <b>Maximum Length</b>                  | <b>3116</b>                                |  |
| <b>Minimum Length</b>                  | <b>1</b>                                   |  |
| <b>Data Matrix Decoding Complexity</b> | <b>Medium</b>                              |  |
| <b>ECC200</b>                          | <b>Enabled</b>                             |  |
| <b>ECCTO140</b>                        | <b>Enabled</b>                             |  |
| <b>Continuous Mode</b>                 | <b>Enabled</b>                             |  |
| <b>Dot-peen Code</b>                   | <b>Enabled</b>                             |  |
| <b>Mirror Code</b>                     | <b>Enabled</b>                             |  |
| <i>Data Formatter</i>                  |  |  |
| <b>Data Formatter</b>                  | <b>Disabled</b>                            |  |
| <b>Non-Match Error Beep</b>            | <b>On</b>                                  |  |
| <b>Data Format Selection</b>           | <b>Format_0</b>                            |  |
| <i>Prefix &amp; Suffix</i>             |  |  |
| <b>Prefix Sequence</b>                 | <b>Code ID+ Custom +AIM ID</b>             |  |
| <b>Custom Prefix</b>                   | <b>Disabled</b>                            |  |
| <b>AIM ID Prefix</b>                   | <b>Disabled</b>                            |  |
| <b>Code ID Prefix</b>                  | <b>Disabled</b>                            |  |
| <b>Custom Suffix</b>                   | <b>Disabled</b>                            |  |
| <b>Terminating Character Suffix</b>    | <b>Enabled</b>                             |  |

## AIM ID Table

| Symbology                    | AIM ID | Possible AIM ID Modifiers (m) |
|------------------------------|--------|-------------------------------|
| <b>Code 128</b>              | ]C0    |                               |
| <b>GS1-128 (UCC/EAN-128)</b> | ]C1    |                               |
| <b>EAN-8</b>                 | ]E4    |                               |
| <b>EAN-8 with Addon</b>      | ]E3    |                               |
| <b>EAN-13</b>                | ]E0    |                               |
| <b>EAN-13 with Addon</b>     | ]E3    |                               |
| <b>UPC-E</b>                 | ]E0    |                               |
| <b>UPC-E with Addon</b>      | ]E3    |                               |
| <b>UPC-A</b>                 | ]E0    |                               |
| <b>UPC-A with Addon</b>      | ]E3    |                               |
| <b>Interleaved 2 of 5</b>    | ]Im    | 0, 1, 3                       |
| <b>ITF-14</b>                | ]Im    | 1, 3                          |
| <b>ITF-6</b>                 | ]Im    | 1, 3                          |
| <b>Matrix 2 of 5</b>         | ]X0    |                               |
| <b>Code 39</b>               | ]Am    | 0, 1, 3, 4, 5, 7              |
| <b>Codabar</b>               | ]Fm    | 0, 2, 4                       |
| <b>Code 93</b>               | ]G0    |                               |
| <b>ISSN</b>                  | ]X0    |                               |
| <b>ISBN</b>                  | ]X0    |                               |
| <b>Industrial 25</b>         | ]S0    |                               |
| <b>Standard 25</b>           | ]R0    |                               |
| <b>COOP 25</b>               | ]X0    |                               |
| <b>Deutsche 12</b>           | ]X0    |                               |
| <b>Deutsche 14</b>           | ]X0    |                               |
| <b>AIM 128</b>               | ]C2    |                               |
| <b>Plessey</b>               | ]P0    |                               |
| <b>Code 11</b>               | ]Hm    | 0, 1, 3                       |
| <b>MSI Plessey</b>           | ]Mm    | 0, 1                          |
| <b>PDF417</b>                | ]Lm    | 0-2                           |
| <b>QR Code</b>               | ]Qm    | 0-6                           |
| <b>Data Matrix</b>           | ]dm    | 0-6                           |

Note: “m” represents the AIM modifier character. Refer to ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers) for AIM modifier character details.

## Code ID Table

| Symbology                    | Code ID  |
|------------------------------|----------|
| <b>Code128</b>               | <b>j</b> |
| <b>GS1-128 (UCC/EAN-128)</b> | <b>j</b> |
| <b>EAN-8</b>                 | <b>d</b> |
| <b>EAN-13</b>                | <b>d</b> |
| <b>UPC-E</b>                 | <b>c</b> |
| <b>UPC-A</b>                 | <b>c</b> |
| <b>Interleaved 2 of 5</b>    | <b>e</b> |
| <b>ITF-14</b>                | <b>e</b> |
| <b>ITF-6</b>                 | <b>e</b> |
| <b>Matrix 2 of 5</b>         | <b>v</b> |
| <b>Code 39</b>               | <b>b</b> |
| <b>Codabar</b>               | <b>a</b> |
| <b>Code 93</b>               | <b>i</b> |
| <b>AIM 128</b>               | <b>X</b> |
| <b>COOP 25</b>               | <b>X</b> |
| <b>Deutsche 12</b>           | <b>X</b> |
| <b>Deutsche 14</b>           | <b>X</b> |
| <b>ISSN</b>                  | <b>g</b> |
| <b>ISBN</b>                  | <b>B</b> |
| <b>Industrial 2/5</b>        | <b>l</b> |
| <b>Standard 2/5</b>          | <b>f</b> |
| <b>Plessey</b>               | <b>n</b> |
| <b>Code 11</b>               | <b>H</b> |
| <b>MSI Plessey</b>           | <b>m</b> |
| <b>PDF417</b>                | <b>r</b> |
| <b>QR Code</b>               | <b>s</b> |
| <b>Data Matrix</b>           | <b>u</b> |

## Symbology ID Number

| Symbology                    | ID Number  |
|------------------------------|------------|
| <b>Code 128</b>              | <b>002</b> |
| <b>GSI-128 (UCC/EAN-128)</b> | <b>003</b> |
| <b>EAN-8</b>                 | <b>004</b> |
| <b>EAN-13</b>                | <b>005</b> |
| <b>UPC-E</b>                 | <b>006</b> |
| <b>UPC-A</b>                 | <b>007</b> |
| <b>Interleaved 2 OF 5</b>    | <b>008</b> |
| <b>ITF-14</b>                | <b>009</b> |
| <b>ITF-6</b>                 | <b>010</b> |
| <b>Matrix 2 of 5</b>         | <b>011</b> |
| <b>Code 39</b>               | <b>013</b> |
| <b>Codabar</b>               | <b>015</b> |
| <b>Code 93</b>               | <b>017</b> |
| <b>AIM 128</b>               | <b>020</b> |
| <b>COOP 25</b>               | <b>022</b> |
| <b>ISSN</b>                  | <b>023</b> |
| <b>ISBN</b>                  | <b>024</b> |
| <b>Industrial25</b>          | <b>025</b> |
| <b>Standard25</b>            | <b>026</b> |
| <b>Plessey</b>               | <b>027</b> |
| <b>Code11</b>                | <b>028</b> |
| <b>MSI-Plessey</b>           | <b>029</b> |
| <b>PDF417</b>                | <b>032</b> |
| <b>QR Code</b>               | <b>033</b> |
| <b>Data Matrix</b>           | <b>035</b> |
| <b>Deutsche 14</b>           | <b>128</b> |
| <b>Deutsche 12</b>           | <b>129</b> |

## ASCII Table

| Hex | Dec | Char                          |
|-----|-----|-------------------------------|
| 00  | 0   | NUL (Null char.)              |
| 01  | 1   | SOH (Start of Header)         |
| 02  | 2   | STX (Start of Text)           |
| 03  | 3   | ETX (End of Text)             |
| 04  | 4   | EOT (End of Transmission)     |
| 05  | 5   | ENQ (Enquiry)                 |
| 06  | 6   | ACK (Acknowledgment)          |
| 07  | 7   | BEL (Bell)                    |
| 08  | 8   | BS (Backspace)                |
| 09  | 9   | HT (Horizontal Tab)           |
| 0a  | 10  | LF (Line Feed)                |
| 0b  | 11  | VT (Vertical Tab)             |
| 0c  | 12  | FF (Form Feed)                |
| 0d  | 13  | CR (Carriage Return)          |
| 0e  | 14  | SO (Shift Out)                |
| 0f  | 15  | SI (Shift In)                 |
| 10  | 16  | DLE (Data Link Escape)        |
| 11  | 17  | DC1 (XON) (Device Control 1)  |
| 12  | 18  | DC2 (Device Control 2)        |
| 13  | 19  | DC3 (XOFF) (Device Control 3) |
| 14  | 20  | DC4 (Device Control 4)        |
| 15  | 21  | NAK (Negative Acknowledgment) |
| 16  | 22  | SYN (Synchronous Idle)        |
| 17  | 23  | ETB (End of Trans. Block)     |
| 18  | 24  | CAN (Cancel)                  |
| 19  | 25  | EM (End of Medium)            |
| 1a  | 26  | SUB (Substitute)              |
| 1b  | 27  | ESC (Escape)                  |
| 1c  | 28  | FS (File Separator)           |
| 1d  | 29  | GS (Group Separator)          |

| Hex       | Dec       | Char                                  |
|-----------|-----------|---------------------------------------|
| <b>1e</b> | <b>30</b> | <b>RS (Request to Send)</b>           |
| <b>1f</b> | <b>31</b> | <b>US (Unit Separator)</b>            |
| <b>20</b> | <b>32</b> | <b>SP (Space)</b>                     |
| <b>21</b> | <b>33</b> | <b>! (Exclamation Mark)</b>           |
| <b>22</b> | <b>34</b> | <b>" (Double Quote)</b>               |
| <b>23</b> | <b>35</b> | <b># (Number Sign)</b>                |
| <b>24</b> | <b>36</b> | <b>\$ (Dollar Sign)</b>               |
| <b>25</b> | <b>37</b> | <b>% (Percent)</b>                    |
| <b>26</b> | <b>38</b> | <b>&amp; (Ampersand)</b>              |
| <b>27</b> | <b>39</b> | <b>` (Single Quote)</b>               |
| <b>28</b> | <b>40</b> | <b>( (Left/ Opening Parenthesis)</b>  |
| <b>29</b> | <b>41</b> | <b>) (Right/ Closing Parenthesis)</b> |
| <b>2a</b> | <b>42</b> | <b>* (Asterisk)</b>                   |
| <b>2b</b> | <b>43</b> | <b>+ (Plus)</b>                       |
| <b>2c</b> | <b>44</b> | <b>, (Comma)</b>                      |
| <b>2d</b> | <b>45</b> | <b>- (Minus/ Dash)</b>                |
| <b>2e</b> | <b>46</b> | <b>. (Dot)</b>                        |
| <b>2f</b> | <b>47</b> | <b>/ (Forward Slash)</b>              |
| <b>30</b> | <b>48</b> | <b>0</b>                              |
| <b>31</b> | <b>49</b> | <b>1</b>                              |
| <b>32</b> | <b>50</b> | <b>2</b>                              |
| <b>33</b> | <b>51</b> | <b>3</b>                              |
| <b>34</b> | <b>52</b> | <b>4</b>                              |
| <b>35</b> | <b>53</b> | <b>5</b>                              |
| <b>36</b> | <b>54</b> | <b>6</b>                              |
| <b>37</b> | <b>55</b> | <b>7</b>                              |
| <b>38</b> | <b>56</b> | <b>8</b>                              |
| <b>39</b> | <b>57</b> | <b>9</b>                              |
| <b>3a</b> | <b>58</b> | <b>: (Colon)</b>                      |
| <b>3b</b> | <b>59</b> | <b>; (Semi-colon)</b>                 |
| <b>3c</b> | <b>60</b> | <b>&lt; (Less Than)</b>               |
| <b>3d</b> | <b>61</b> | <b>= (Equal Sign)</b>                 |

| Hex       | Dec       | Char                              |
|-----------|-----------|-----------------------------------|
| <b>3e</b> | <b>62</b> | <b>&gt; (Greater Than)</b>        |
| <b>3f</b> | <b>63</b> | <b>? (Question Mark)</b>          |
| <b>40</b> | <b>64</b> | <b>@ (AT Symbol)</b>              |
| <b>41</b> | <b>65</b> | <b>A</b>                          |
| <b>42</b> | <b>66</b> | <b>B</b>                          |
| <b>43</b> | <b>67</b> | <b>C</b>                          |
| <b>44</b> | <b>68</b> | <b>D</b>                          |
| <b>45</b> | <b>69</b> | <b>E</b>                          |
| <b>46</b> | <b>70</b> | <b>F</b>                          |
| <b>47</b> | <b>71</b> | <b>G</b>                          |
| <b>48</b> | <b>72</b> | <b>H</b>                          |
| <b>49</b> | <b>73</b> | <b>I</b>                          |
| <b>4a</b> | <b>74</b> | <b>J</b>                          |
| <b>4b</b> | <b>75</b> | <b>K</b>                          |
| <b>4c</b> | <b>76</b> | <b>L</b>                          |
| <b>4d</b> | <b>77</b> | <b>M</b>                          |
| <b>4e</b> | <b>78</b> | <b>N</b>                          |
| <b>4f</b> | <b>79</b> | <b>O</b>                          |
| <b>50</b> | <b>80</b> | <b>P</b>                          |
| <b>51</b> | <b>81</b> | <b>Q</b>                          |
| <b>52</b> | <b>82</b> | <b>R</b>                          |
| <b>53</b> | <b>83</b> | <b>S</b>                          |
| <b>54</b> | <b>84</b> | <b>T</b>                          |
| <b>55</b> | <b>85</b> | <b>U</b>                          |
| <b>56</b> | <b>86</b> | <b>V</b>                          |
| <b>57</b> | <b>87</b> | <b>W</b>                          |
| <b>58</b> | <b>88</b> | <b>X</b>                          |
| <b>59</b> | <b>89</b> | <b>Y</b>                          |
| <b>5a</b> | <b>90</b> | <b>Z</b>                          |
| <b>5b</b> | <b>91</b> | <b>[ (Left/ Opening Bracket)</b>  |
| <b>5c</b> | <b>92</b> | <b>\ (Back Slash)</b>             |
| <b>5d</b> | <b>93</b> | <b>] (Right/ Closing Bracket)</b> |

| Hex       | Dec        | Char                            |
|-----------|------------|---------------------------------|
| <b>5e</b> | <b>94</b>  | <b>^ (Caret/ Circumflex)</b>    |
| <b>5f</b> | <b>95</b>  | <b>_ (Underscore)</b>           |
| <b>60</b> | <b>96</b>  | <b>' (Grave Accent)</b>         |
| <b>61</b> | <b>97</b>  | <b>a</b>                        |
| <b>62</b> | <b>98</b>  | <b>b</b>                        |
| <b>63</b> | <b>99</b>  | <b>c</b>                        |
| <b>64</b> | <b>100</b> | <b>d</b>                        |
| <b>65</b> | <b>101</b> | <b>e</b>                        |
| <b>66</b> | <b>102</b> | <b>f</b>                        |
| <b>67</b> | <b>103</b> | <b>g</b>                        |
| <b>68</b> | <b>104</b> | <b>h</b>                        |
| <b>69</b> | <b>105</b> | <b>i</b>                        |
| <b>6a</b> | <b>106</b> | <b>j</b>                        |
| <b>6b</b> | <b>107</b> | <b>k</b>                        |
| <b>6c</b> | <b>108</b> | <b>l</b>                        |
| <b>6d</b> | <b>109</b> | <b>m</b>                        |
| <b>6e</b> | <b>110</b> | <b>n</b>                        |
| <b>6f</b> | <b>111</b> | <b>o</b>                        |
| <b>70</b> | <b>112</b> | <b>p</b>                        |
| <b>71</b> | <b>113</b> | <b>q</b>                        |
| <b>72</b> | <b>114</b> | <b>r</b>                        |
| <b>73</b> | <b>115</b> | <b>s</b>                        |
| <b>74</b> | <b>116</b> | <b>t</b>                        |
| <b>75</b> | <b>117</b> | <b>u</b>                        |
| <b>76</b> | <b>118</b> | <b>v</b>                        |
| <b>77</b> | <b>119</b> | <b>w</b>                        |
| <b>78</b> | <b>120</b> | <b>x</b>                        |
| <b>79</b> | <b>121</b> | <b>y</b>                        |
| <b>7a</b> | <b>122</b> | <b>z</b>                        |
| <b>7b</b> | <b>123</b> | <b>{ (Left/ Opening Brace)</b>  |
| <b>7c</b> | <b>124</b> | <b>  (Vertical Bar)</b>         |
| <b>7d</b> | <b>125</b> | <b>} (Right/ Closing Brace)</b> |
| <b>7e</b> | <b>126</b> | <b>~ (Tilde)</b>                |
| <b>7f</b> | <b>127</b> | <b>DEL (Delete)</b>             |

# SCANNING MADE SIMPLE

---

Newland EMEA  
+31 (0) 345 87 00 33  
info@newland-id.com

Rolweg 25  
4104 AV Culemborg  
The Netherlands



@NewlandEMEA