 



Front view

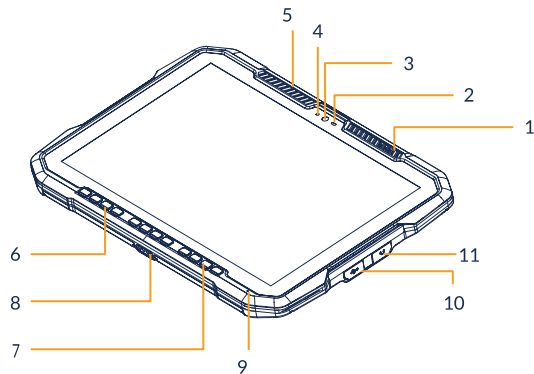

1	Speaker	2	Light & Proximity Sensors
3	Front Camera	4	LED
5	Speaker	6	Keys
7	Power Key	8	Charging Contacts
9	Main Microphone	10	USB Type-C Connector
11	Headset Jack Cover		

1

 Back view

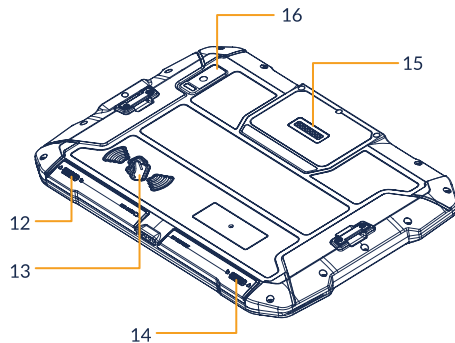

12	SIM Card Slot	13	NFC
14	Battery Cover Latch	15	Expansion Contacts
16	Rear Camera		

2


LED Status & Installing the SIM Card



LEDs on the tablet

Red LED on	Charging in progress
Red LED flashes constantly	Low-battery alert
Green LED on	Fully charged
Blue LED flashes constantly	Incoming call/message reminder

- Step 1:** Slide the SIM card cover latch to the unlock position and open the SIM card cover.
- Step 2:** Pull the card tray out of the slot.
- Step 3:** Place the TF card/Nano SIM card into the tray, then gently push the tray back into the slot until it locks into place.

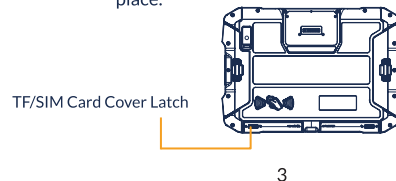

3

Safety Guidelines

Before using the device, please read through the following safety guidelines carefully to ensure proper operation and compliance with applicable regulations.

Device Safety Guidelines

- Do not use the device's wireless functionalities where wireless device use is prohibited or where it may cause interference or danger, such as in medical facilities, aircrafts, or petrol stations.
- Do not throw, drop or strike the device. Doing so may damage the LCD display, interrupt running programs, cause data loss in memory and result in malfunction.
- Do not use the device in environments with high humidity, dust, or strong magnetic fields, as these conditions may result in internal circuit malfunctions.
- Use only the battery and AC adapter provided by Newland. Ensure that the charging port is clean and free from debris before charging.
- Do not use the device in environments with extremely low or high temperatures. The recommended operating temperature is 0°C to 45°C (32°F-113°F). Battery performance will be limited when the temperature drops below 0°C (32°F). For cold chain applications, use batteries designed for low-temperature environments. Charging is not supported below 0°C (32°F).
- Do not place the device in direct sunlight, such as on a vehicle dashboard or near a window sill.
- Before cleaning and performing maintenance, ensure the device is powered off and disconnected from all external devices and cables.
- Use only a dry soft cloth to clean the device. Cleaning it with wet cloth or benzene/thinner/other volatile chemicals may deform and shorten the service life of the keypad and shell of the device.
- Do not attempt to disassemble or retrofit the device yourself. Unauthorized disassembly or retrofit will void the warranty. In case of any damage, please contact your dealer or Newland customer service center.


Battery Safety Guidelines

- Improper handling of the battery may result in fire, explosion, or injury. Do not disassemble it, insert foreign objects, or expose it to liquids.
- Do not drop, crush, or puncture the battery. Excessive force or pressure may cause internal short circuits, overheating, or potential battery failure.
- Discontinue use if the battery has been submerged in water. If the battery is swelling, bulging, or having other abnormalities, please stop using it immediately. Properly dispose of and recycle batteries. Do not dispose of them as household garbage.
- Battery lifespan is affected by usage frequency. If the lifespan decreases significantly, replace it with a new battery. Use only the battery provided by Newland.
- If the device will not be used for a long time, charge the battery at least every six months to prevent over-discharge.

4

Installing the Battery

- Step 1:** Slide the battery cover latch to the unlock position and open the battery cover.
- Step 2:** Insert the battery into the battery compartment.
- Step 3:** Install the battery cover and slide the latch to the lock position.

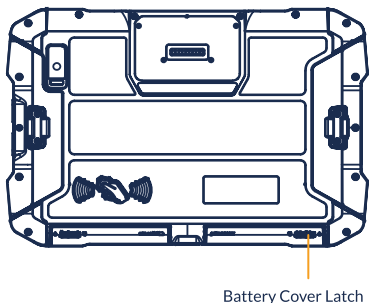


Removing the Battery

- Step 1:** Press and hold the Power key for 5 seconds, then tap "Power off" to turn off the terminal.
- Step 2:** Slide the battery cover latch to the unlock position and open the battery cover.
- Step 3:** Remove the battery.

Adjust the scan angle and the distance between the tablet and the target barcode to make them fall into the following ranges:

- 1 Point the tablet focus lamp at the center of the barcode.
- 2 Move the tablet until you find the appropriate scan distance.
- 3 Optimum scan angles:
 Skew (α) < 45° (0° preferably)
 Pitch (γ) < 45° (5° - 20° preferably)
 Roll (β) = 0° - 360°

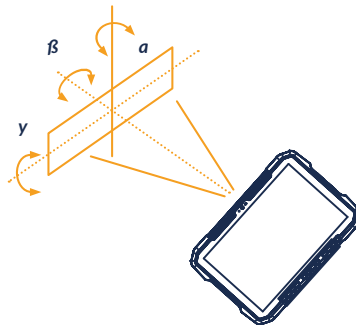

Visit our website
newland-id.com

**NQUIRE 10
 TRYGON**

