




Quick Start Guide V1.0


The FR80 barcode scanner (hereinafter referred to as "the FR80" of "scanner"), armed with the Newland patented **UIMG**[®], a computerized image recognition system, blends image recognition algorithm and manufacturing, which significantly simplifies application design and delivers superior performance and solid reliability.

The FR80 supports all mainstream 1D and standard 2D. It can read barcodes on commodities and mobile phones, featuring excellent scanning performance and easy installation.

The scanner must be connected to a host device in an actual application, such as a PC, POS, or any intelligent terminal with a USB or RS-232 port, using a USB or RS-232 cable.

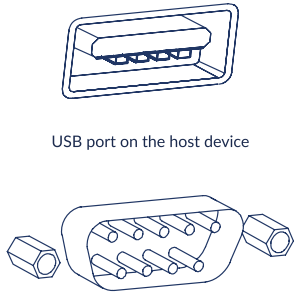


1

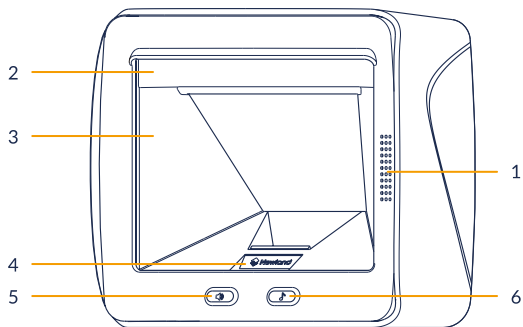


- 1 Sound hole, the sound is emitted from the hole;
- 2 Illumination LED for supplementary lighting, not to look at the illumination LED directly for a long time;
- 3 Scan window, the barcode shown in the scan window will be decoded;
- 4 Status indicator, used to indicate the working status;
- 5 Volume key, used to adjust the volume of good read beep (default: low, medium, and high levels);
- 6 Sound effect key, used to select sound effects of good read beep (default: five options);

2

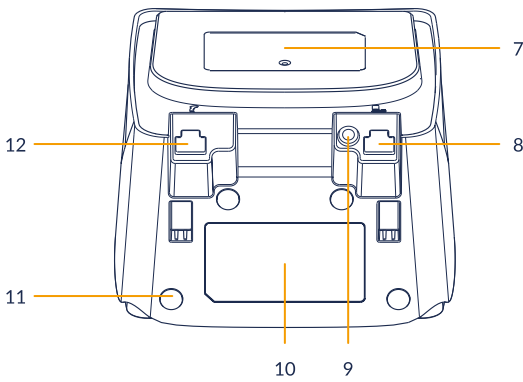


- 7 Position of logo, where logo is placed;
- 8 Main RJ45 port, to connect the scanner with the cable;
- 9 DC port, to connect the adapter for the FR80;
- 10 Position of label, where the label is pasted.
- 11 Position of pad, where four rubber pads are pasted;
- 12 Secondary RJ45 port, to connect the scanner with the cable;

3

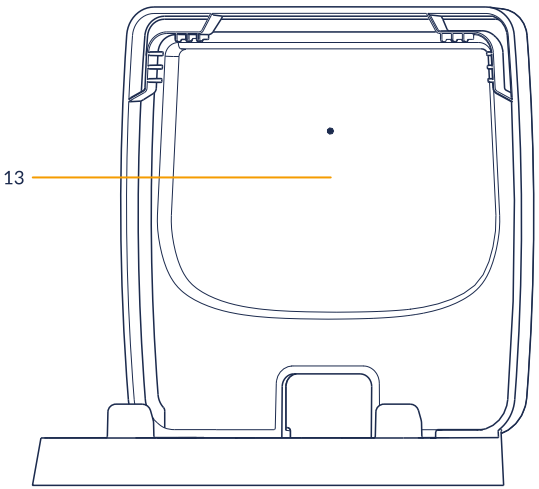

- 13 Fixed seat, used to fix the scanner on the desktop;

4

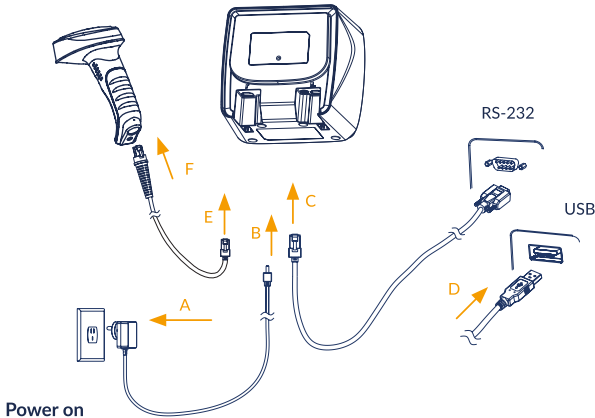

Power on

- 1 For the FR80 with the adapter, connect the adapter first and power on the FR80 according to step A and step B. Then connect the data cable (USB data cable or RS-232 data cable) according to step C and step D. Finally connect the handheld barcode scanner if needed, following step E and step F. The power-on duration is about 4 seconds.
- 2 For the FR80 without the adapter, handheld barcode scanner access is not available. It supports power supply via the USB port according to step C and step D. The power-on duration is about 10 seconds.
- 3 It is not allowed to connect the non-standard and damaged adapter and forbid conducting step B without step A.
- 4 If you do not hear the power-on beep after powering the device on for the more than 30 seconds, it means that the power supply is insufficient and the device will emit an alarm.

5

Power off


- 1 For the FR80 with the adapter, disconnect the data cable (USB data cable or RS-232 data cable) firstly and then unplug the adapter and fully pull out the handheld barcode scanner.
- 2 For the FR80 without the adapter, directly disconnect the data cable. When the supply is insufficient, and the device will emit an alarm.

6

- Blue LED on:** Initializing or configuration process
- Green LED on:** It indicates successful decode
- Cyan LED on:** Configuration is successful
- Purple LED on:** Configuration error
- Yellow LED on:** The decoding is successful, but an alarm is emitted due to data transmission failure. Please check if the data cable connection is loose.
- Red LED on:** An alarm occurs because of a barcode scanning module malfunction. Please contact technical support.
- Red LED flashes:** An alarm for low input voltage. For the FR80 with the adapter, please check whether power supply of the adapter is normal. For the FR80 without the adapter, it may be because of insufficient power supply of the USB interface.


7

- 1 Make sure that the scanner, the data cable, the host, and the power supply are properly connected and powered on normally.
- 2 Place the barcode in the field of view as shown below and aim it at the scan window. The illumination LED will be activated, the red illumination area will appear and the decoding process will begin.
- 3 When the good read beep sounds and the green LED is on, it indicates the decoding is successful. The scanner will transmit the decoded data to the host.
- 4 The optimal scanning distance is about 7cm away from the scan window.

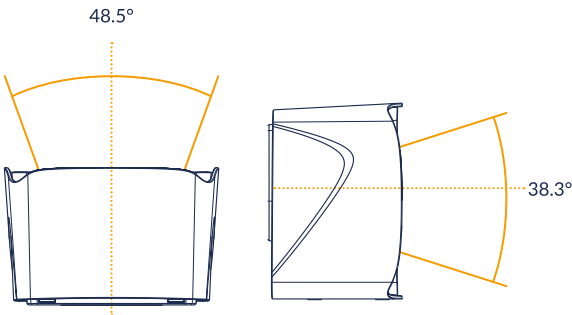

8

Please fix the base on the desktop through screw holes, and then install the FR80 as shown below if necessary.

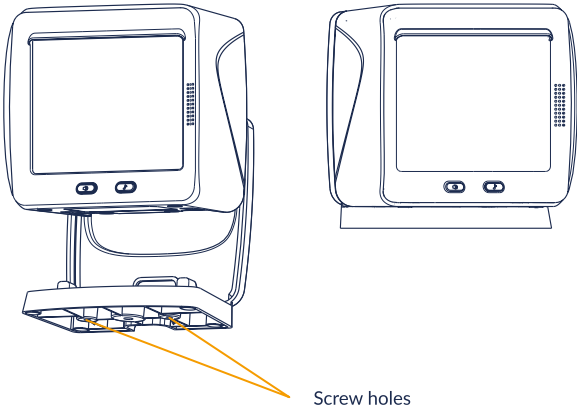

9

1. Enter / Exit setup



Enter setup



** Exit setup

2. Factory defaults



Restore all factory defaults

3. USB interface conversion



USB CDC



** USB-KBW

4. Terminating character suffix



Disable terminating character suffix



** Enable terminating character suffix

10

11

5. Terminating character suffix



Set terminating character suffix



@TSUSET0D

** Set terminating character to CR (0x0D)



@TSUSET0DDA

Set terminating character to CRLF (0x0D, 0x0A)

6. Query product information



@QRYSYS

Query product information

12


Radiofrequency interface requirements

Radio transmitters (part 15)

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.



13



Marking and European Economic Area (EEA)

Bluetooth of use through the EEA has the following restrictions:

- 1 Maximum radiated transmit power of 10mW EIRP in the frequency range 2.400-2.2835GHZ.
- 2 Italy requires a user license for outside usage.

14



Visit our website
newland-id.com